


Front-engine Cockpit Set Fit for 1/10 Touring Car NO.48244

● Symbols used throughout the instruction manual, comprise:

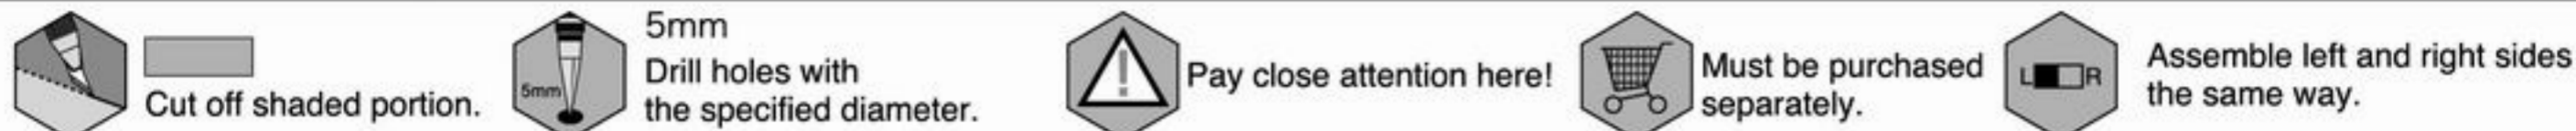

Decoration Body

Non Decoration Body

When making the window transparent:






When loading LED lights

PARTS

PLASTIC PARTS ----- X1
 PC PARTS ----- X4
 DECAL SHEET ----- X1

PARTS BAG
 PLASTIC PARTS ----- X1
 DOUBLE-SIDED TAPE ----- X1
 2X7MM F/H TP SCREW ----- X6


PLASTIC PARTS

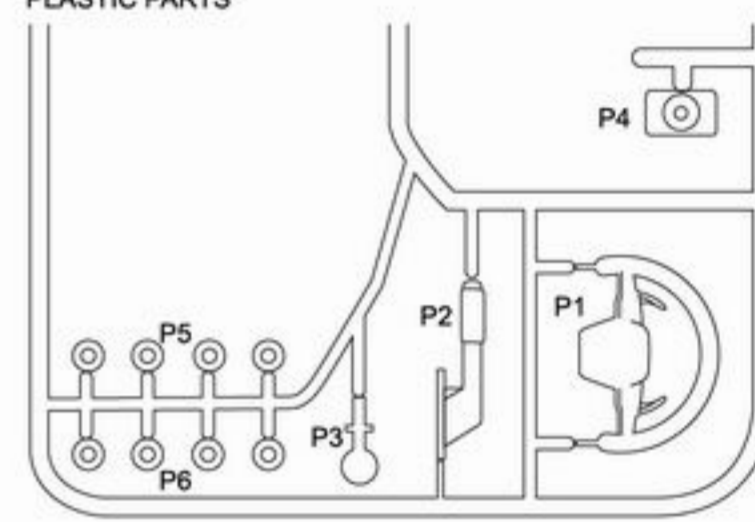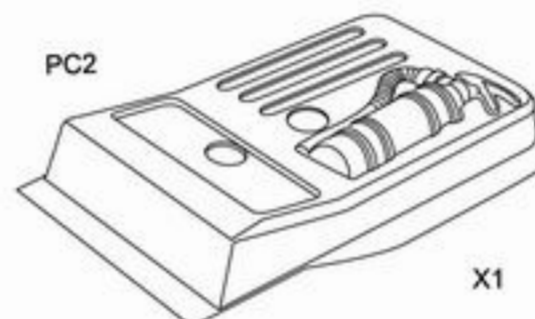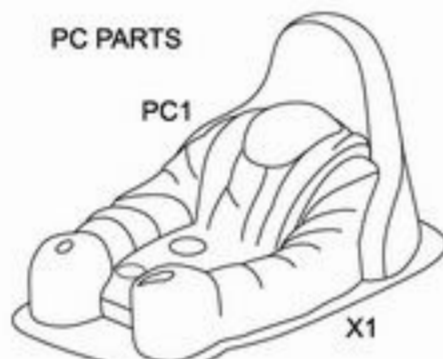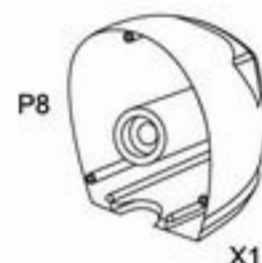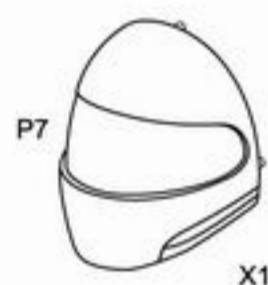


1 Measuring



Before cutting the cockpit, please take a caliper to measure the actual size.

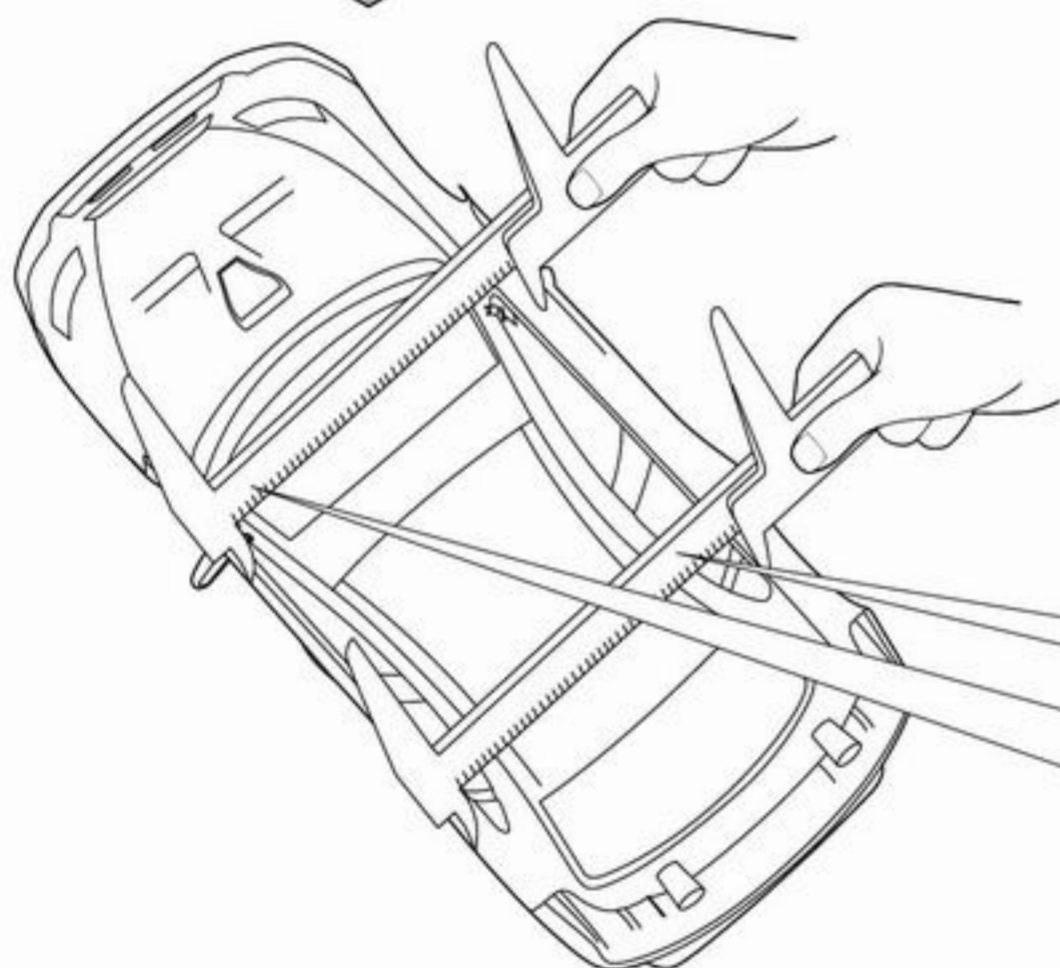



Here just take one body shell as an example, all the installation methods are same.

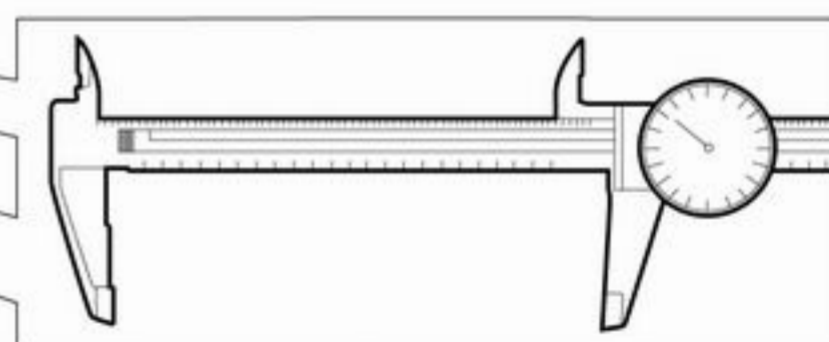


2 Cutting




Cutting the cockpit according to the actual size.

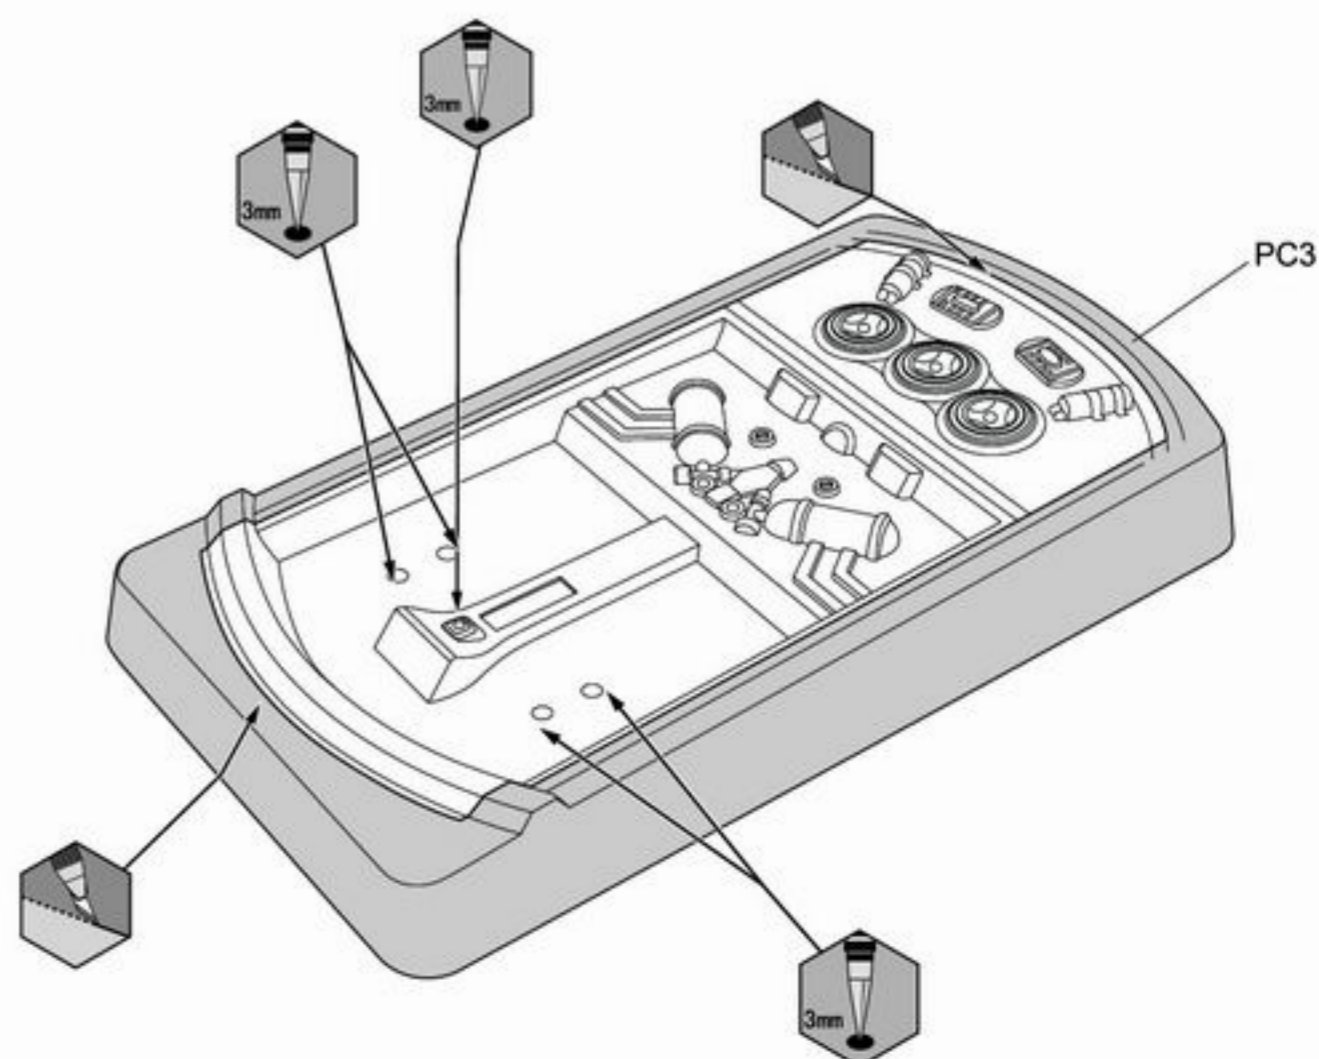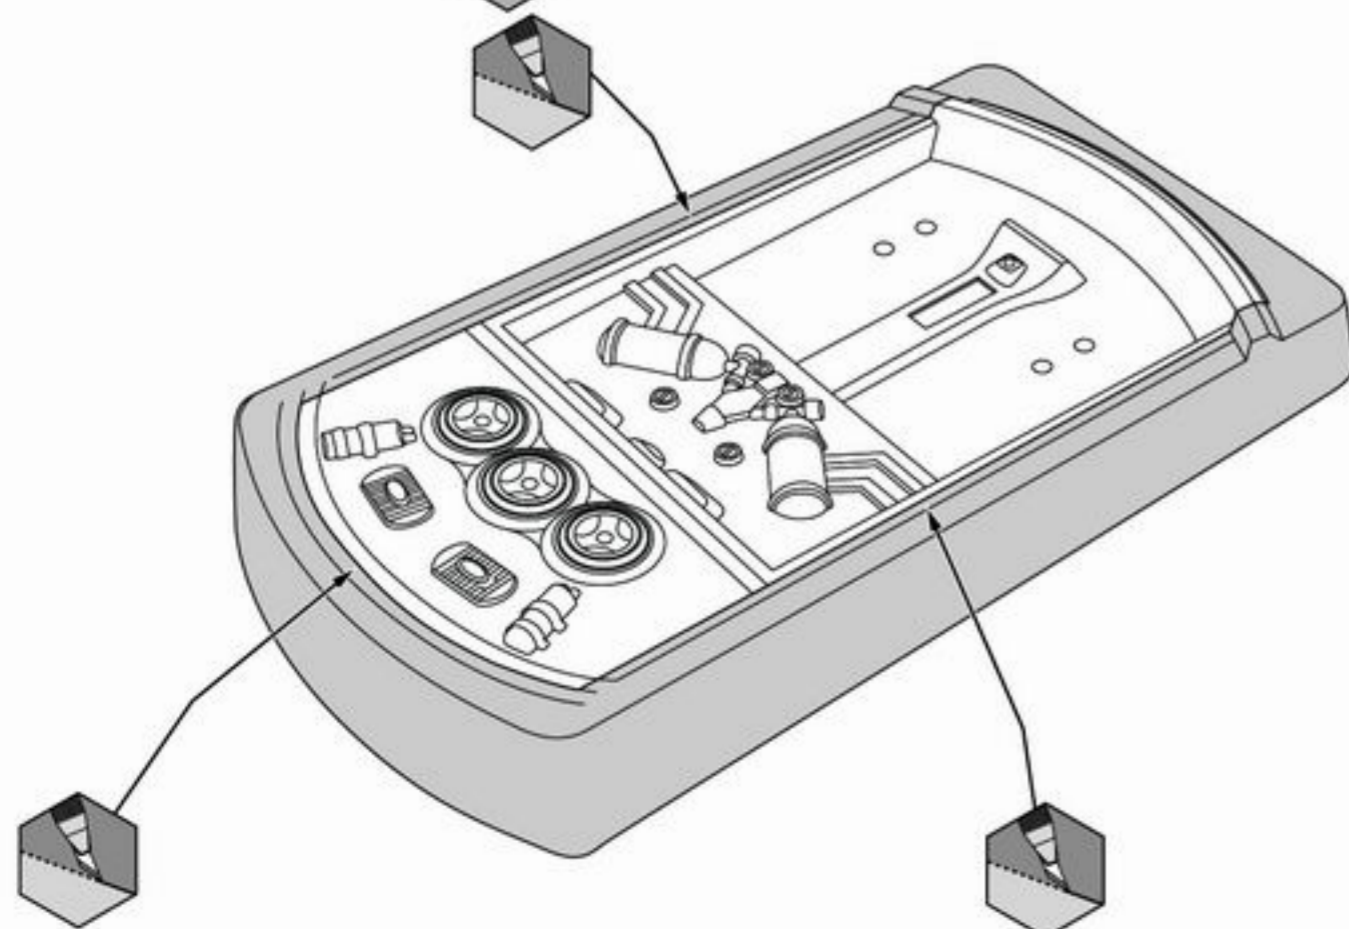

Take left or right dashboard to install.

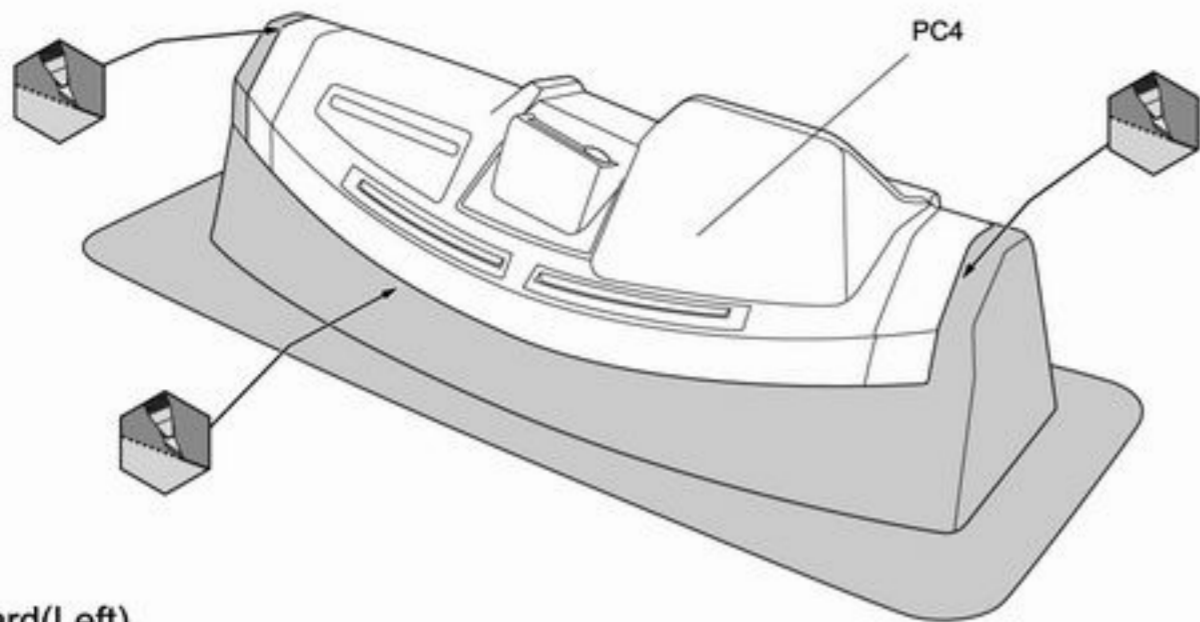

Dashboard(Left)

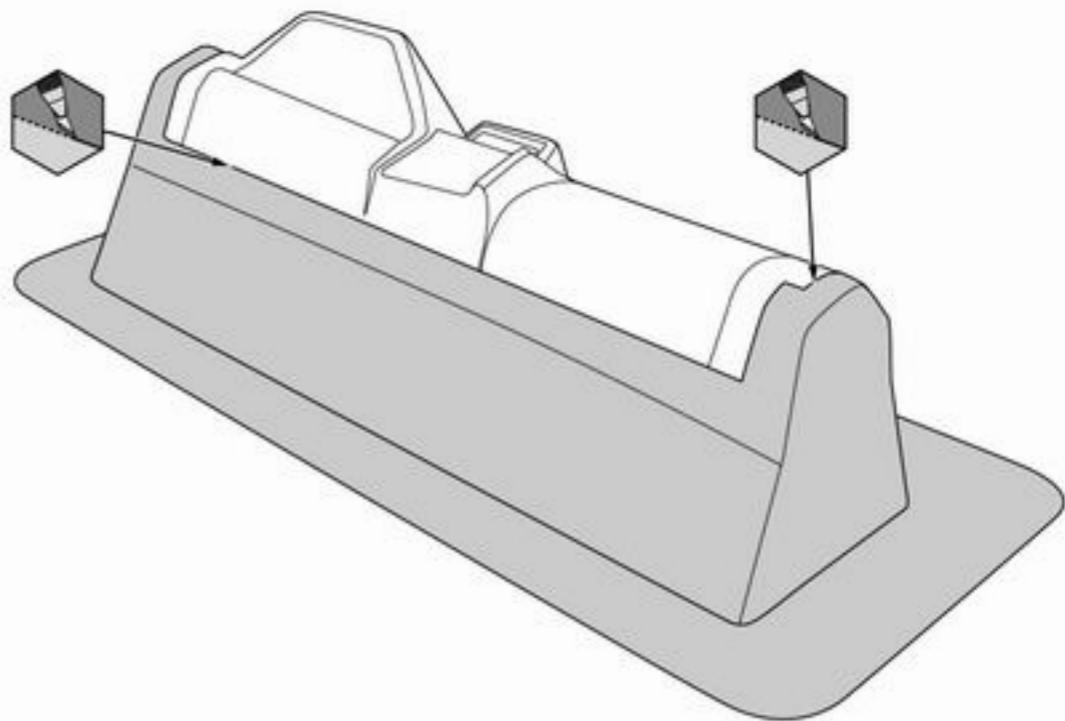


Dashboard(Right)


3 Painting

PC1 PC2 PC3 PC4


1 Before painting, use a neutral detergent to remove any oil residues and dirt.

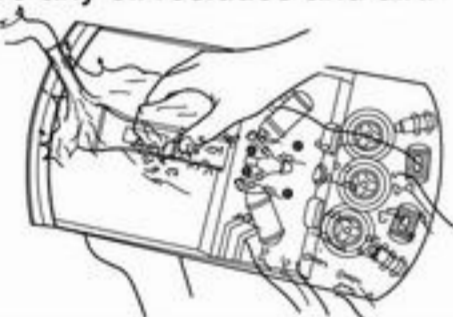

2 Paint the cockpit from the inside.

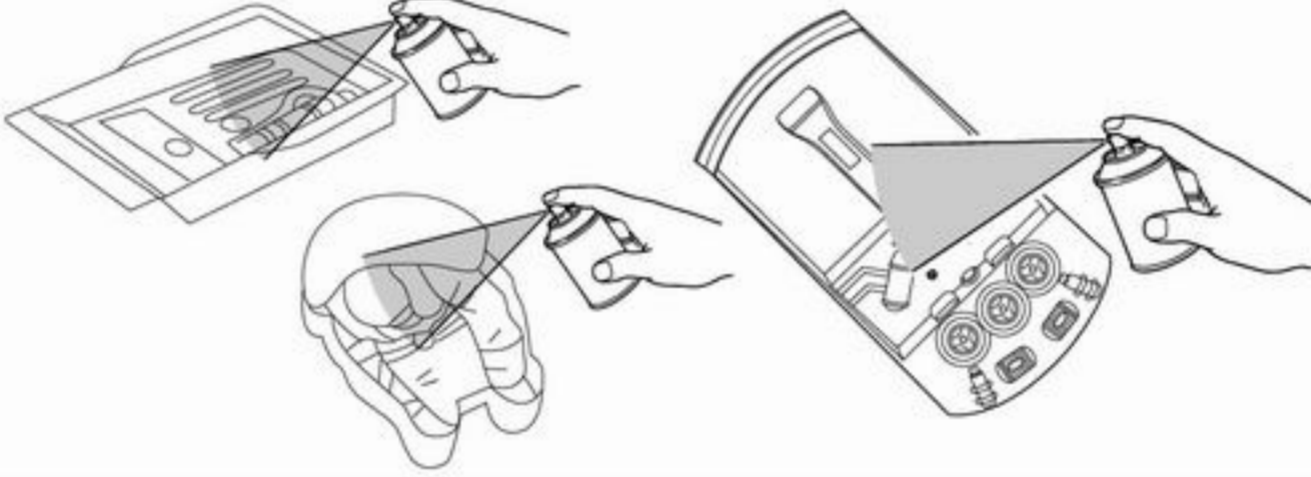

3 After painting, remove the protective film from the cockpit.

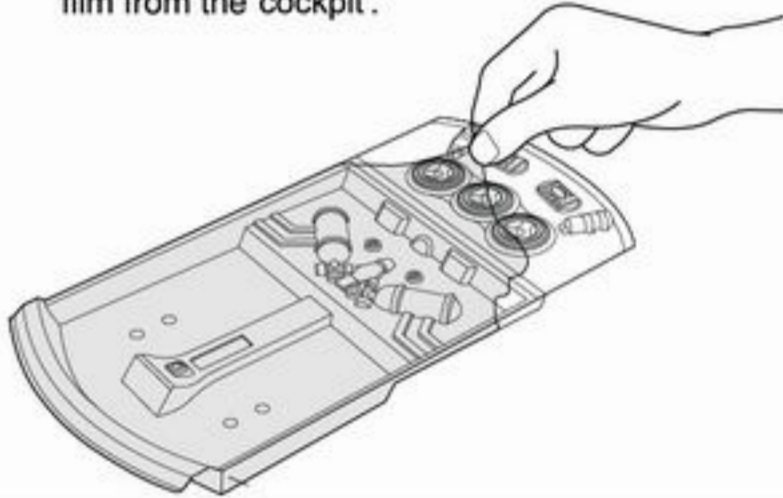

4 Plastic Parts



1 Before painting, use a neutral detergent to remove any oil residues and dirt.



2 Paint the helmet from the outside using spray colors.



5 Decal

► The decal numbers between brackets are only for the opposite side.







Anti-role Bar of Cockpit

NO.48503

PARTS

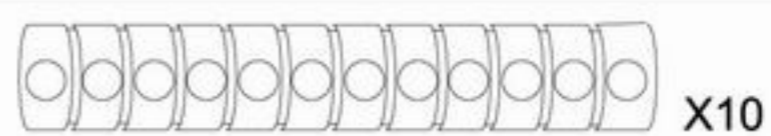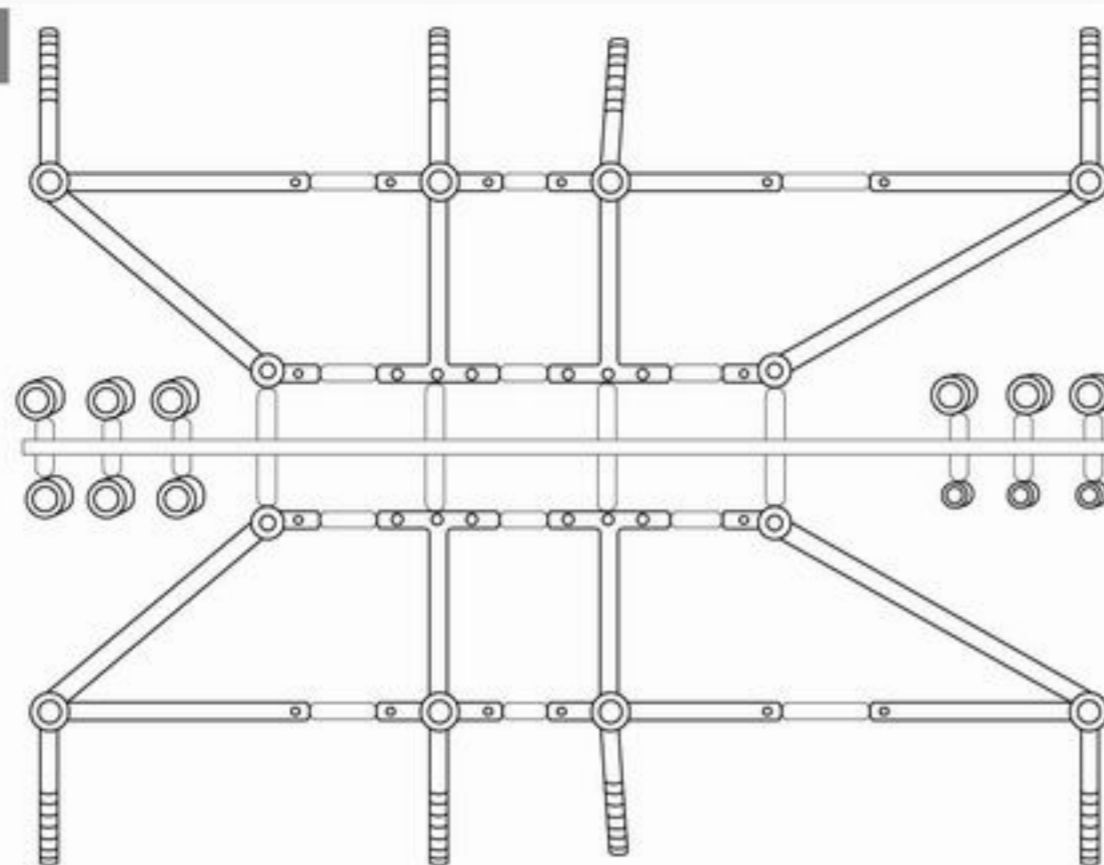

X10



X3




X2



X2



X2




2X7MM F/H TP SCREW

X36





1 Measuring





Please take a caliper to measure the window actual distance to adjust the anti-role bar.

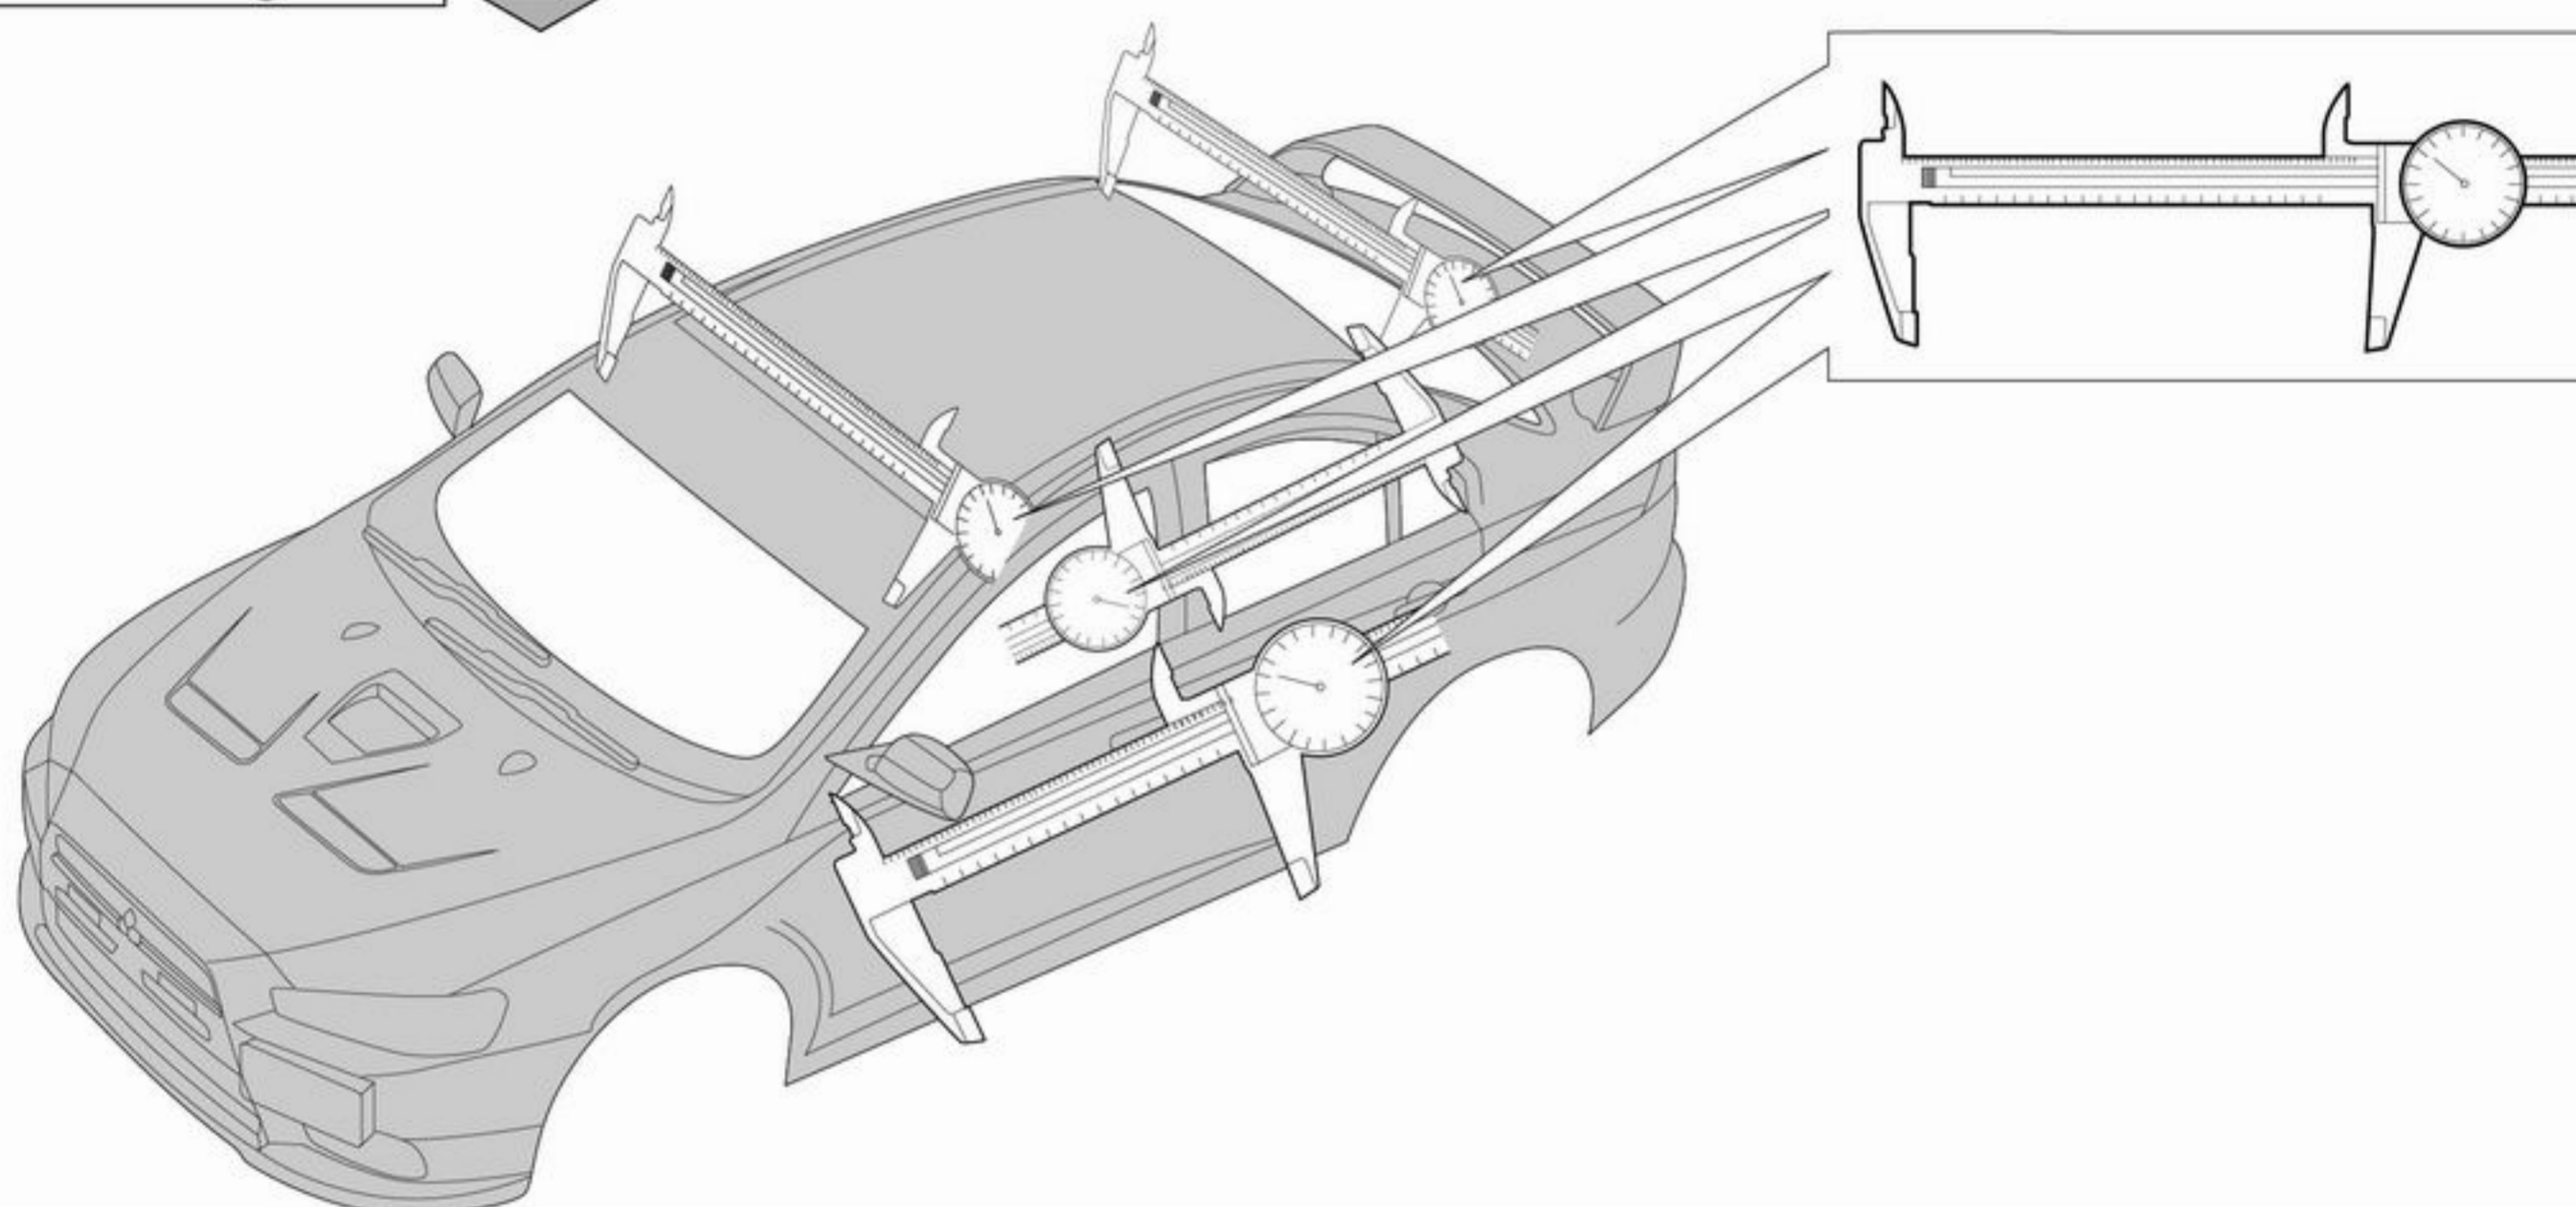

2 Assembling

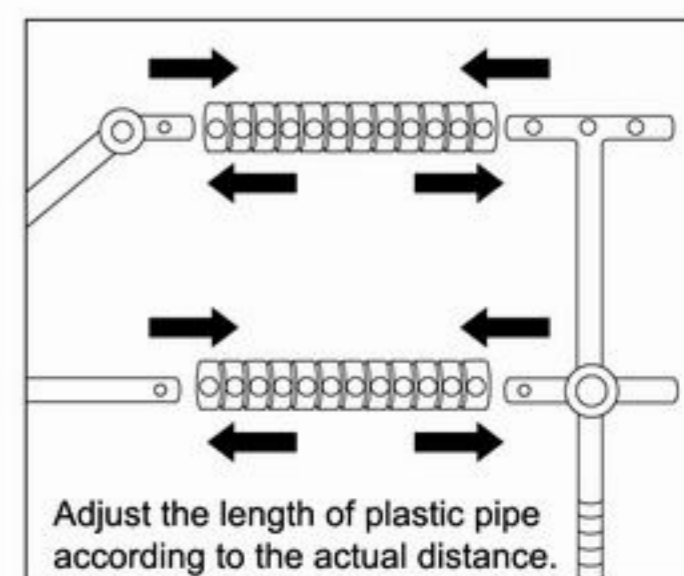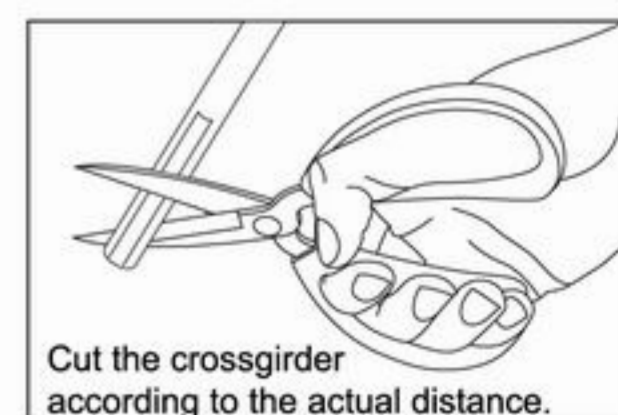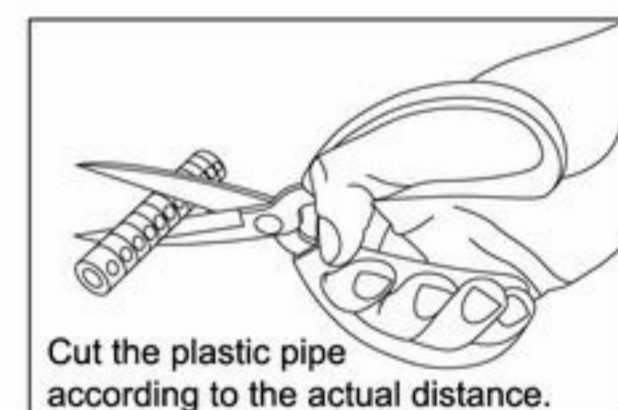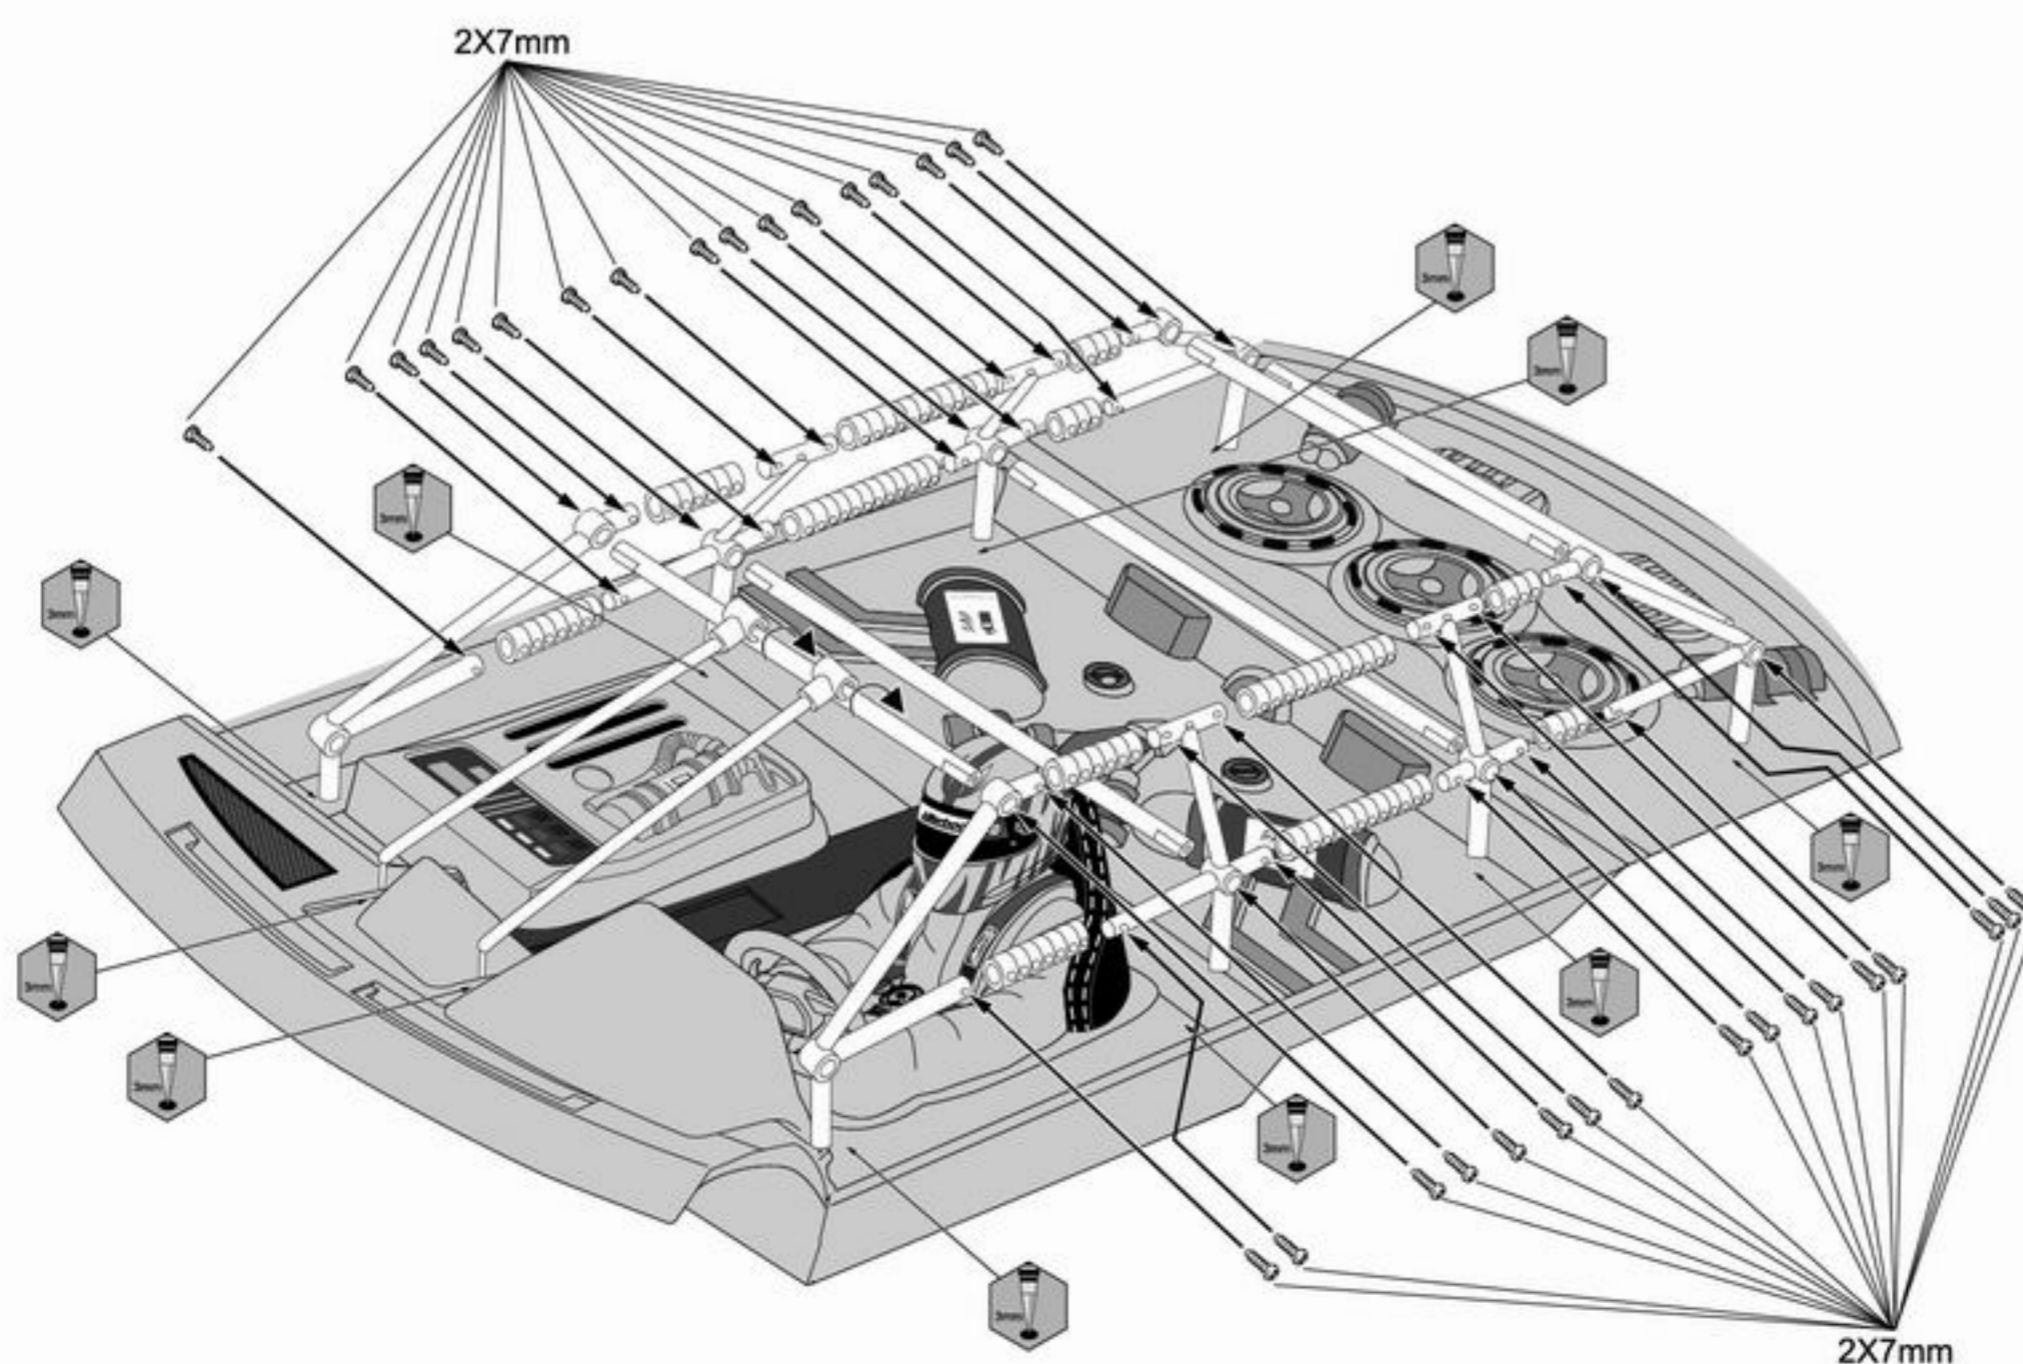

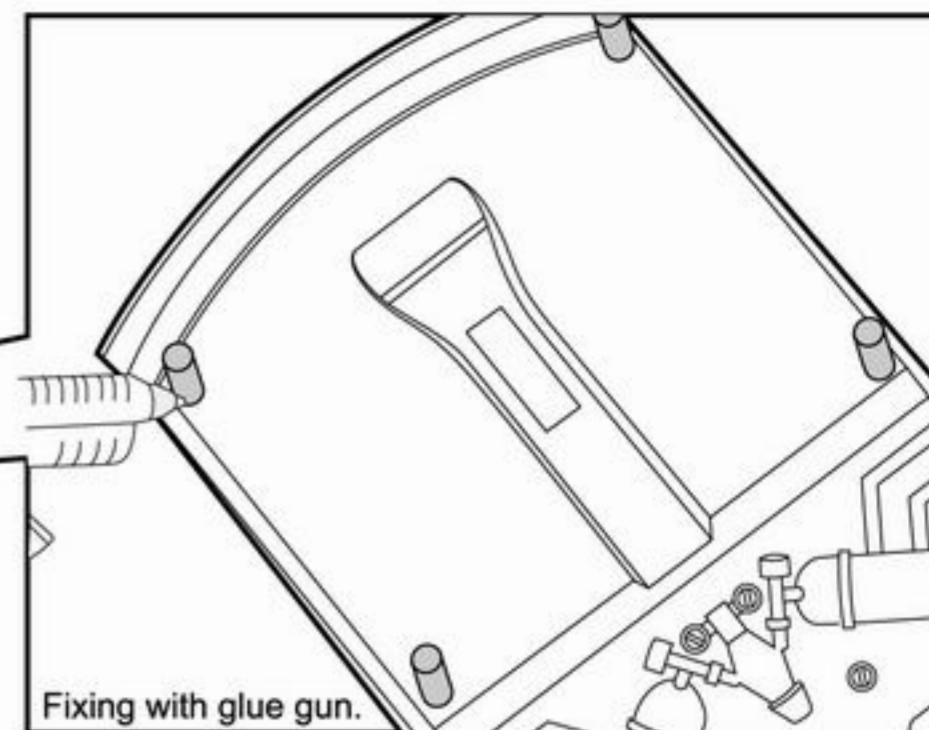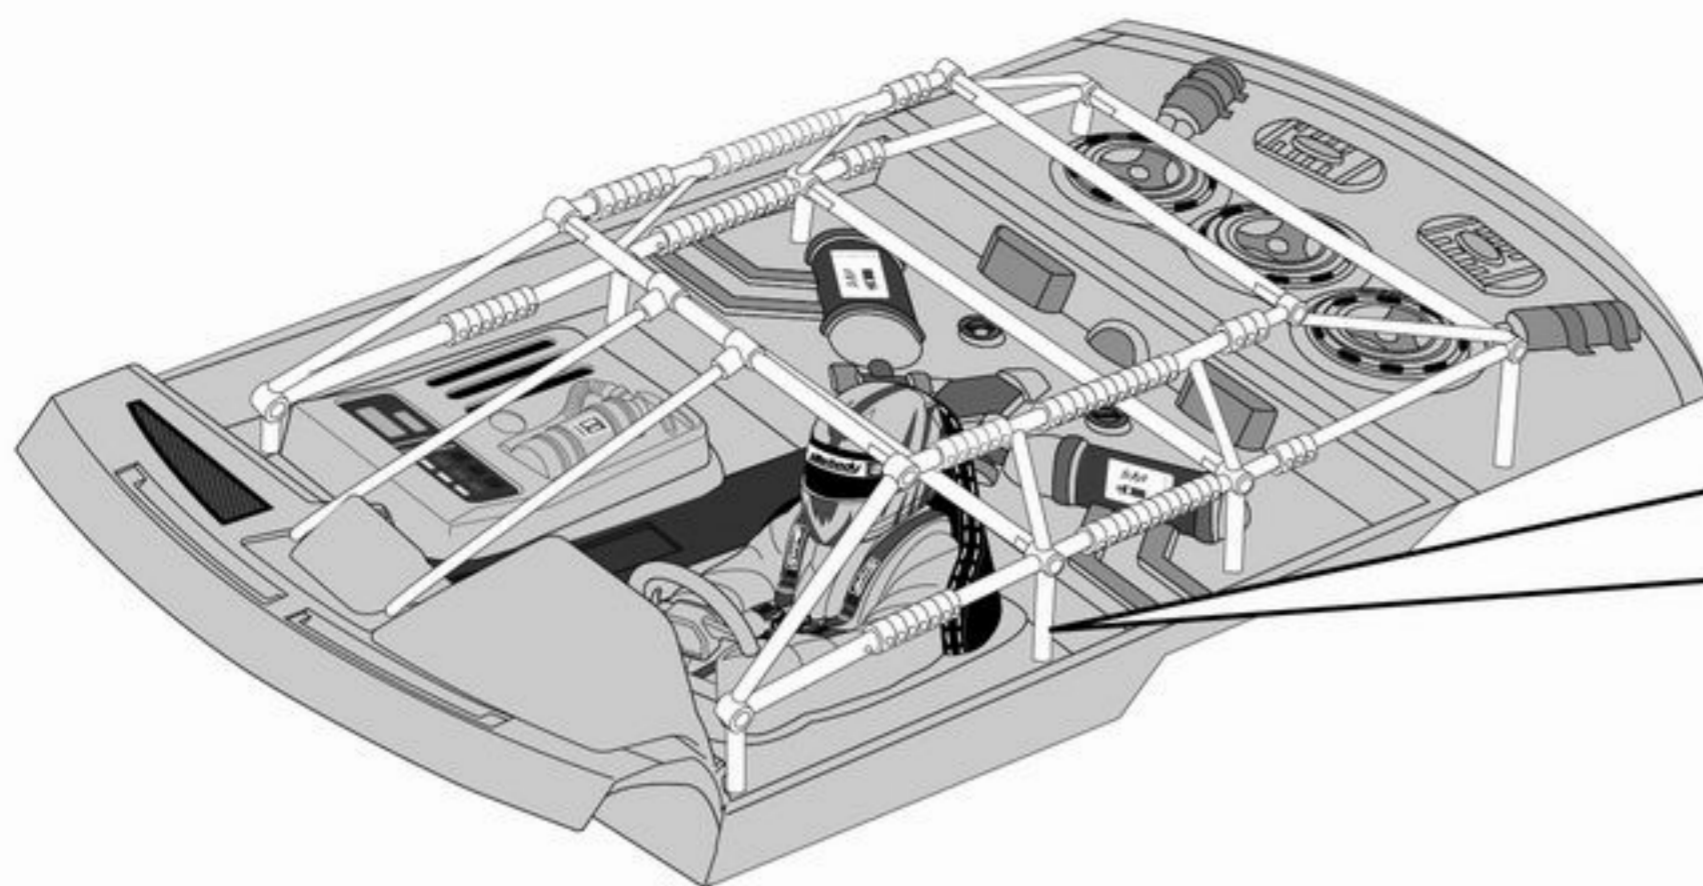


Fire-extinguisher

NO.48052

1 Plastic Parts


PLASTIC PARTS

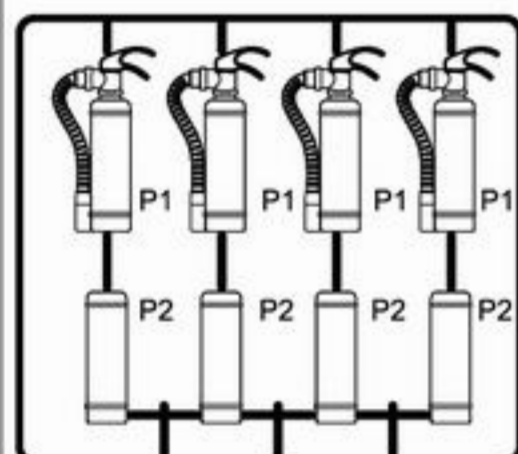



DECAL




METAL

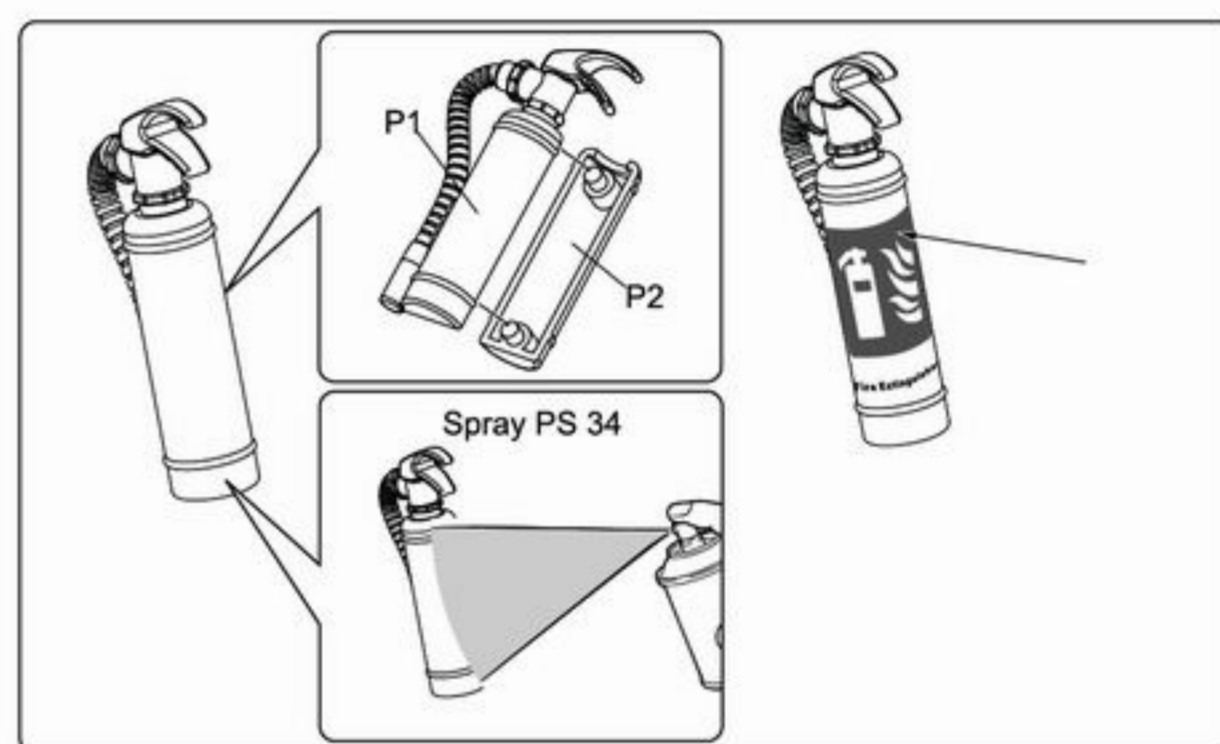

2 Assembling

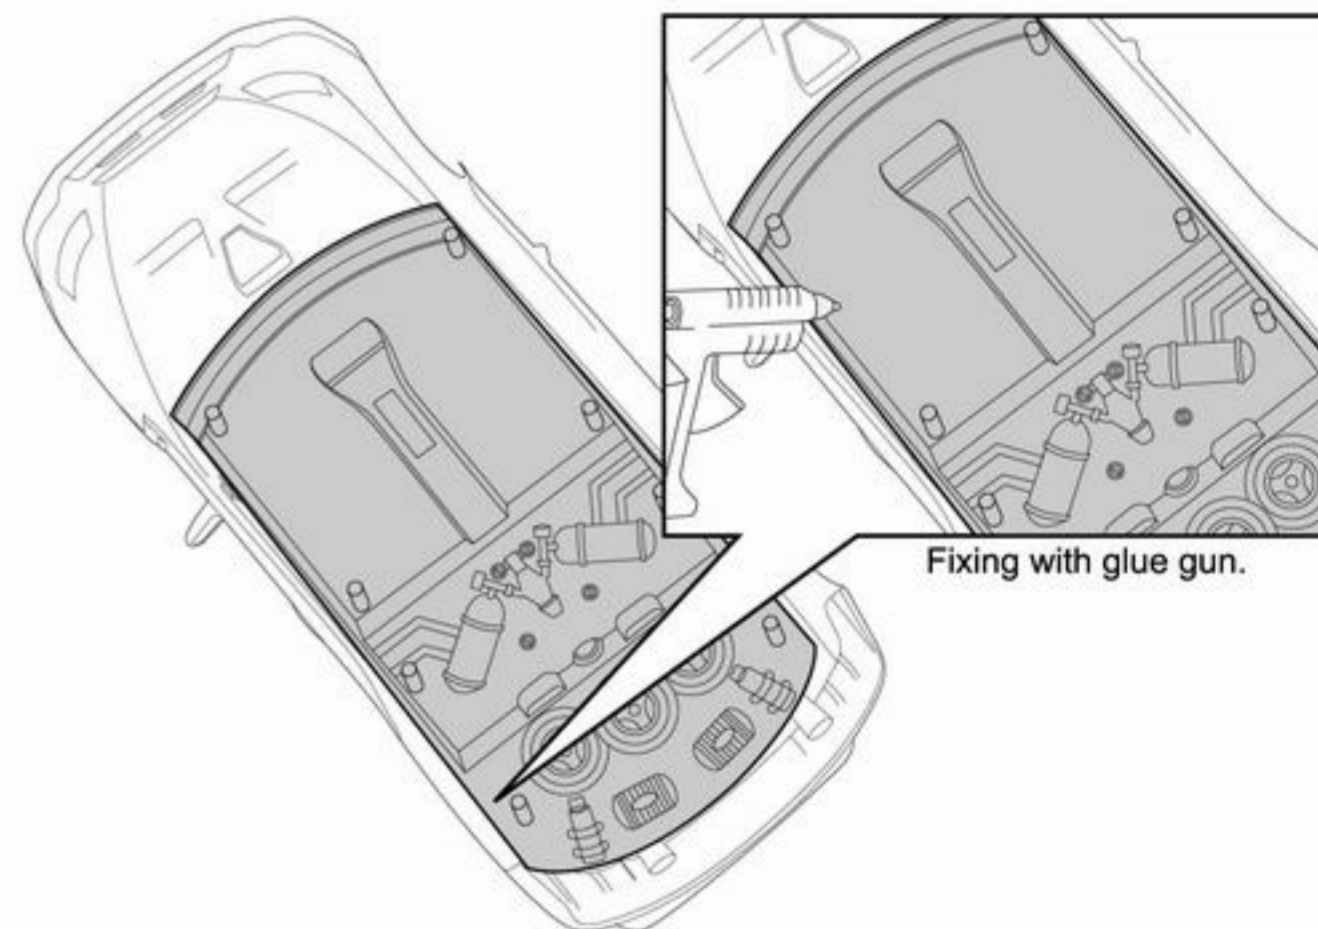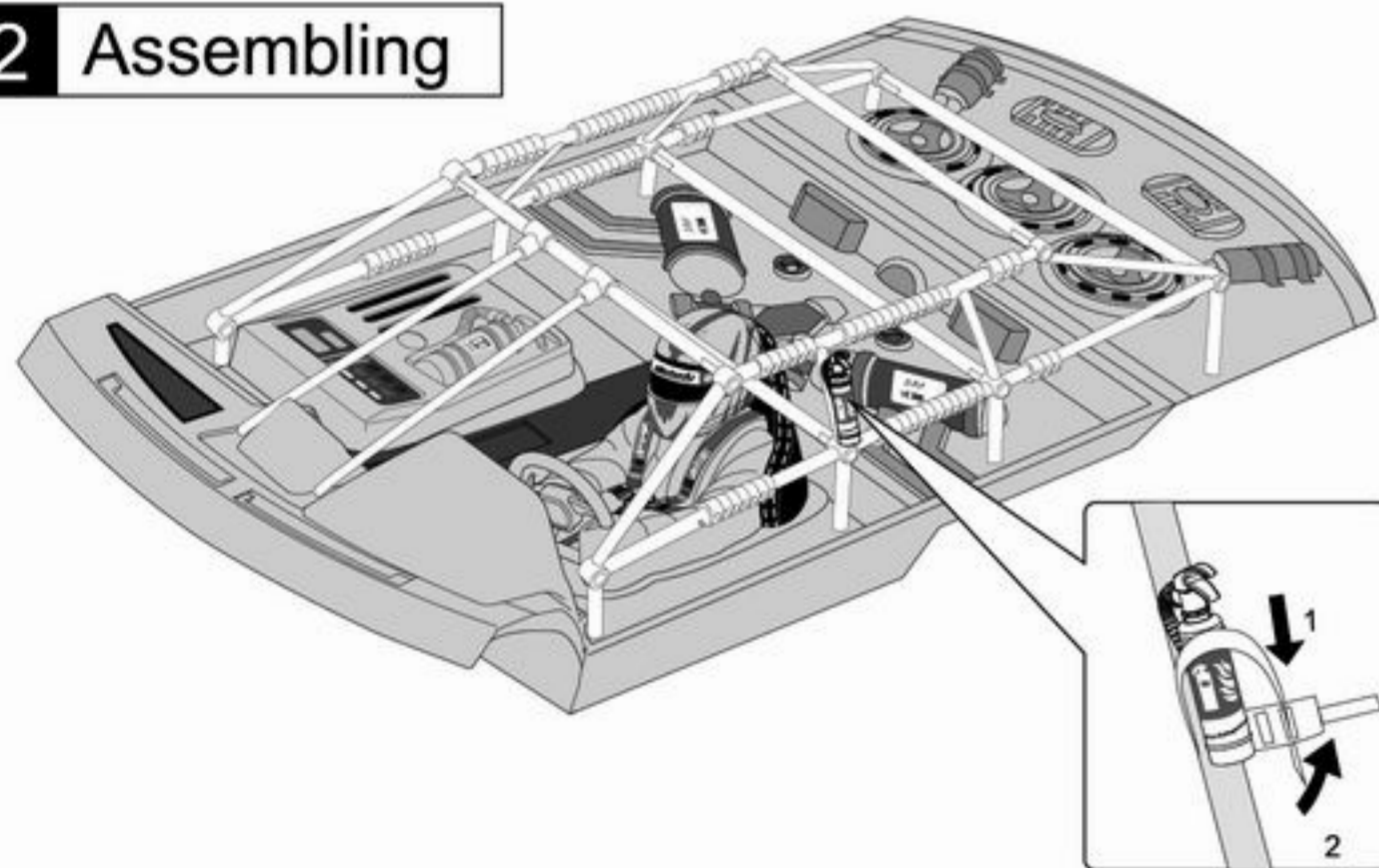

3 Finished

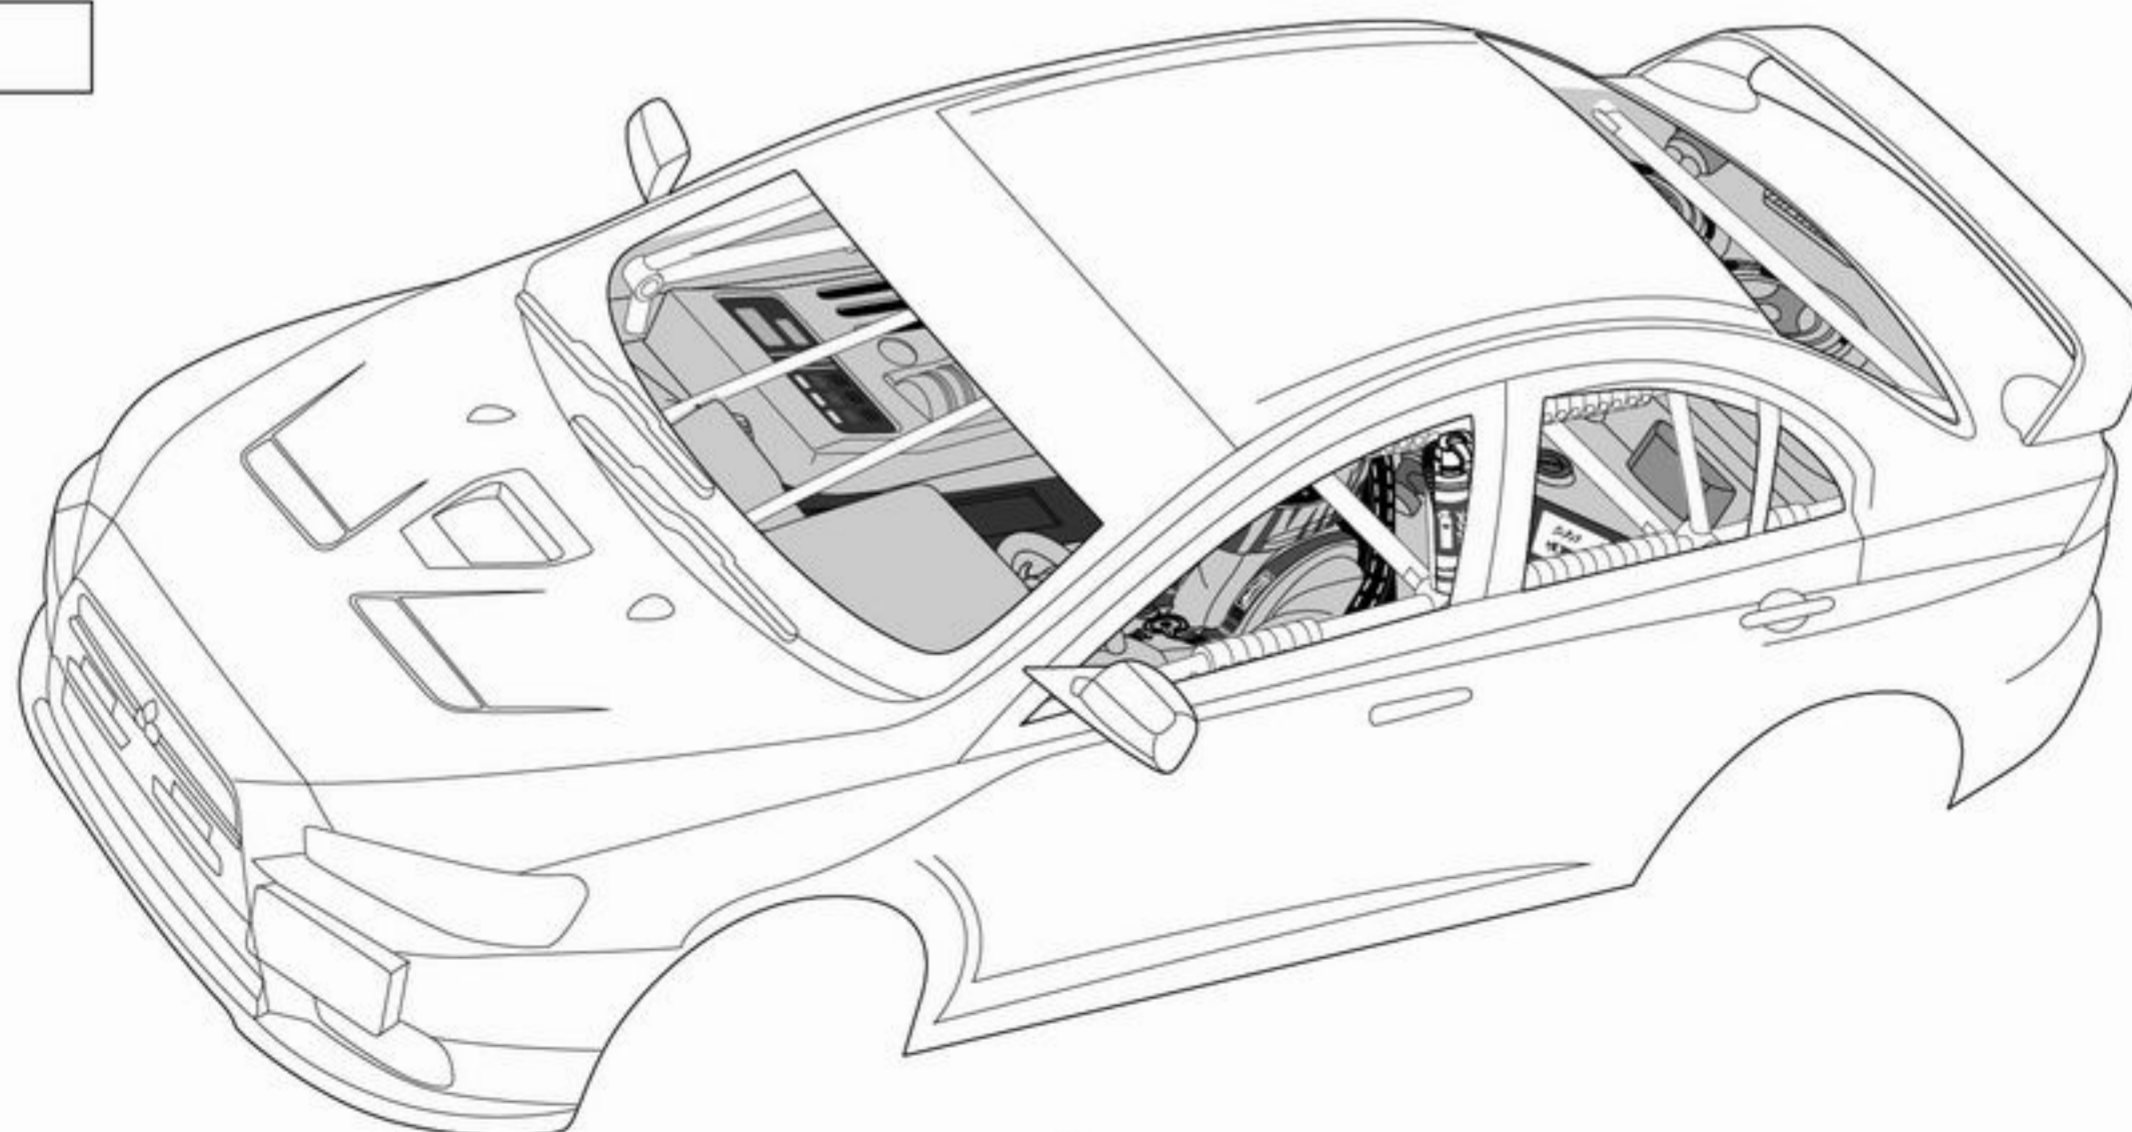

Option Parts & Accessory

No.	Part Names
48243	Rear-engine Cockpit Set 1/10 Touring Car
48499	Rear-engine Cockpit Set (Left) Finished Type 1/10 Touring Car
48500	Rear-engine Cockpit Set (Right) Finished Type 1/10 Touring Car
48244	Front-engine Cockpit Set 1/10 Touring Car
48501	Front-engine Cockpit Set (Left) Finished Type 1/10 Touring Car
48502	Front-engine Cockpit Set (Right) Finished Type 1/10 Touring Car
48513	Cockpit Set (Left) Finished Type 1/10 Truck
48520	Cockpit Set (Right) Finished Type 1/10 Truck
48224	Cockpit Set 1/10 Truck
48503	Anti-role Bar of Cockpit 1/10 Touring Car
48245	Navigator Set 1/10 Scale
48052	Fire-extinguisher Fit for any R/C car

WWW.KILLERBODYRC.COM