


PARTS

PLASTIC PARTS

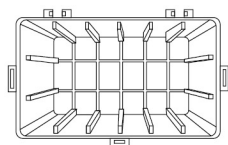

P1  X2

P2 

P3 





SPONGE CUSHION



EVA CUSHION


ROLLER BAR ——— X3

1 Painting

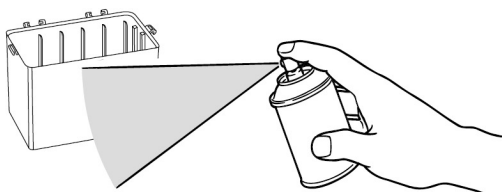


2 Assembling

Double-sided tape

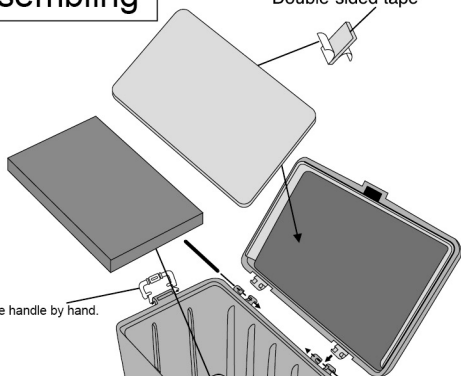

Fixing the handle by hand.

Fixing the lock catch by hand.



P2

P3

Roller bar pass through the hole.

Fixing the handle by hand.

Roller bar pass through the hole.

3 Finished

