

Rear-engine Cockpit Set Finished Type Fit for 1/10 Touring Car NO.48499 (Left) NO.48500 (Right)



Cockpit Set

Decoration Body

When making the window transparent:


Non Decoration Body

When loading LED lights

PARTS



NO.48499

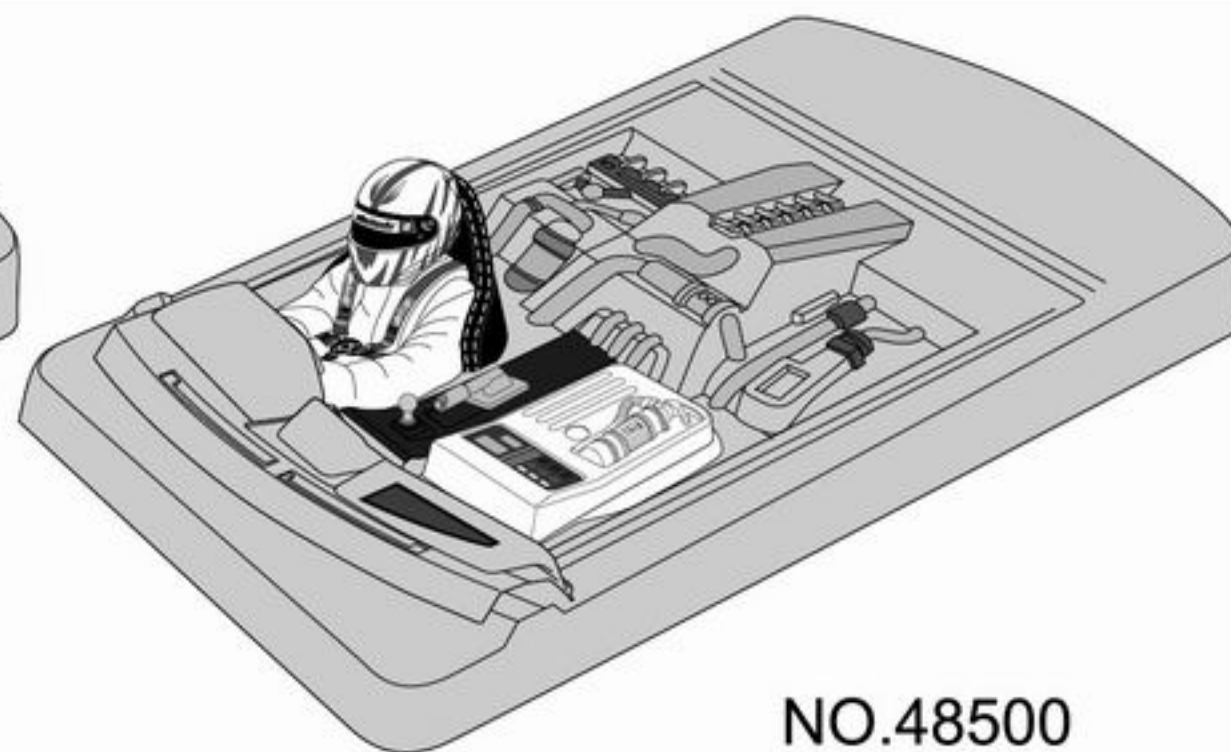


NO.48500


1 Measuring



Before cutting the cockpit, please take a caliper to measure the actual size.

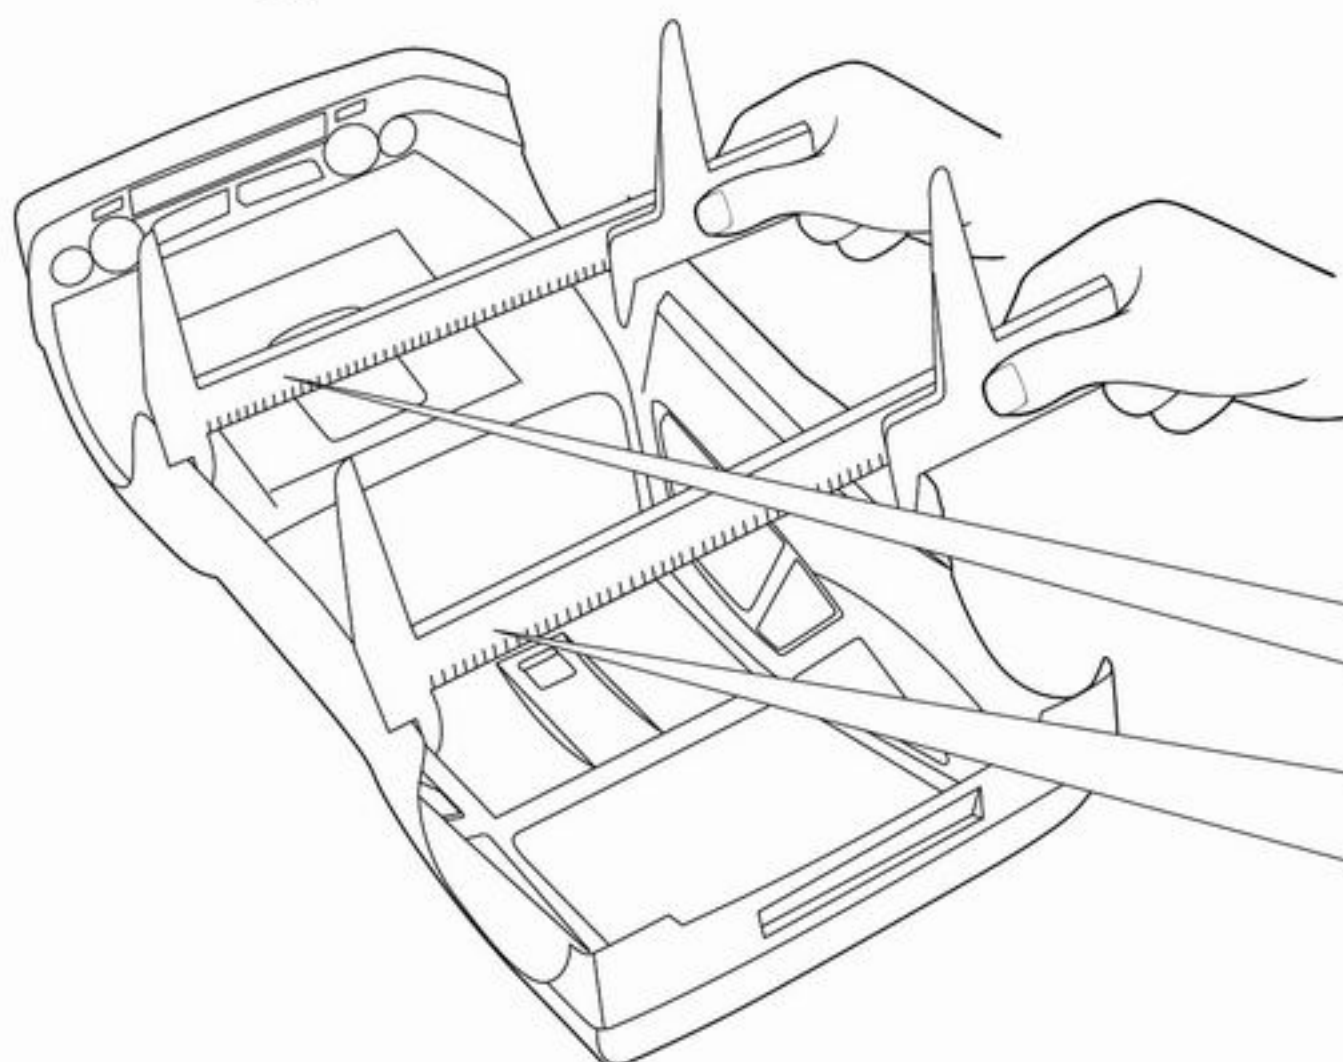


Here just take one body shell as an example,
all the installation methods are same.

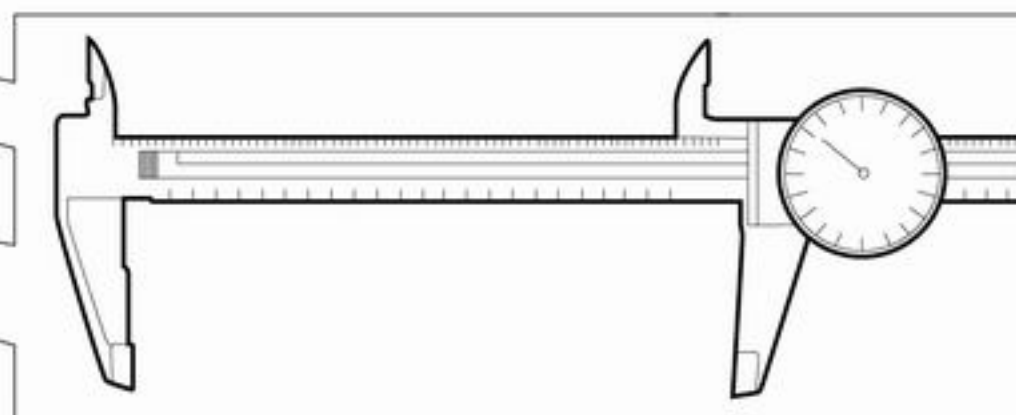

2 Cutting




Cutting the cockpit according to the actual size.

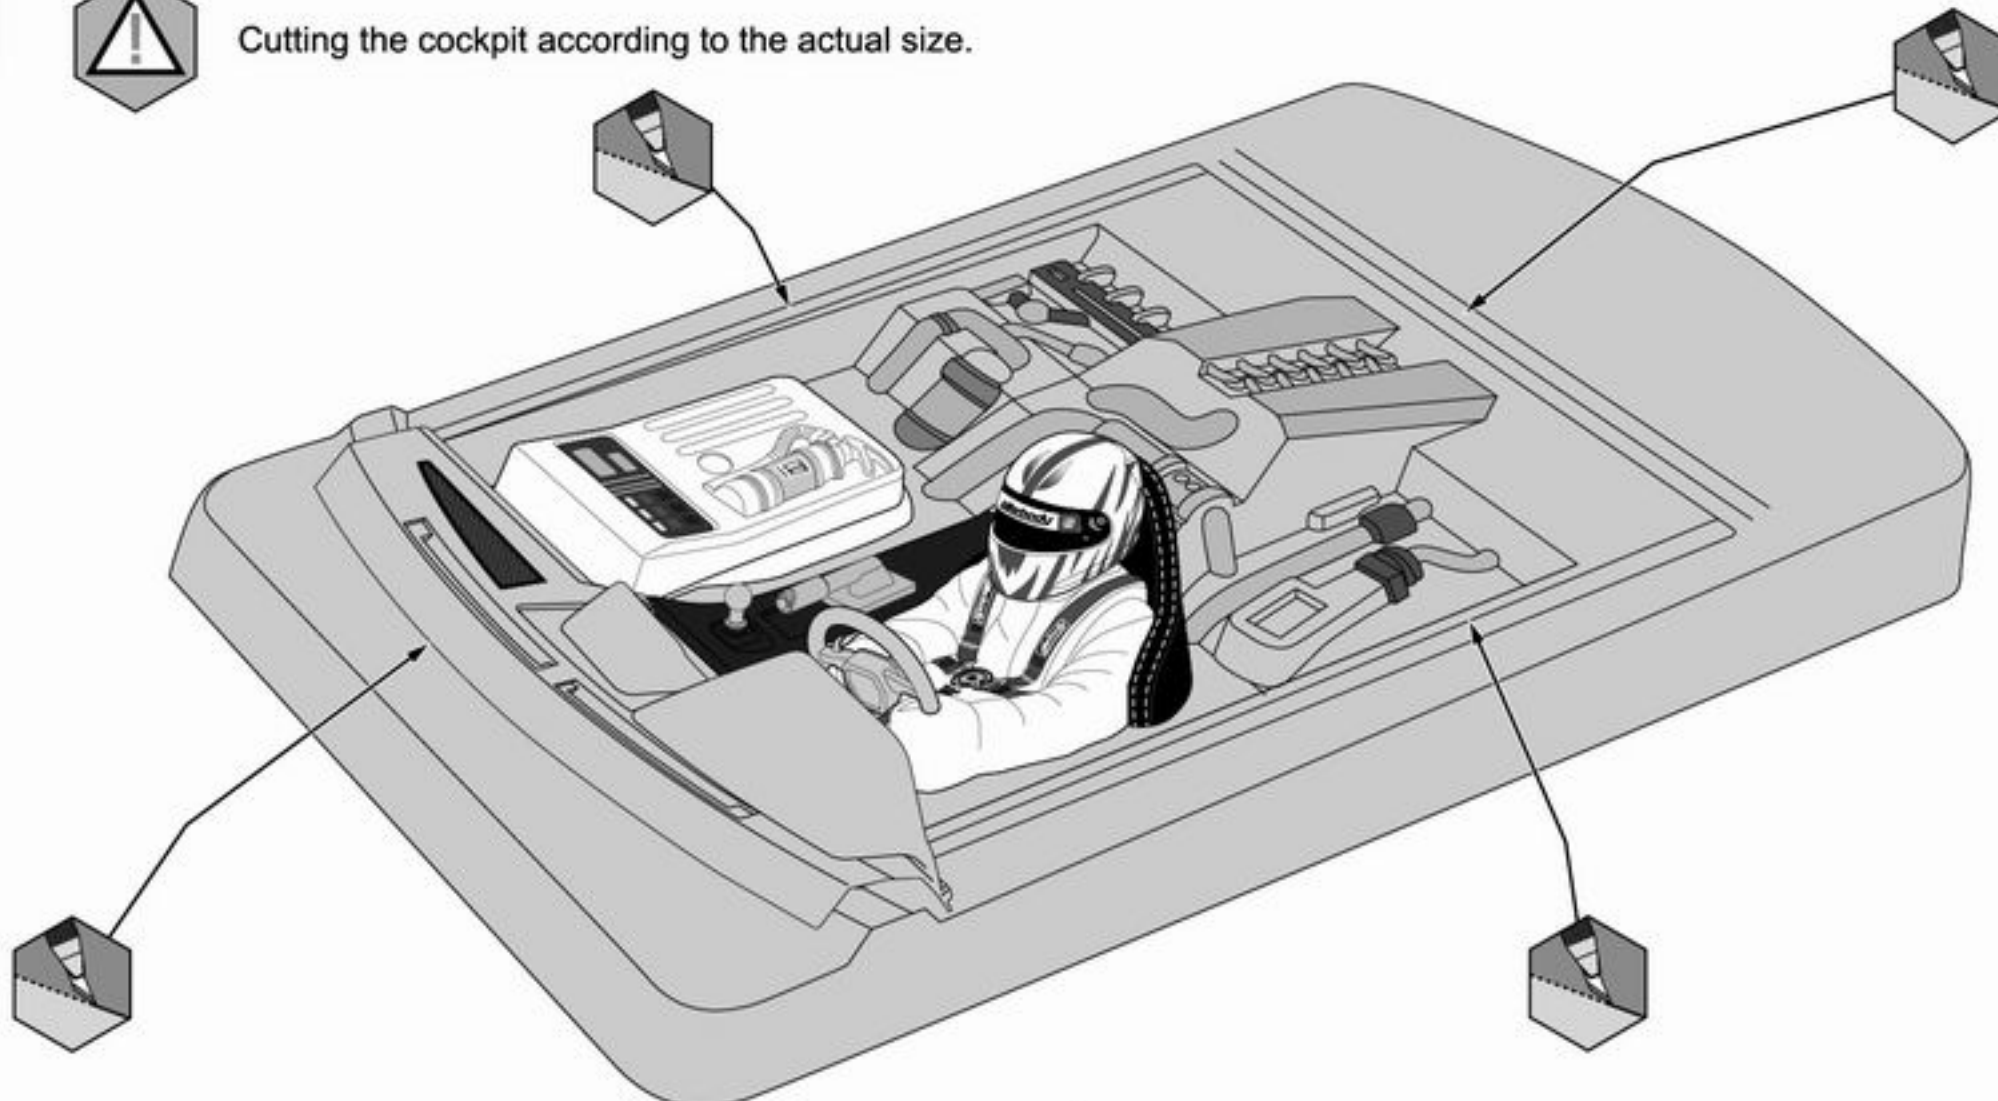



PARTS

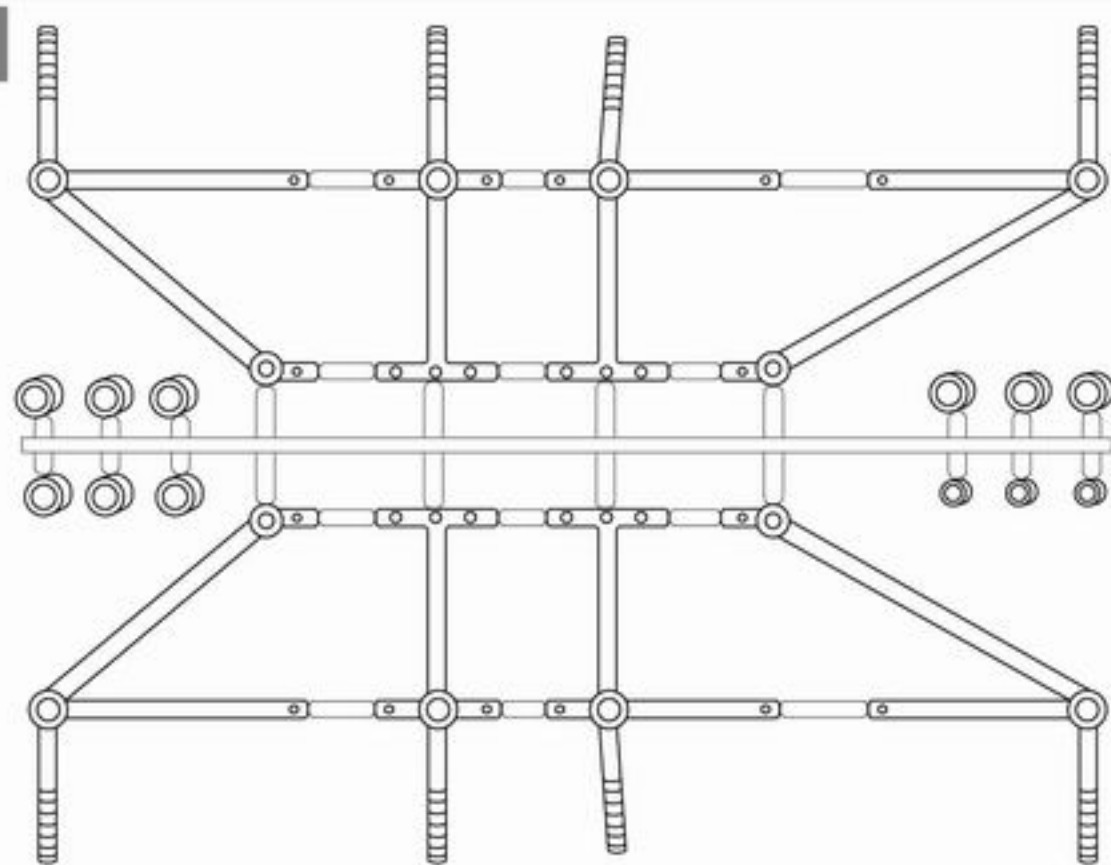

X10



X3



X2



X2




X2

2X7MM F/H TP SCREW X36


1 Measuring




Please take a caliper to measure the window actual distance to adjust the anti-role bar.

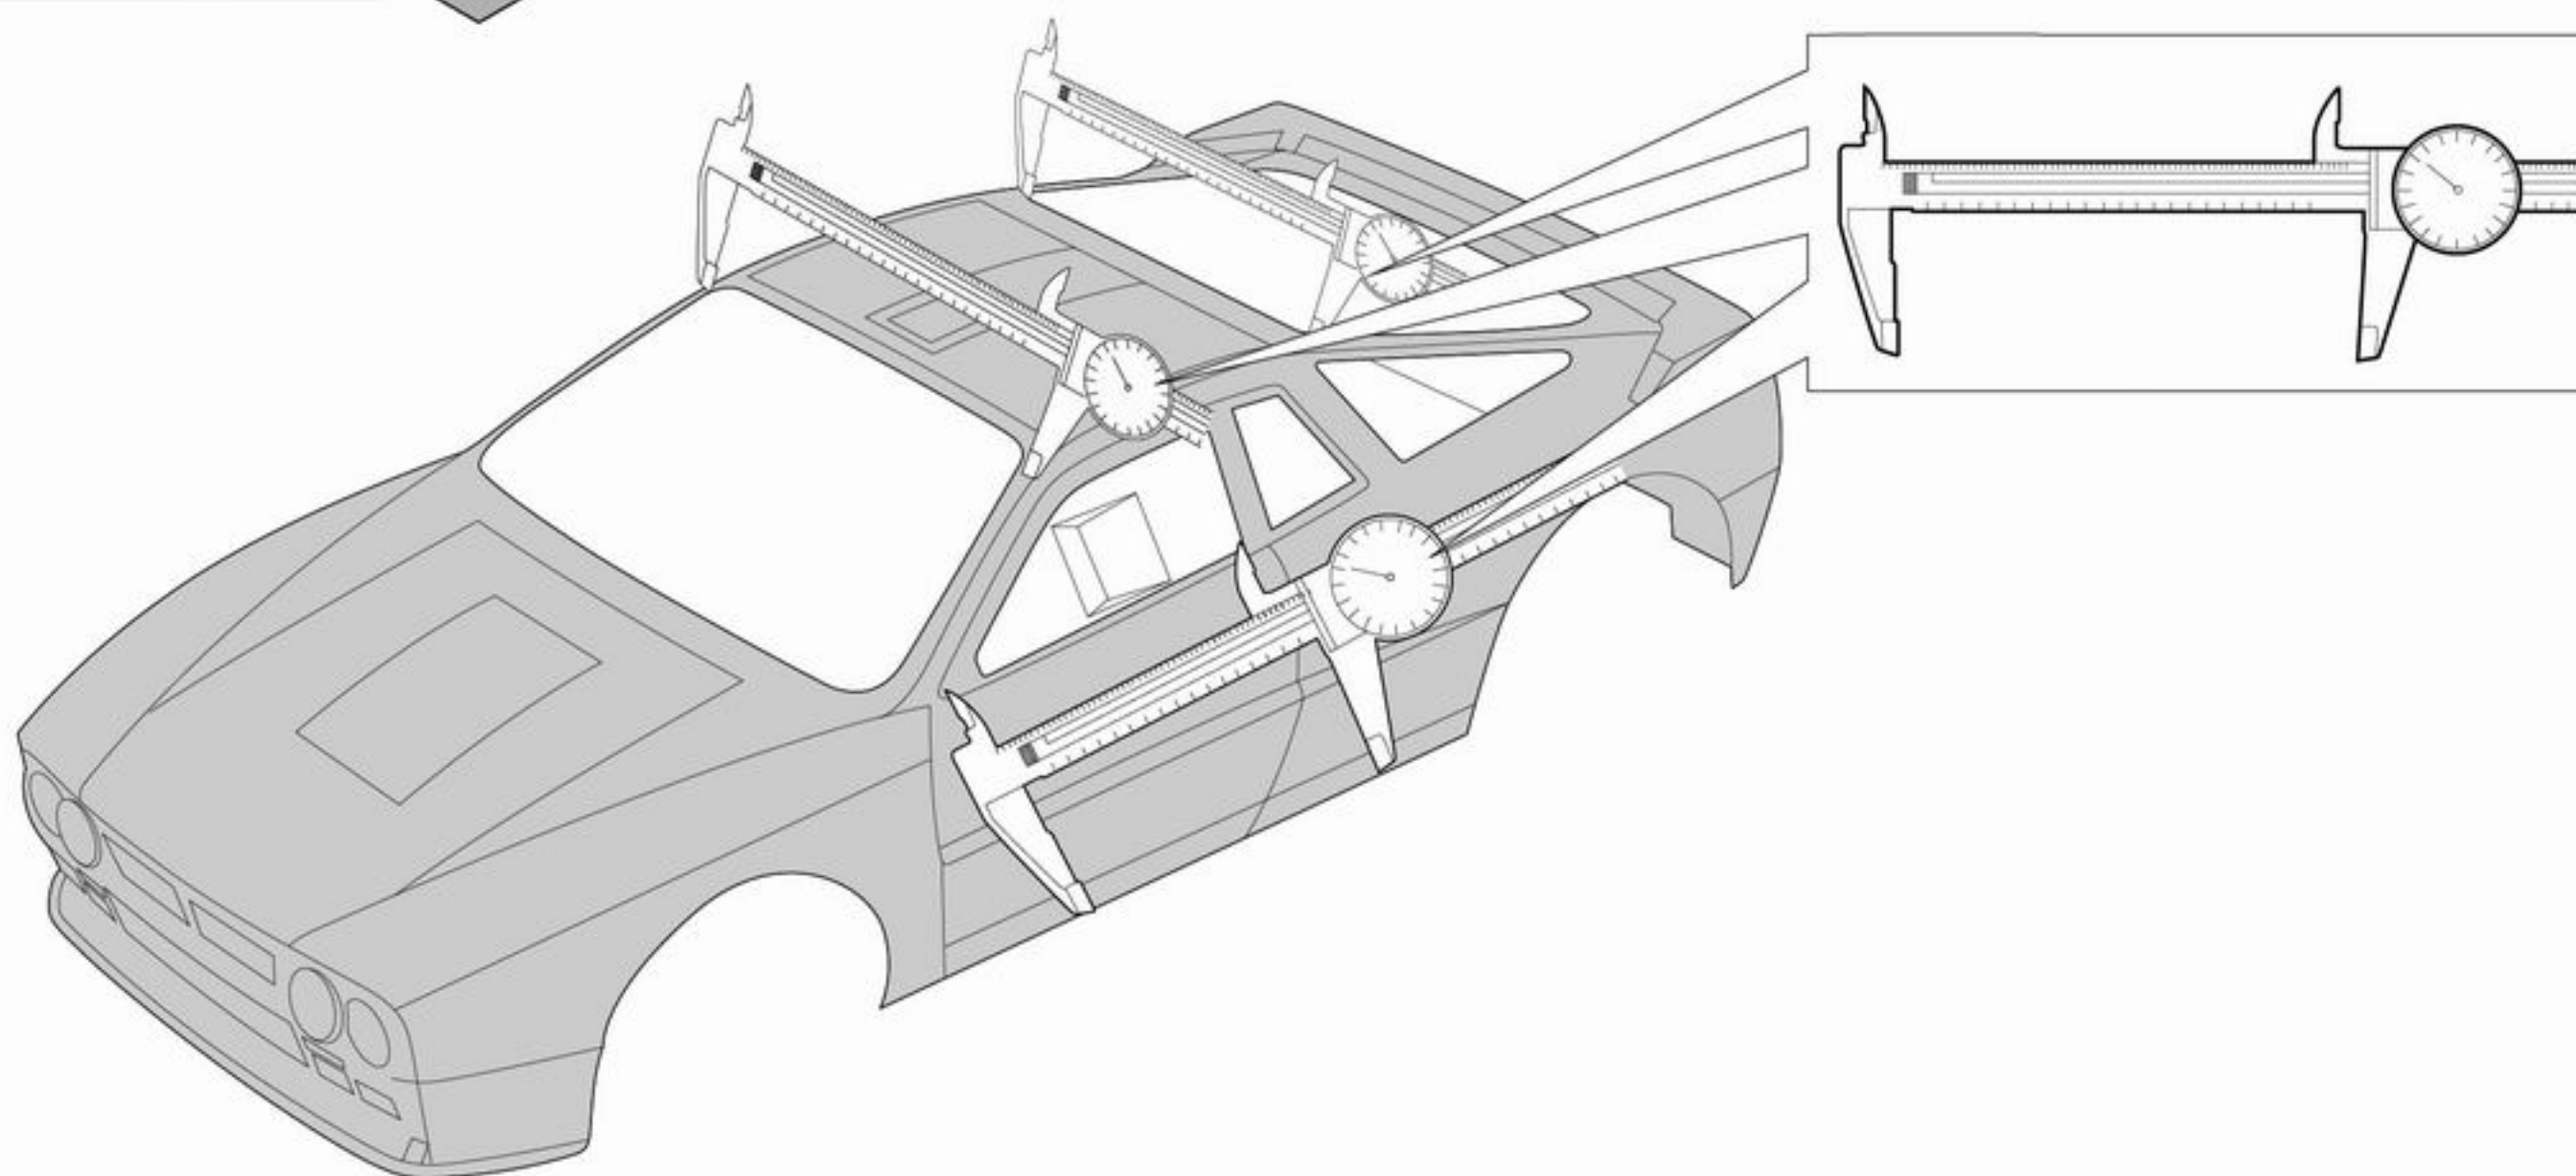


2 Assembling

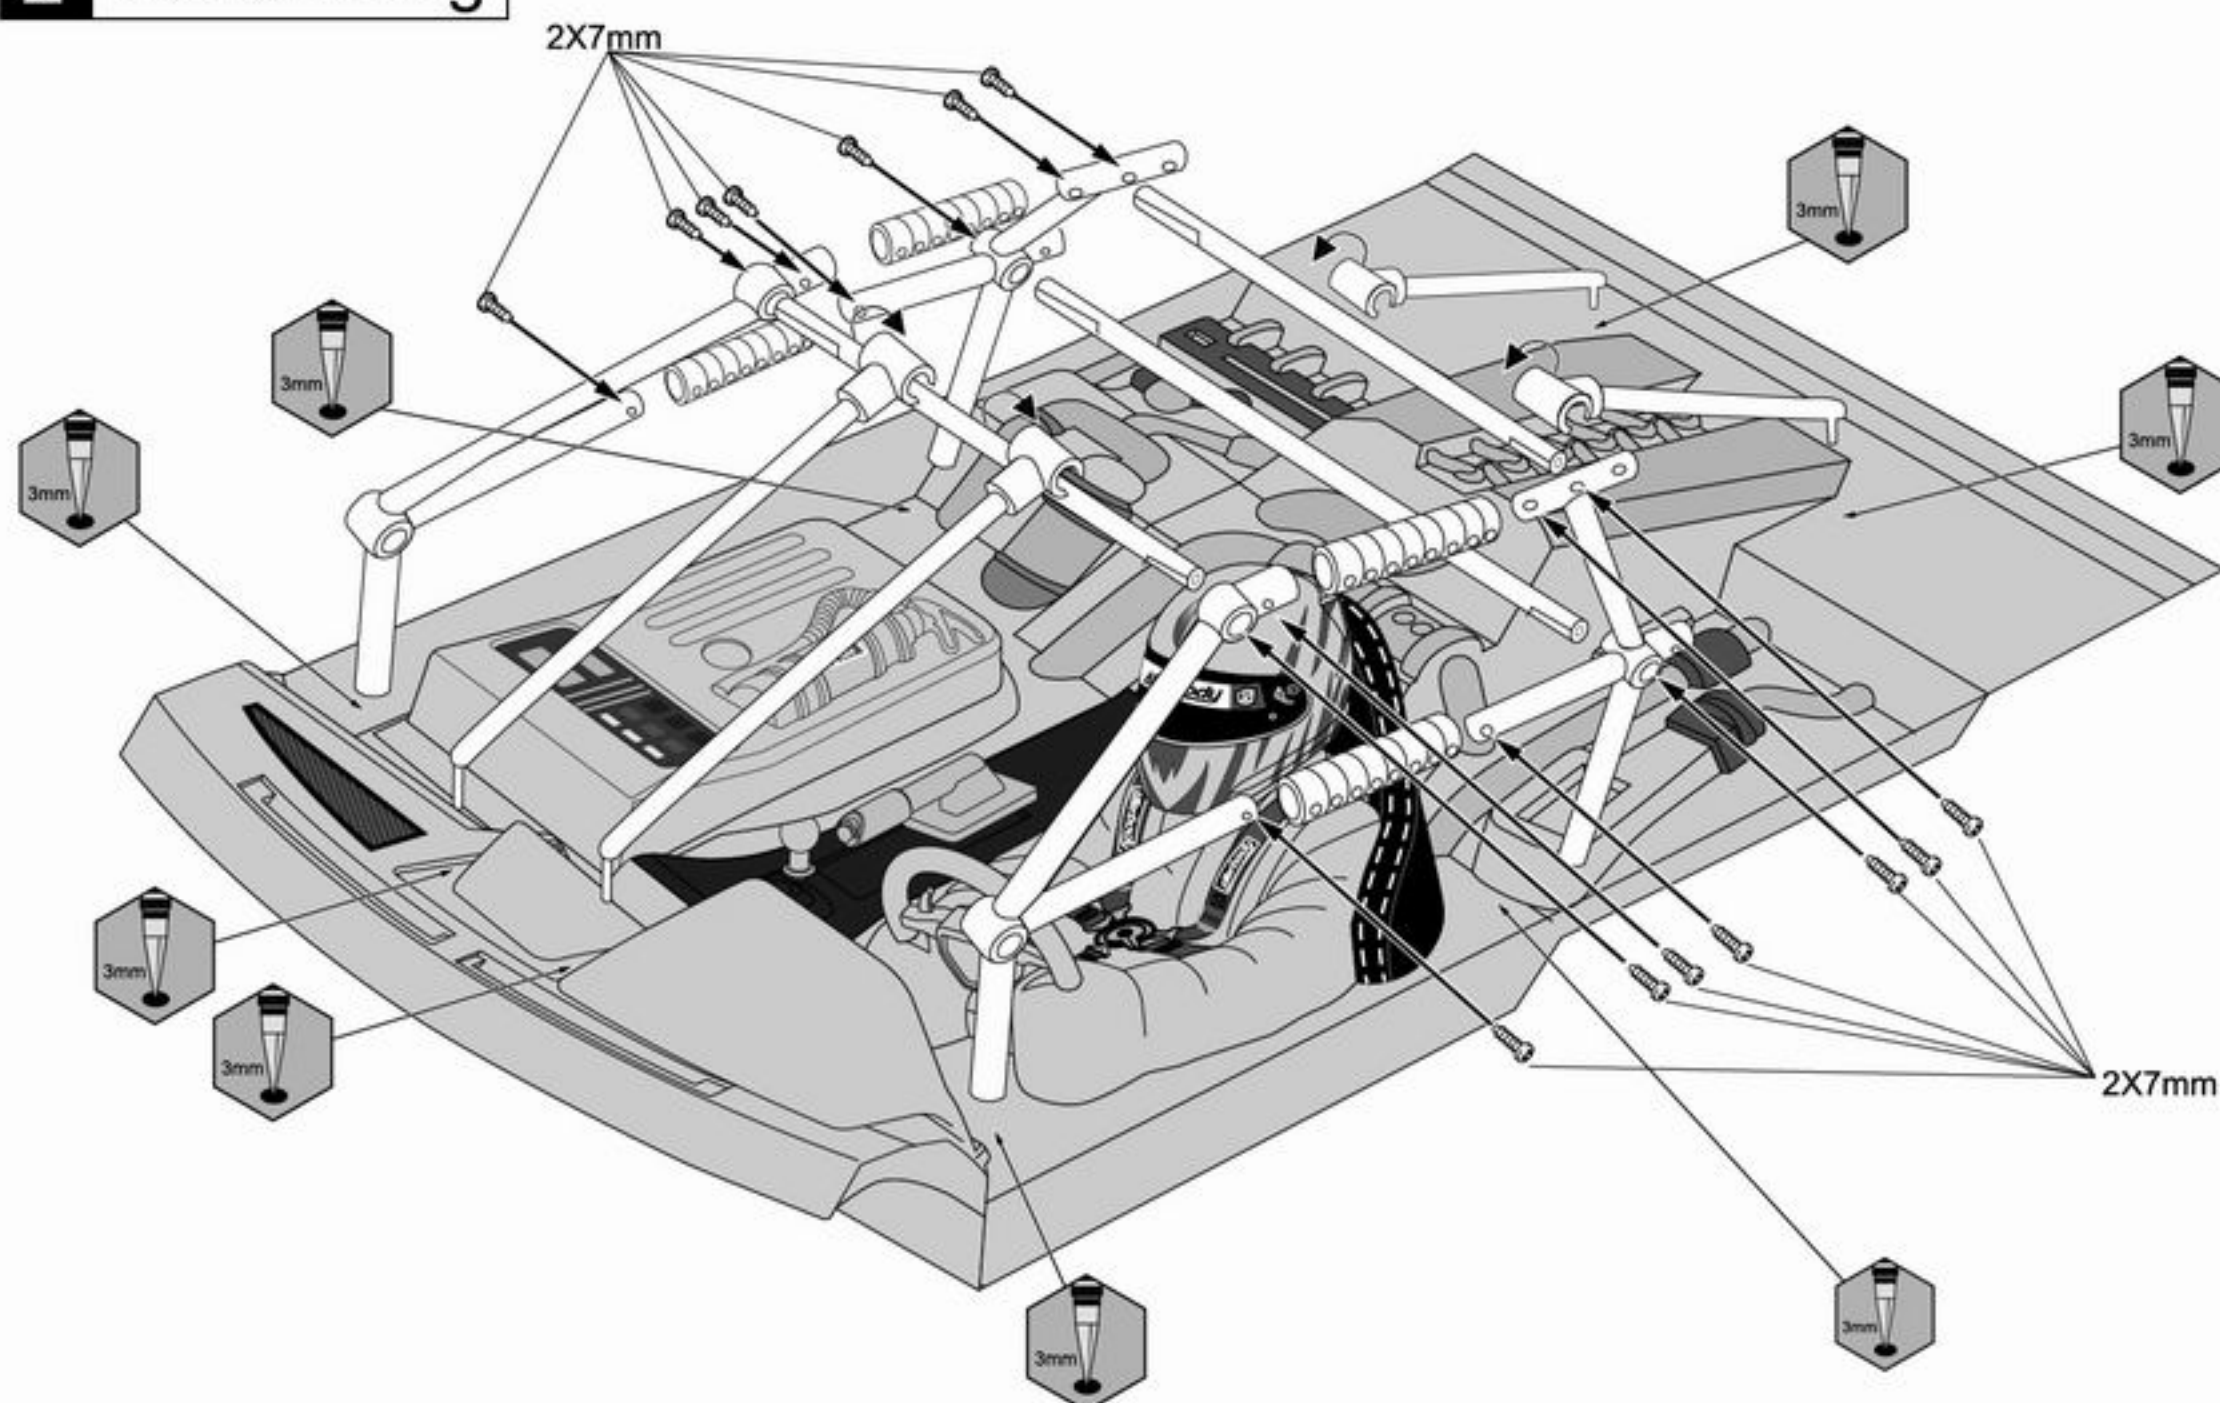



Cut the plastic pipe according to the actual distance.

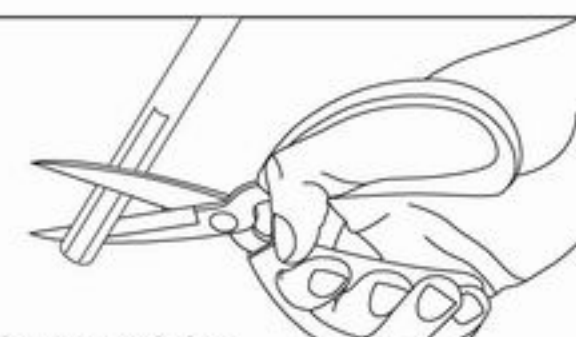

Cut the crossgirder according to the actual distance.

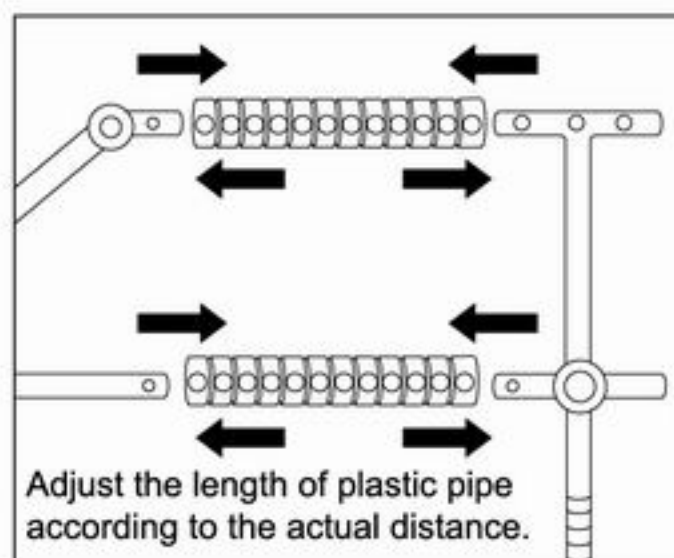

Adjust the length of plastic pipe according to the actual distance.

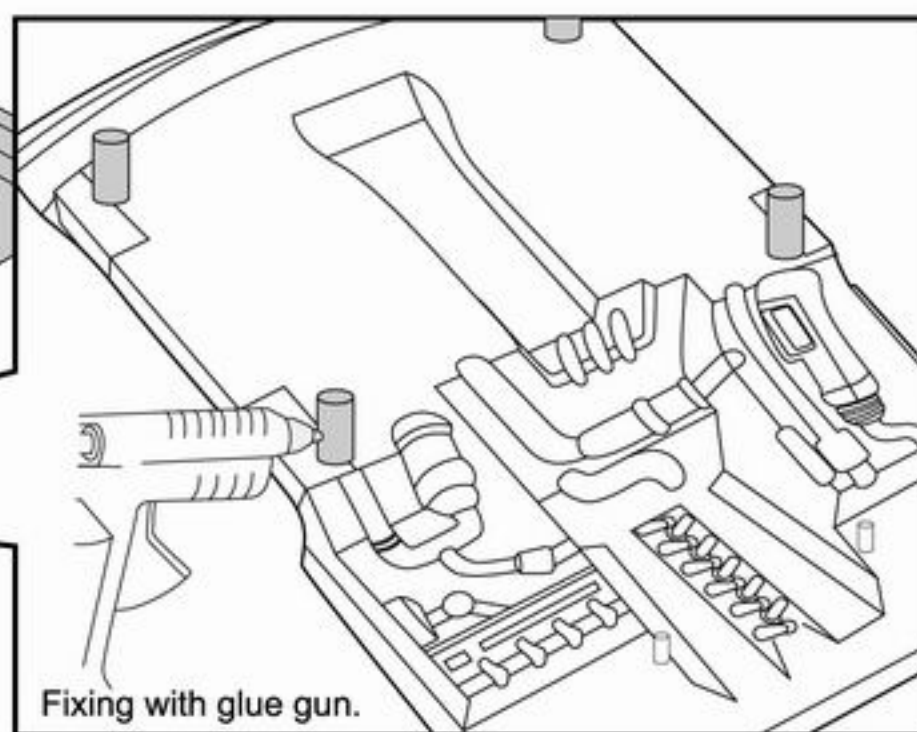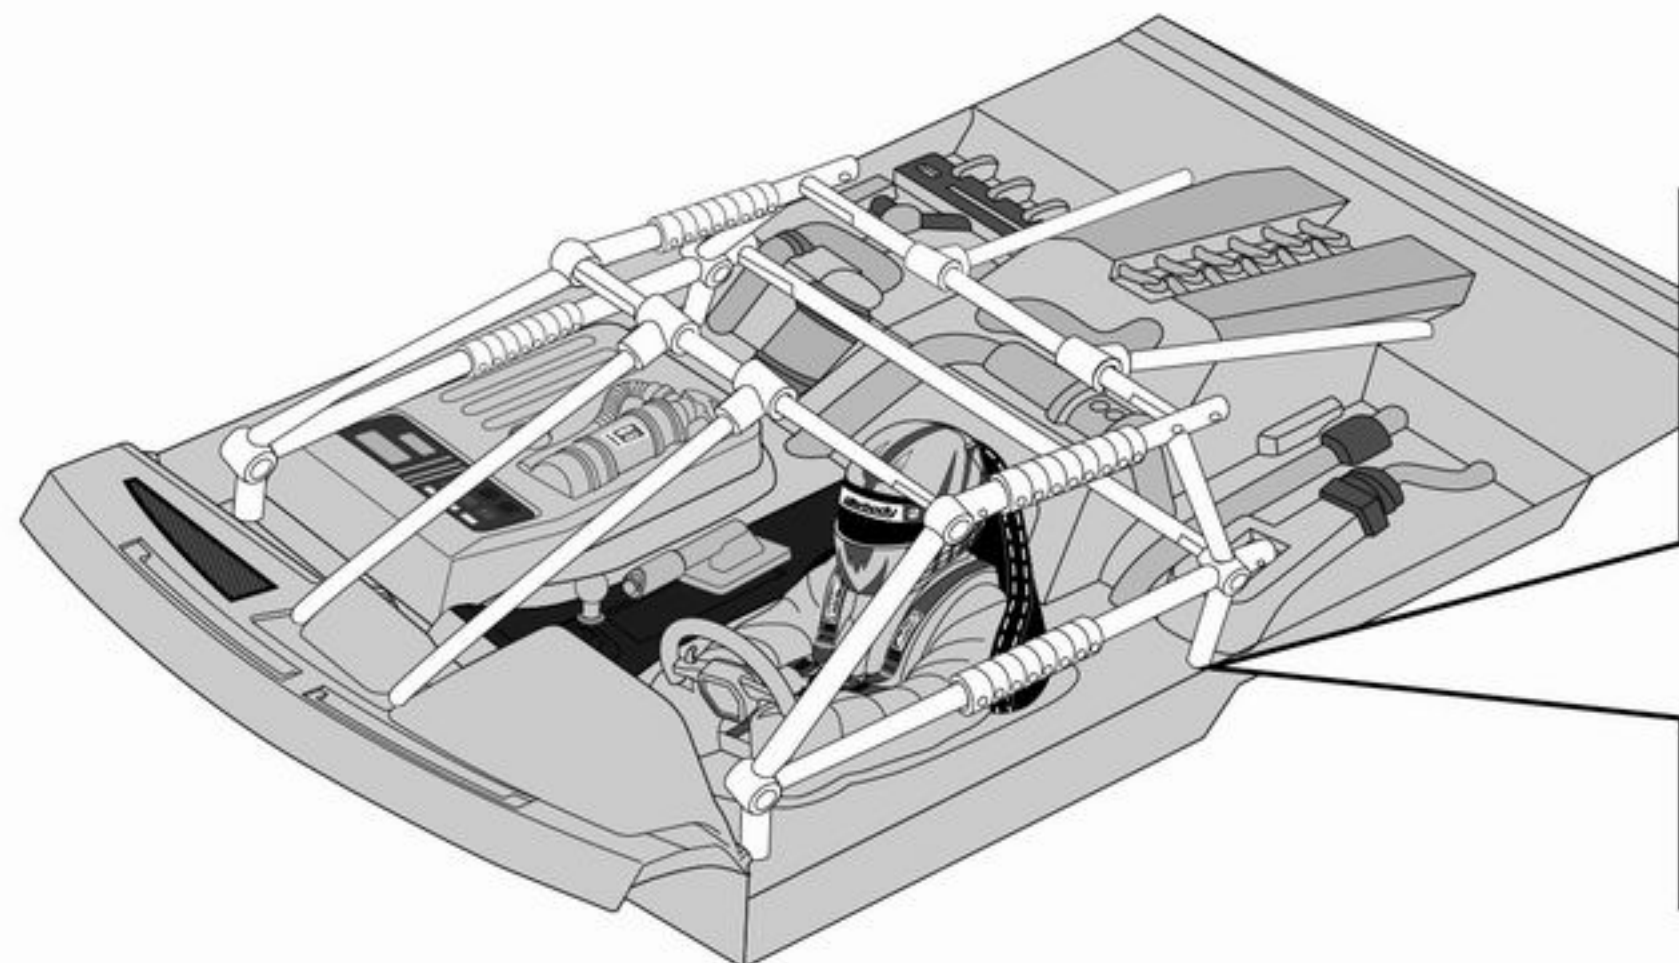


Fire-extinguisher


NO.48052

1 Plastic Parts

PLASTIC PARTS

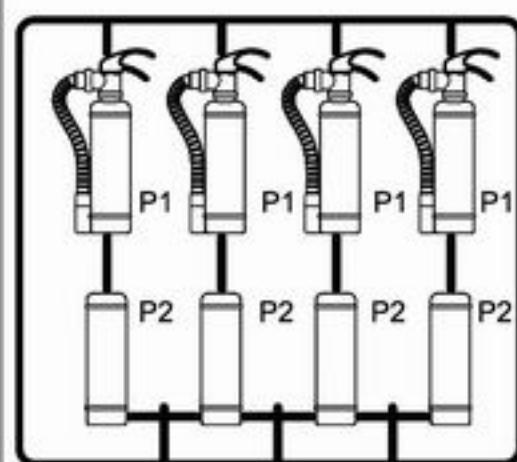


DECAL

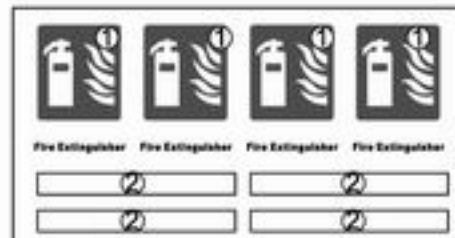



METAL




X4

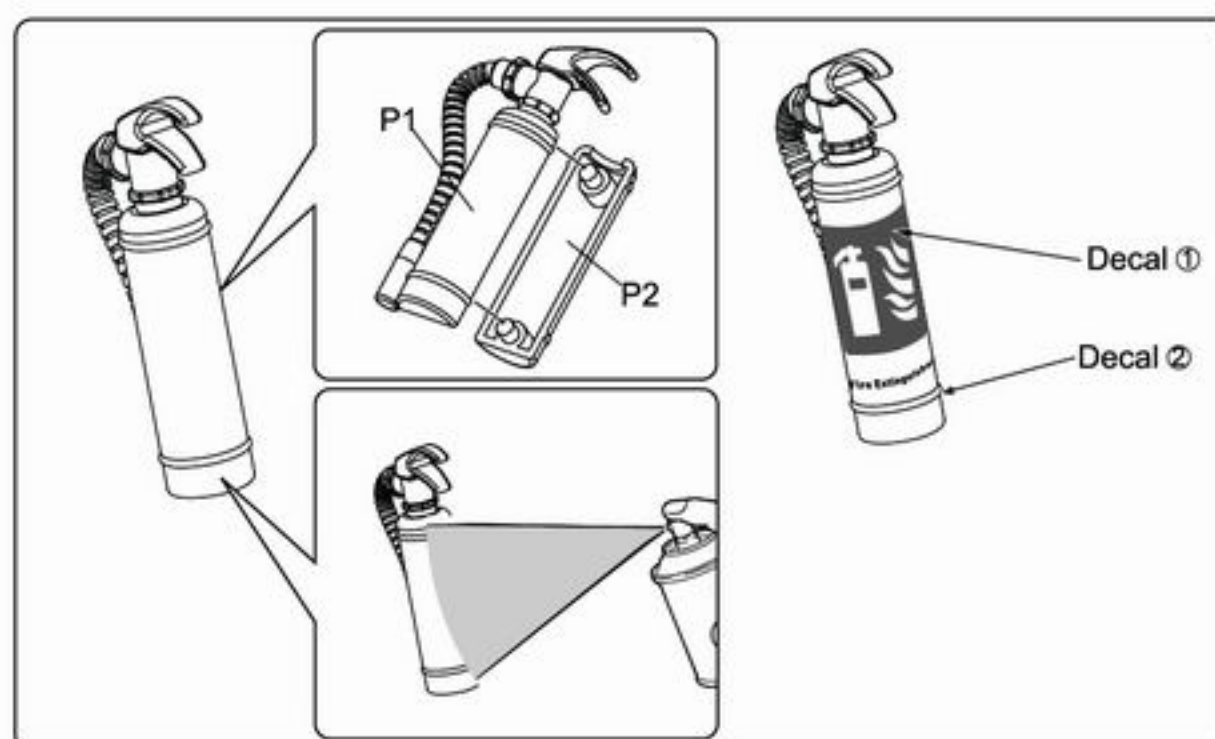

2 Assembling

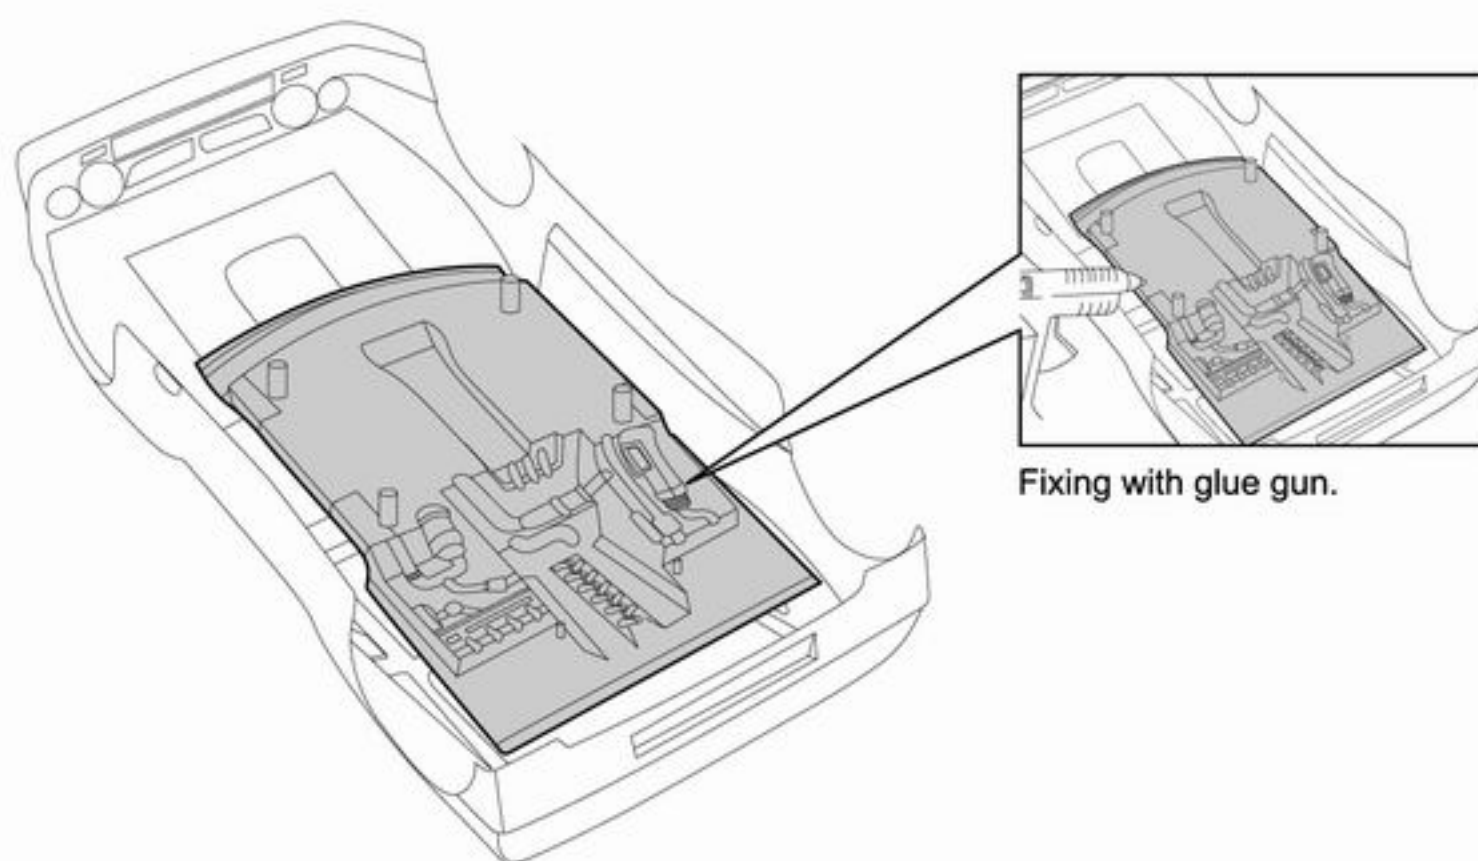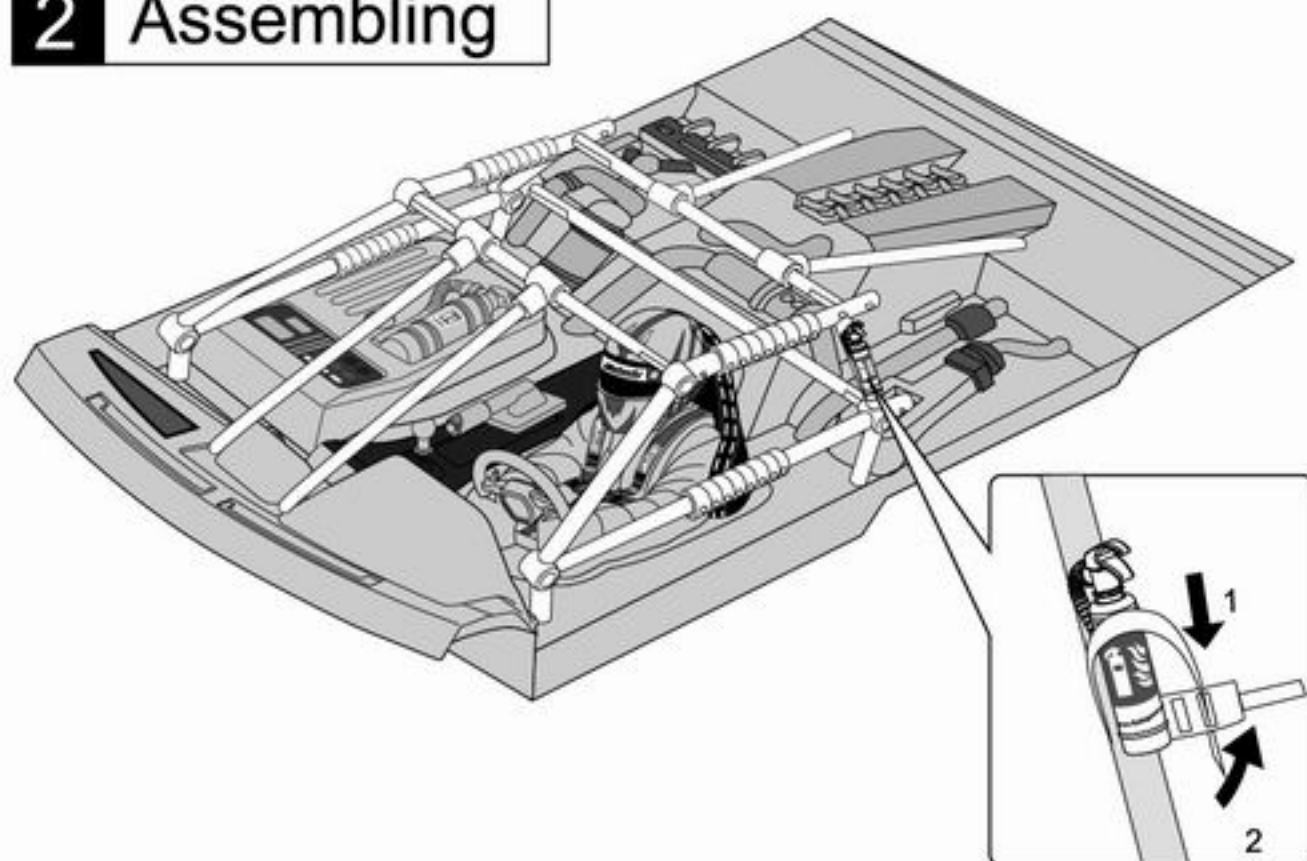

3 Finished

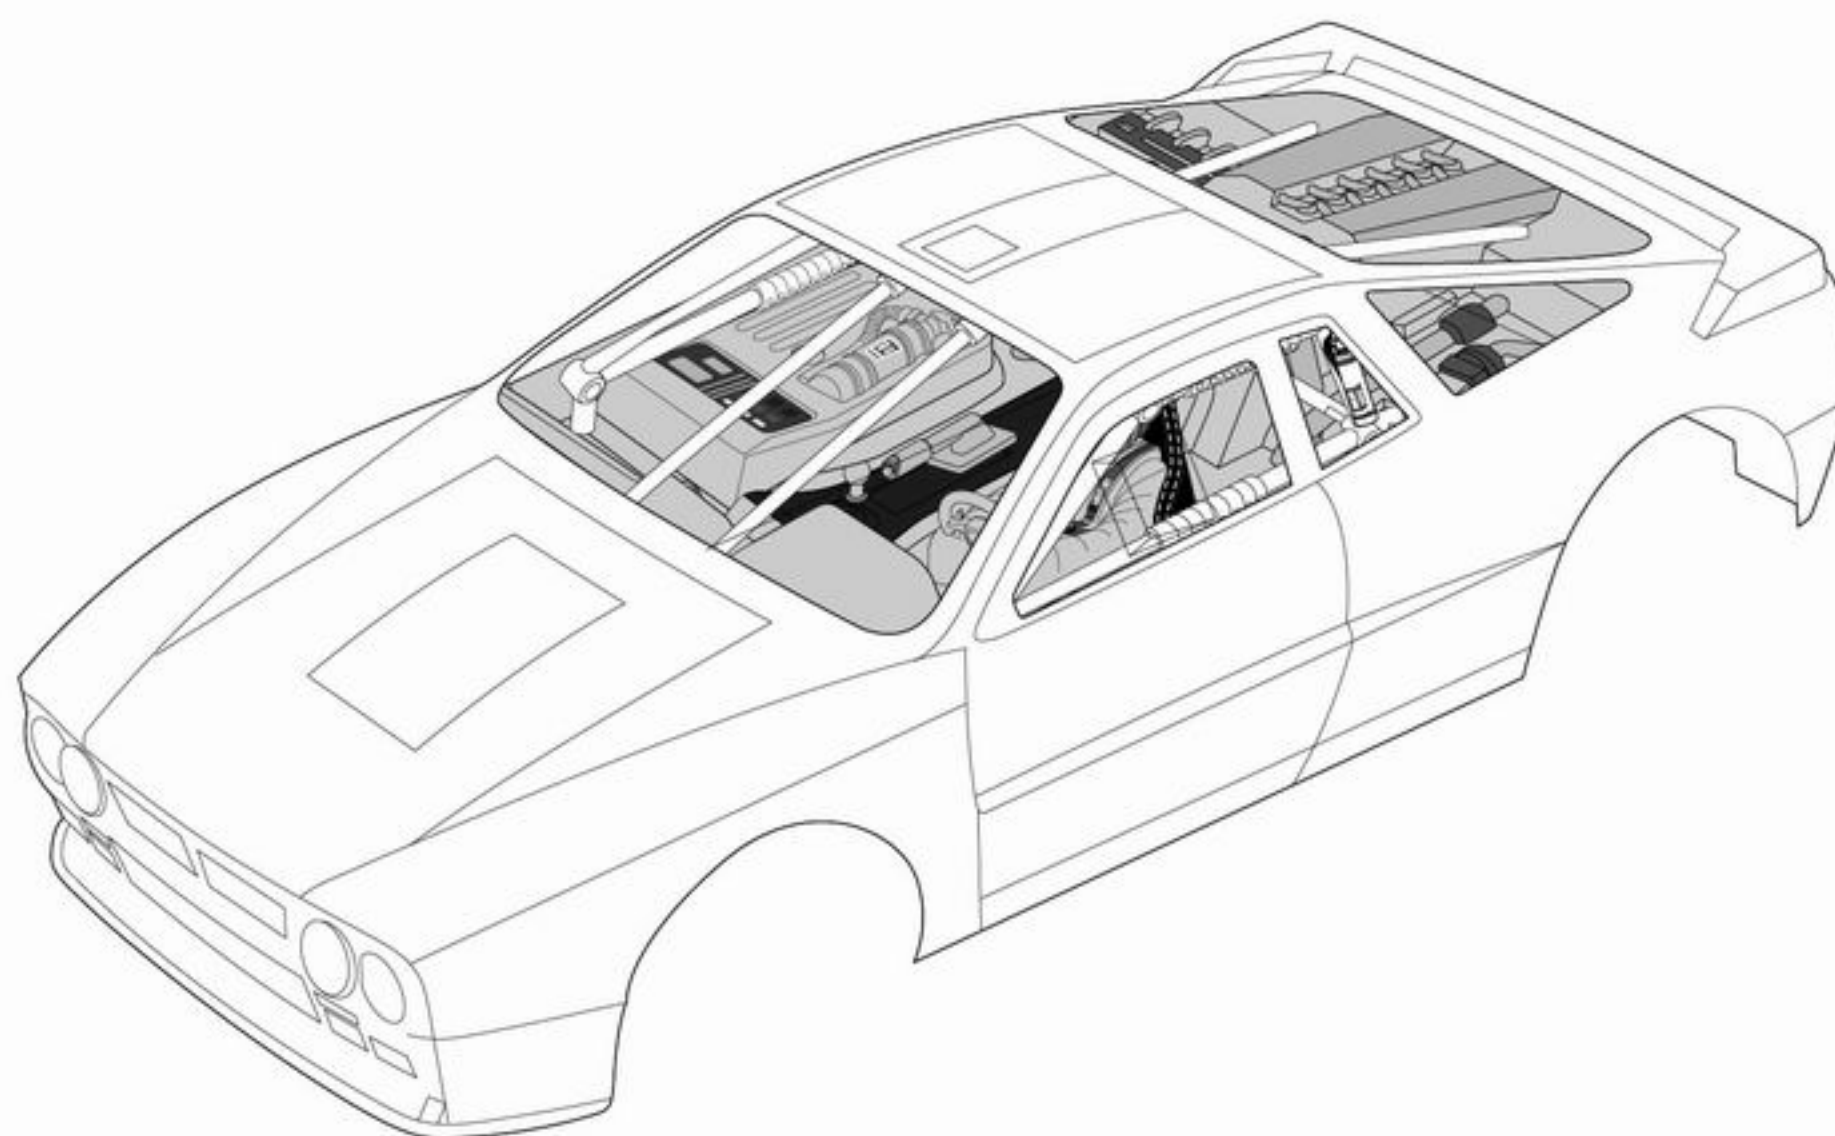

Option Parts & Accessory

No.	Part Names
48243	Rear-engine Cockpit Set 1/10 Touring Car
48499	Rear-engine Cockpit Set (Left) Finished Type 1/10 Touring Car
48500	Rear-engine Cockpit Set (Right) Finished Type 1/10 Touring Car
48244	Front-engine Cockpit Set 1/10 Touring Car
48501	Front-engine Cockpit Set (Left) Finished Type 1/10 Touring Car
48502	Front-engine Cockpit Set (Right) Finished Type 1/10 Touring Car
48513	Cockpit Set (Left) Finished Type 1/10 Truck
48520	Cockpit Set (Right) Finished Type 1/10 Truck
48224	Cockpit Set 1/10 Truck
48503	Anti-role Bar of Cockpit 1/10 Touring Car
48245	Navigator Set 1/10 Scale
48052	Fire-extinguisher Fit for any R/C car

WWW.KILLERBODYRC.COM