



Cockpit Set

Decoration Body

When making the window transparent:

Non Decoration Body

When loading LED lights

PARTS



NO.48501



NO.48502


1 Measuring



Before cutting the cockpit, please take a caliper to measure the actual size.




Here just take one body shell as an example,
all the installation methods are same.

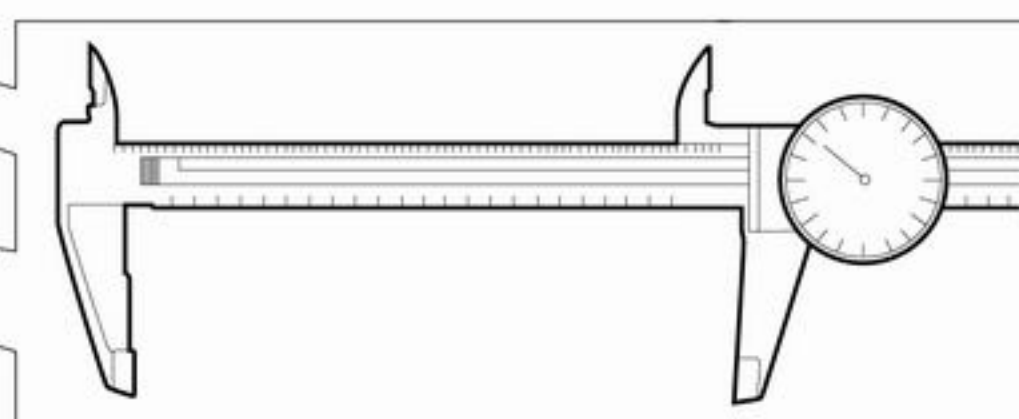

2 Cutting



Cutting the cockpit according to the actual size.

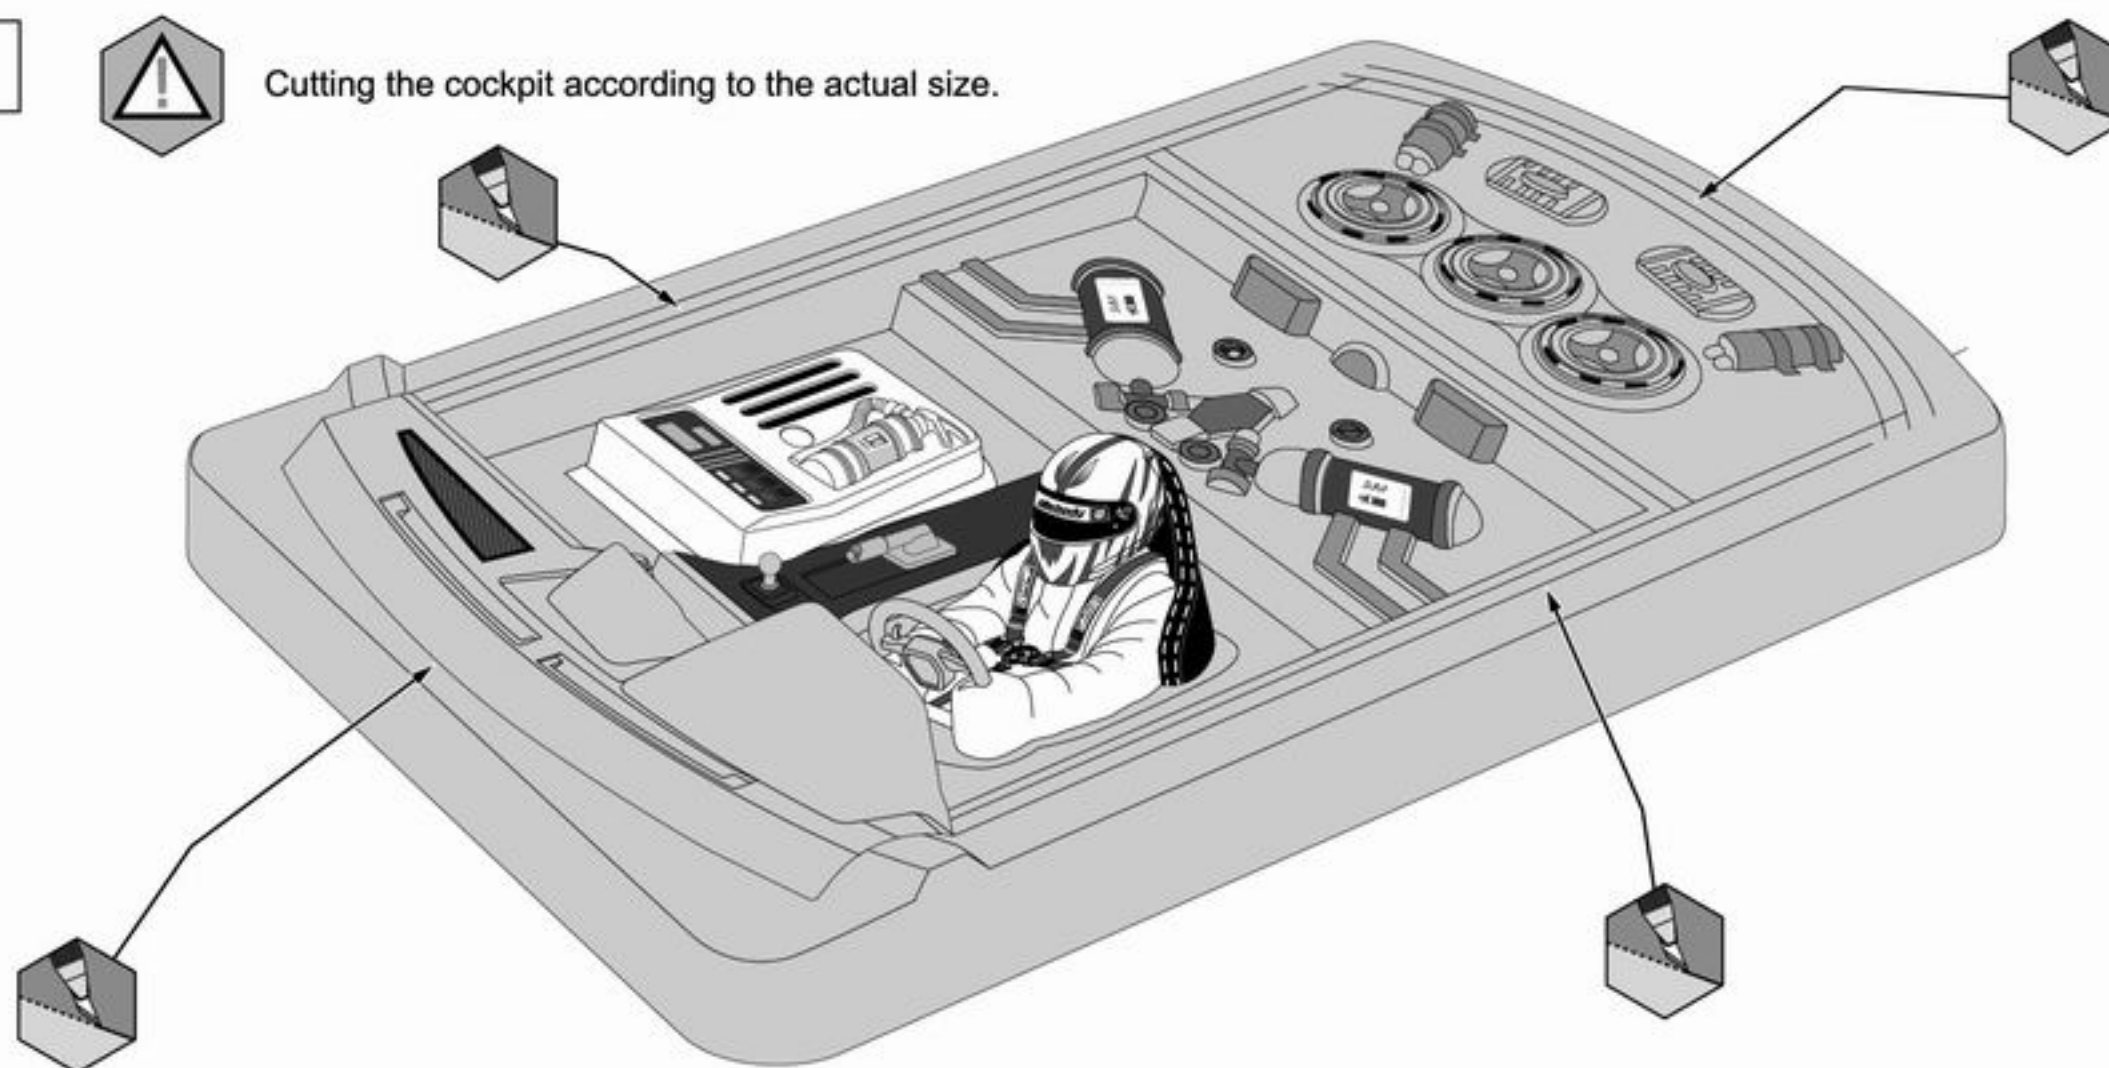




Anti-role Bar of Cockpit

NO.48503

PARTS

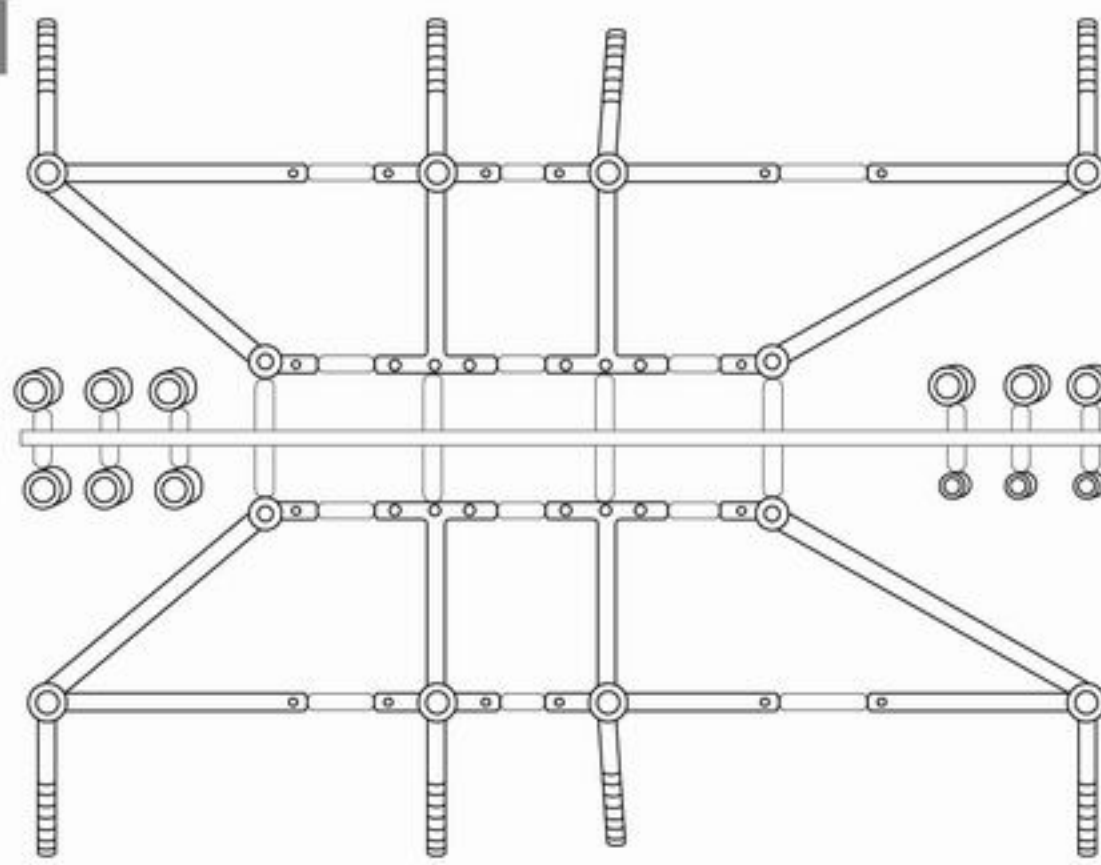

X10



X3




X2



X2



X2




2X7MM F/H TP SCREW

X36



1 Measuring




Please take a caliper to measure the window actual distance to adjust the anti-role bar.

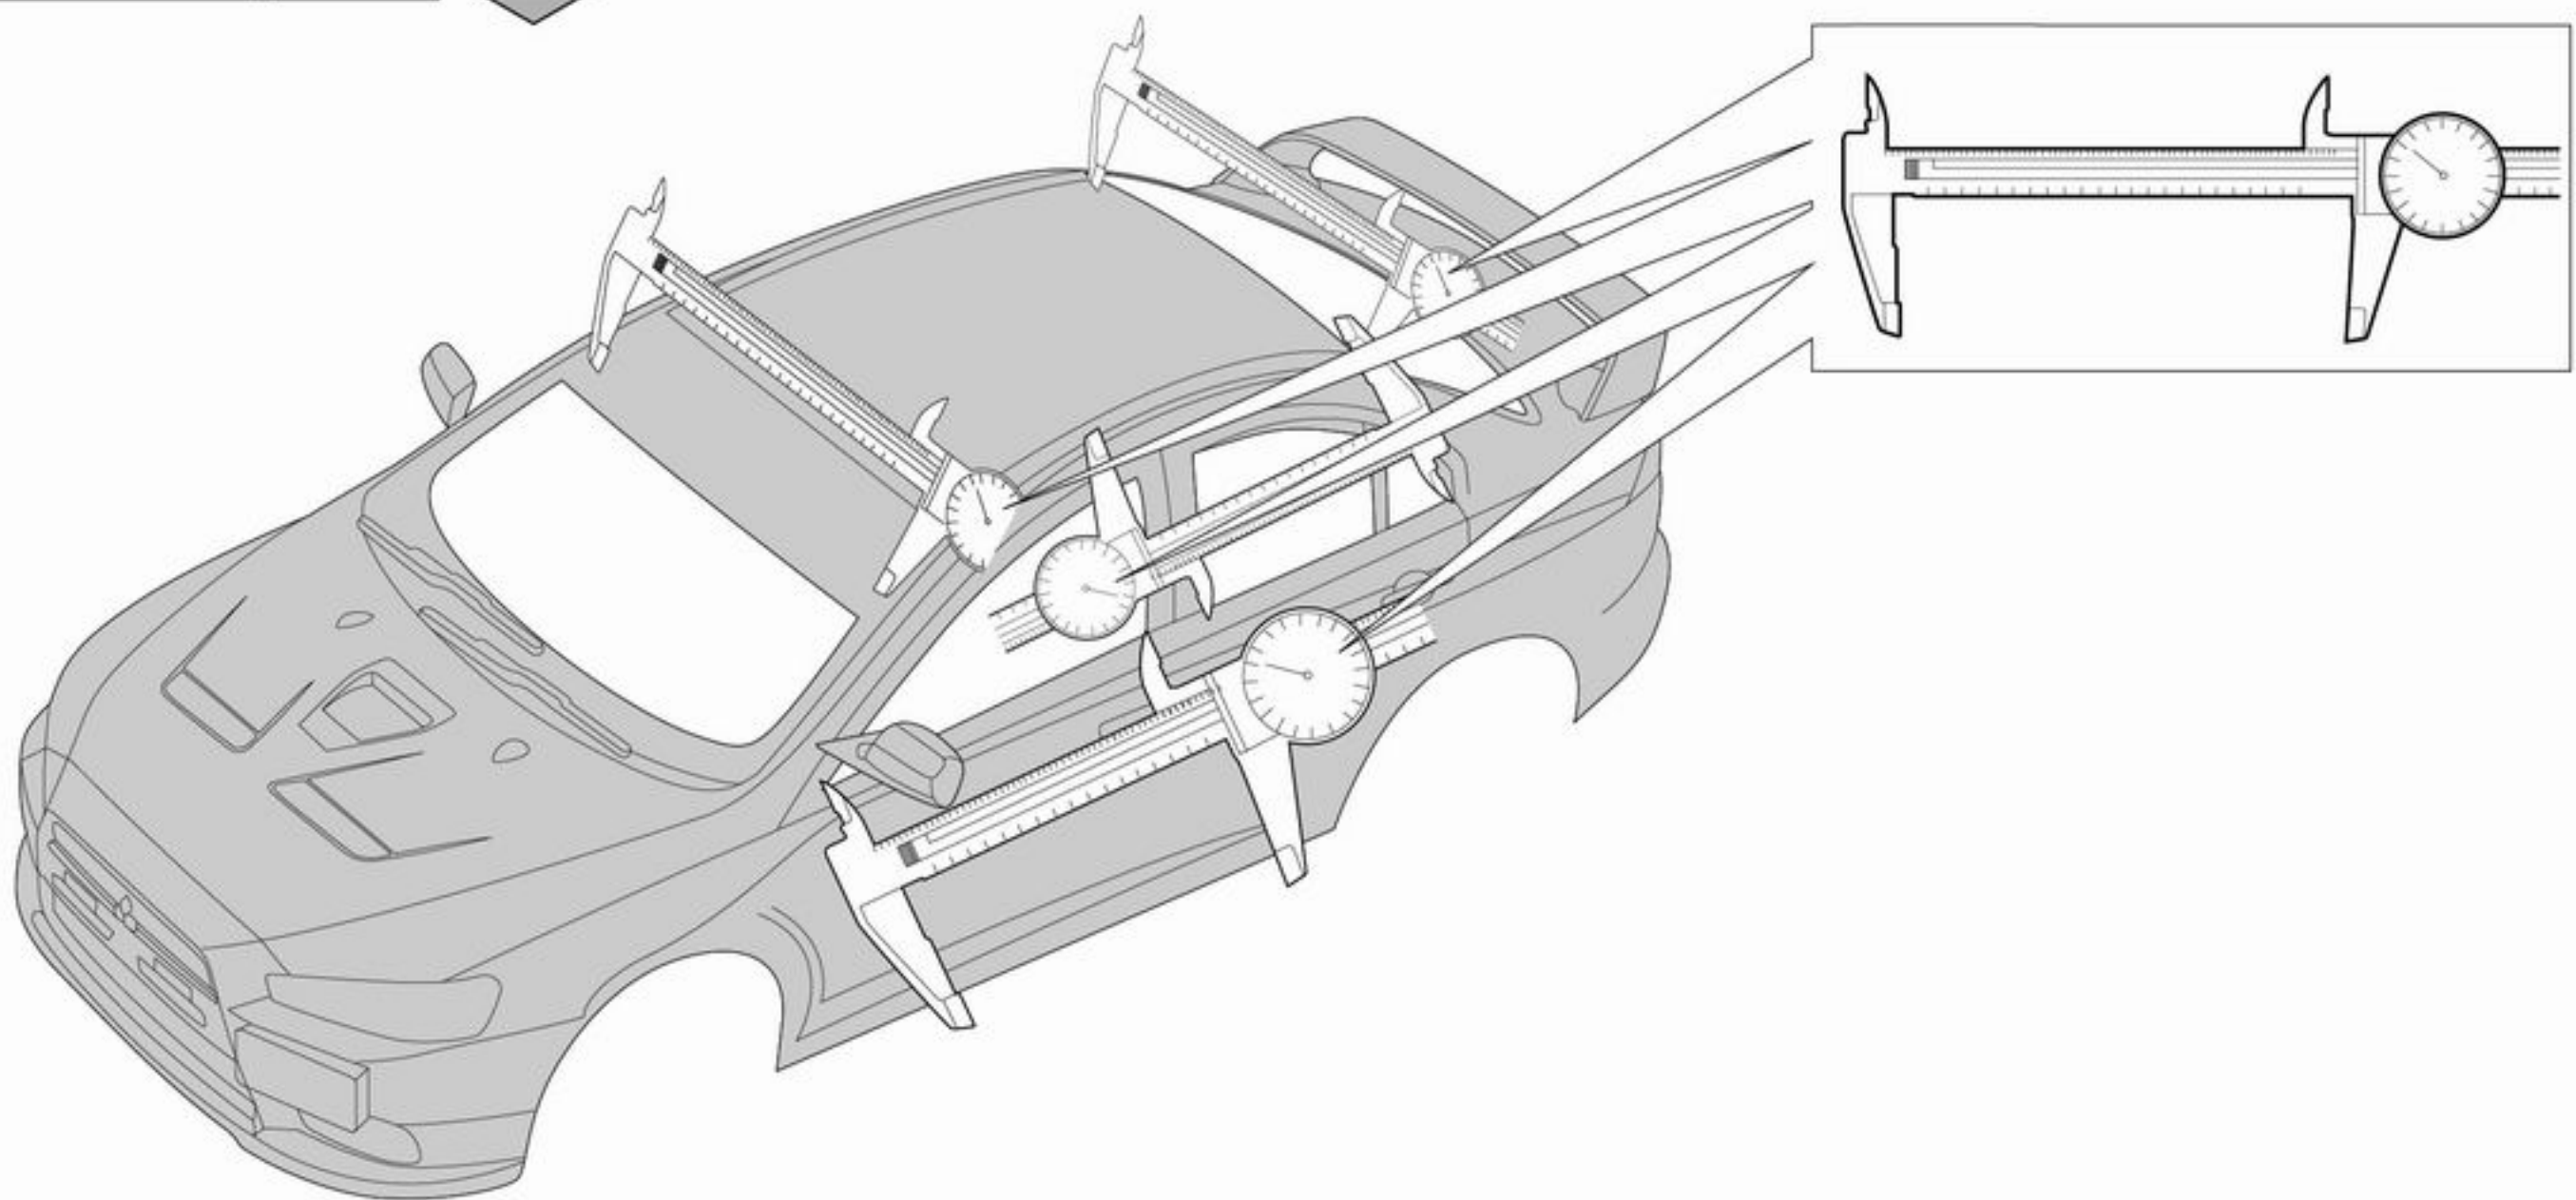


2 Assembling

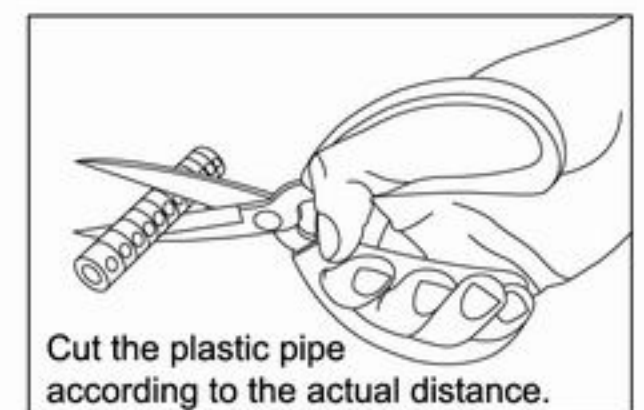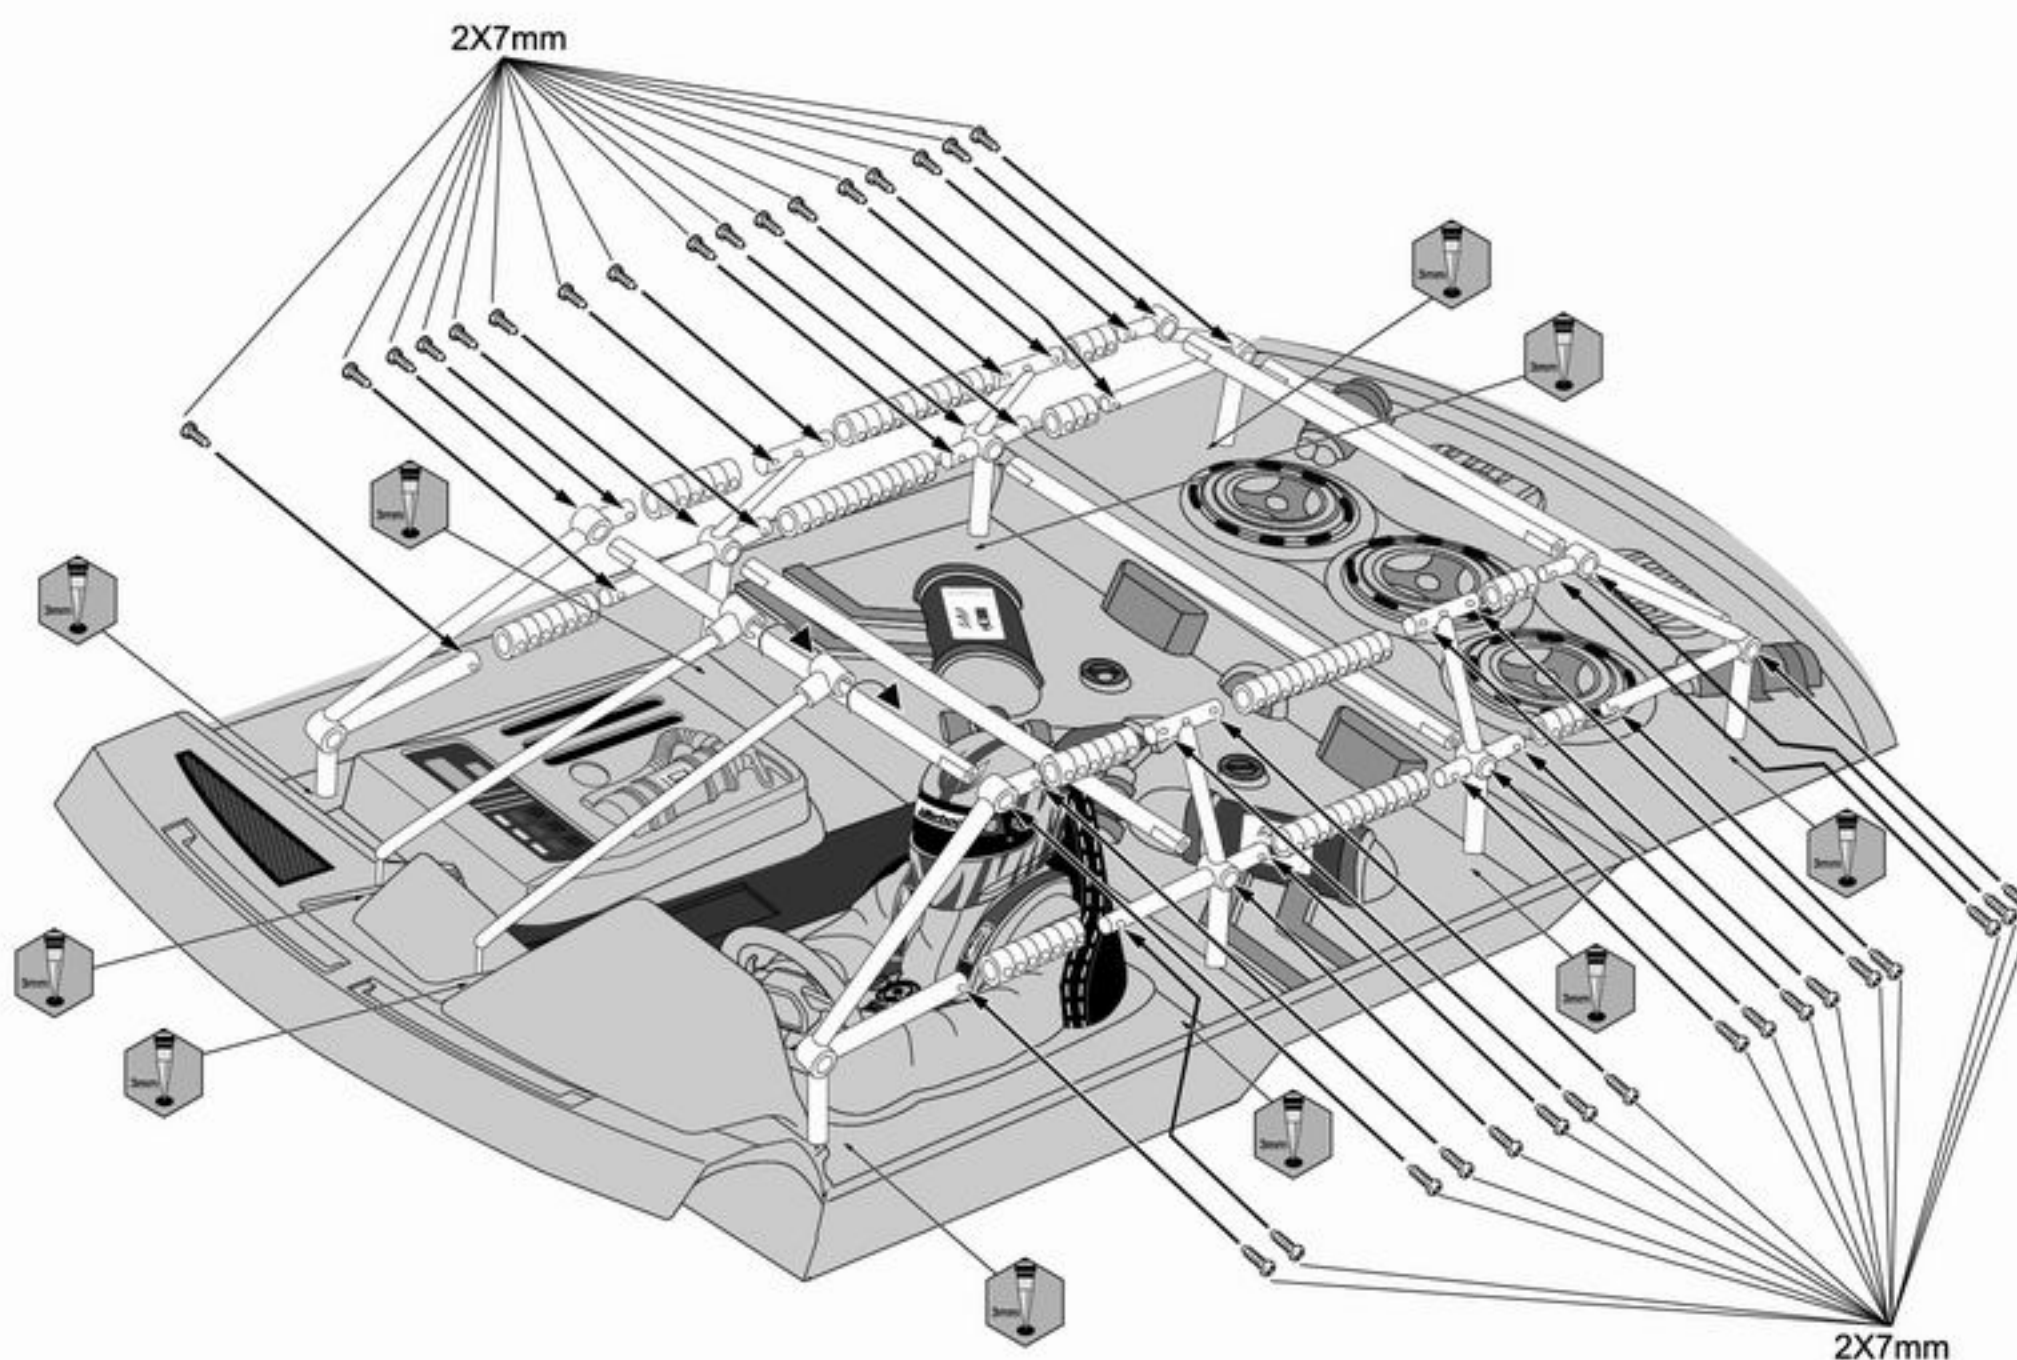



Cut the plastic pipe according to the actual distance.

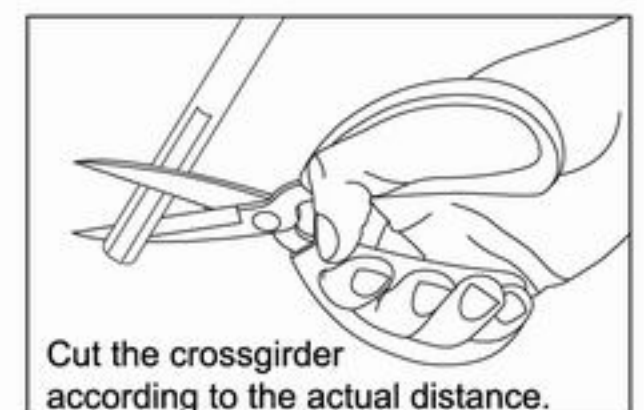

Cut the crossgirder according to the actual distance.

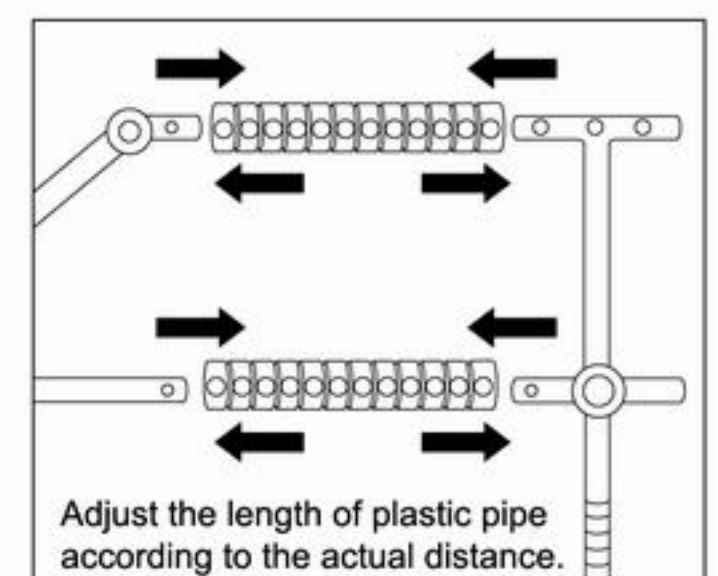

Adjust the length of plastic pipe according to the actual distance.

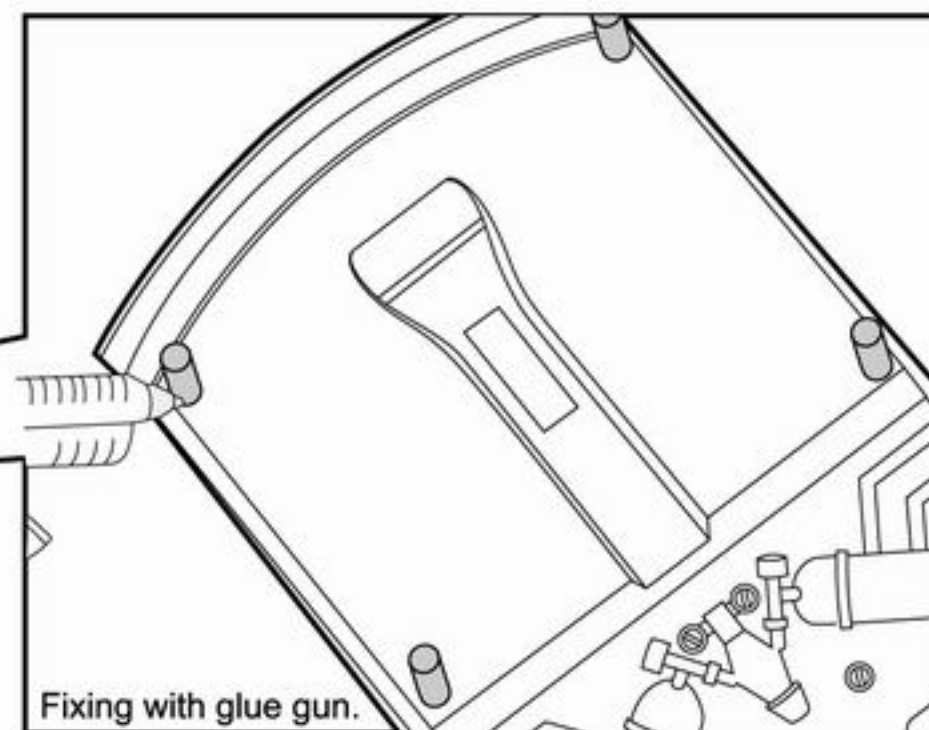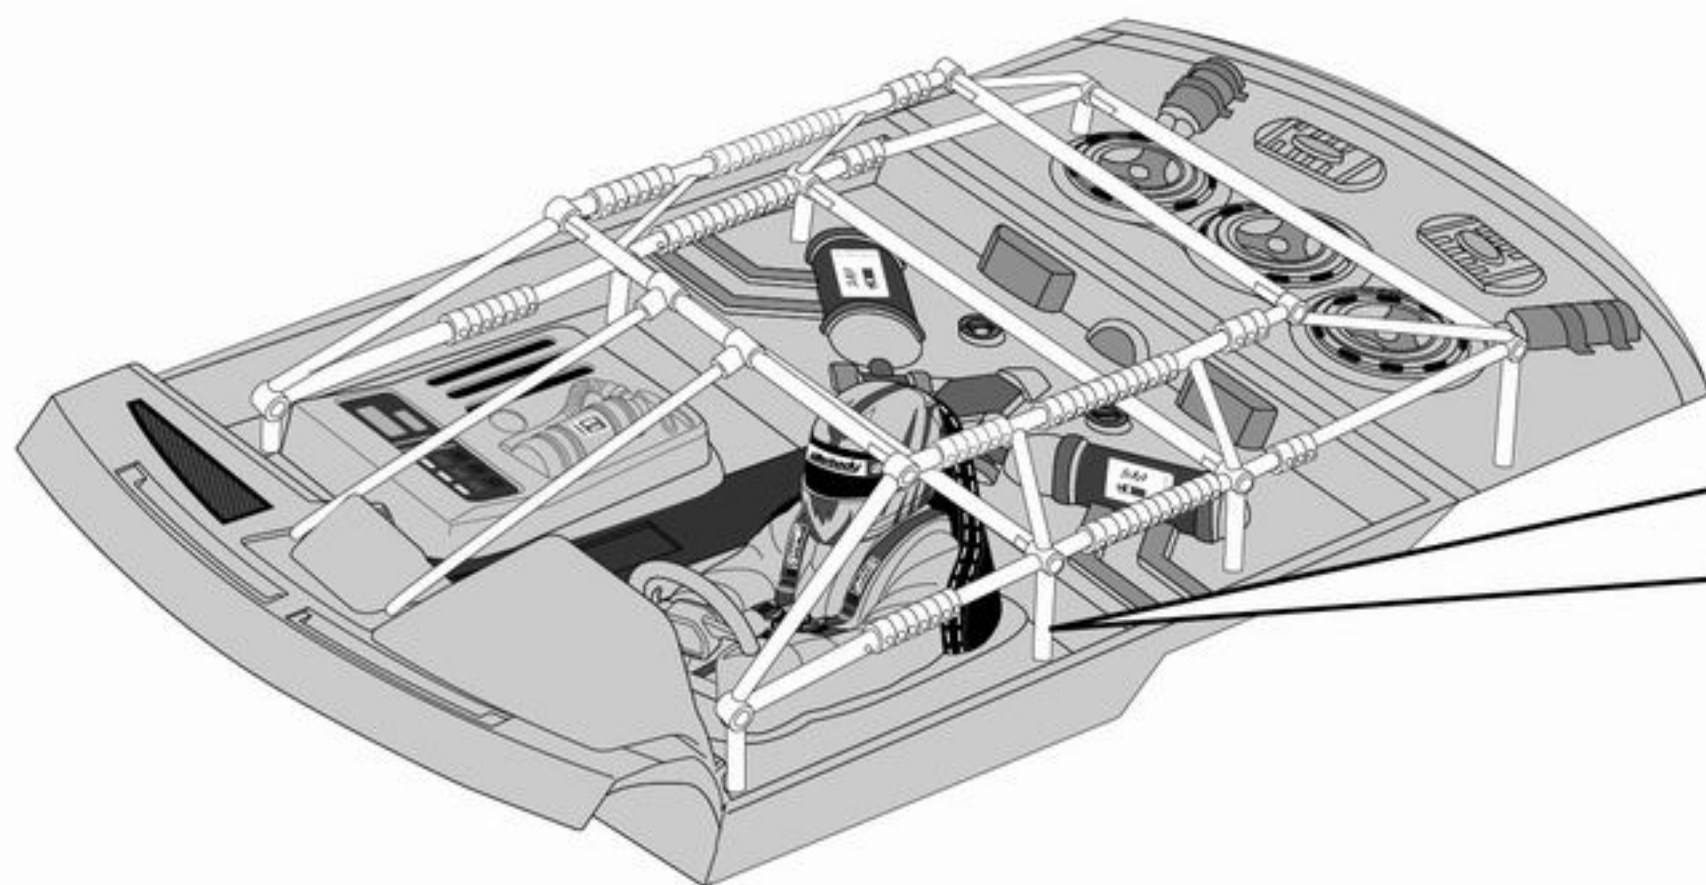


Fire-extinguisher


NO.48052

1 Plastic Parts


PLASTIC PARTS

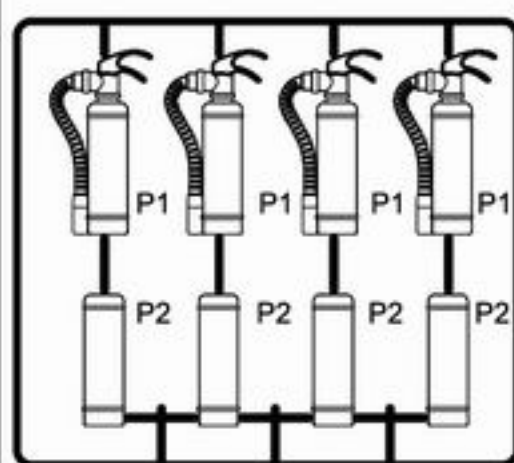



DECAL

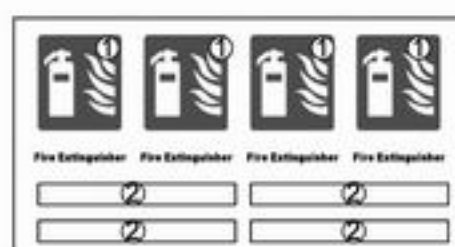

METAL

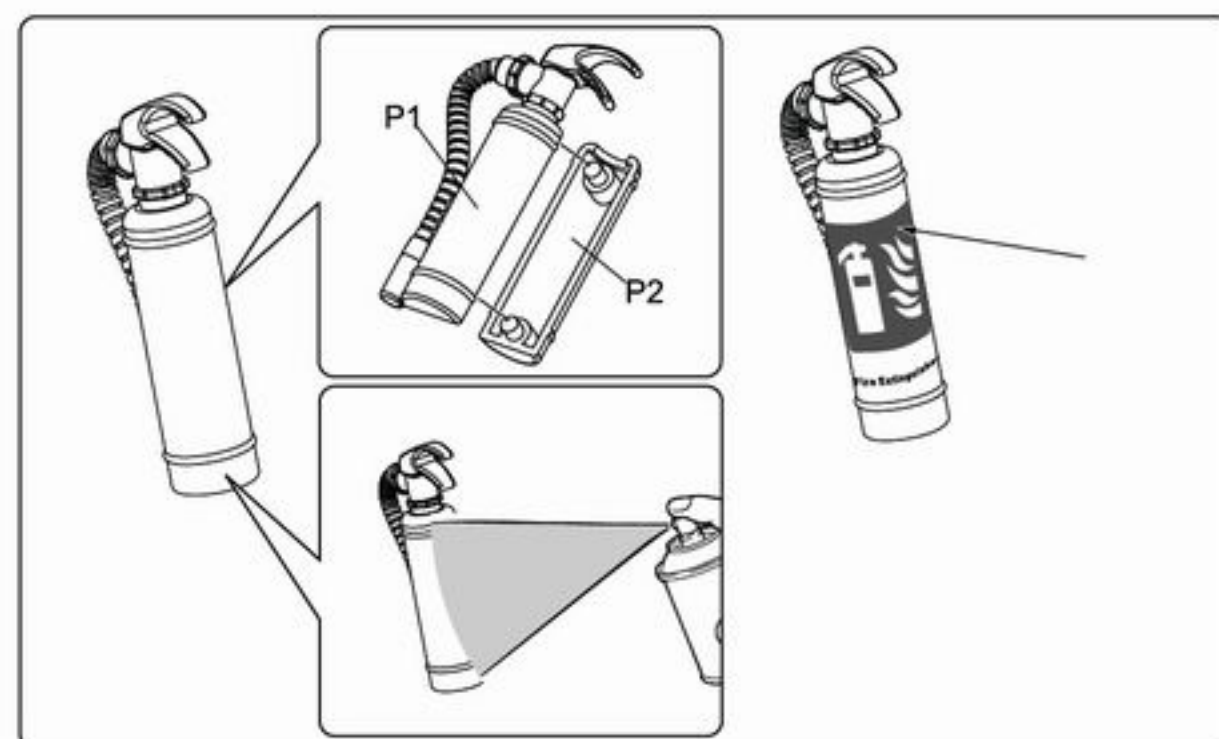

2 Assembling

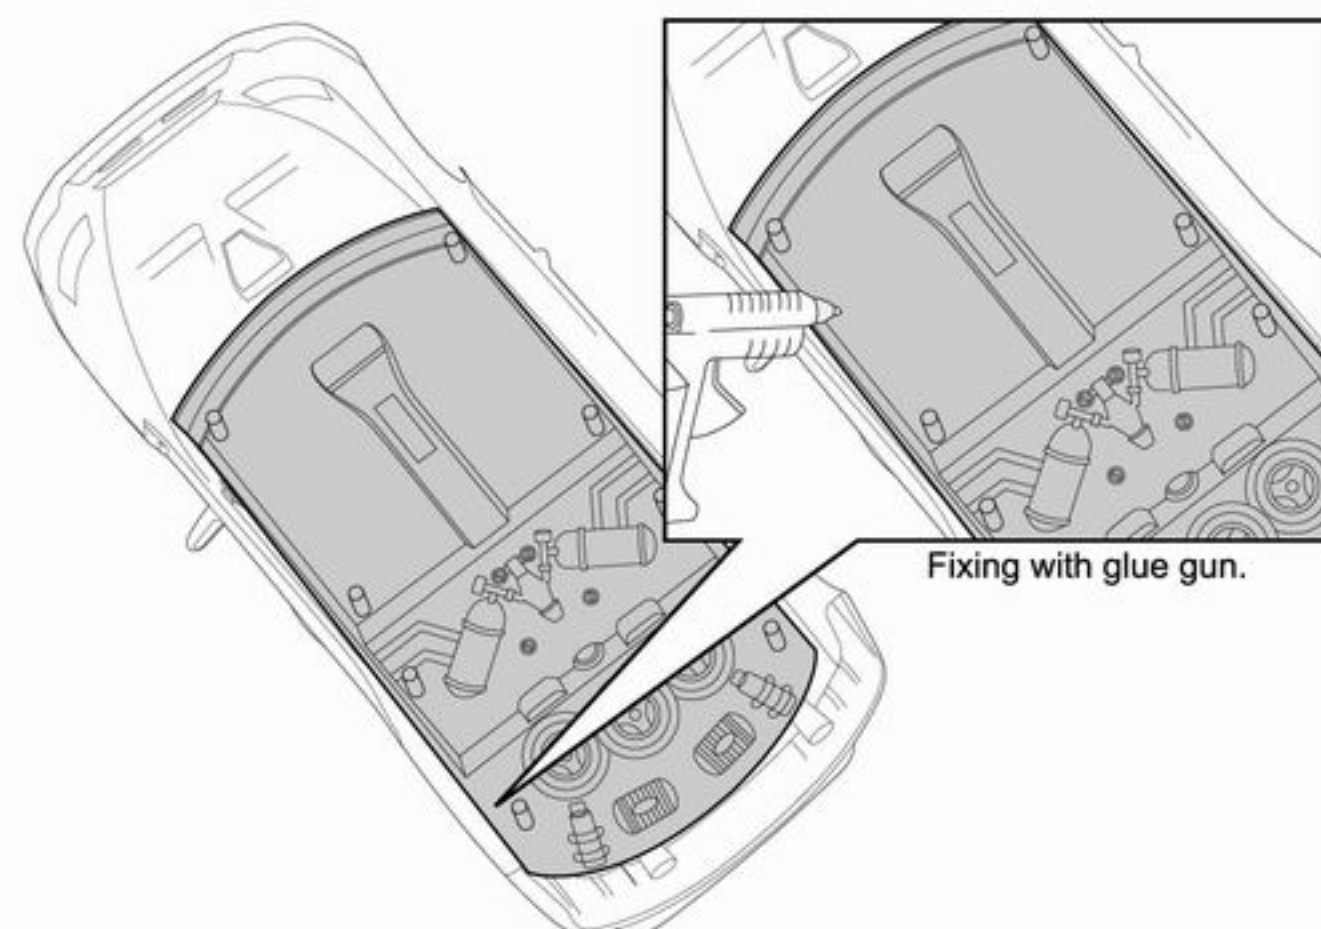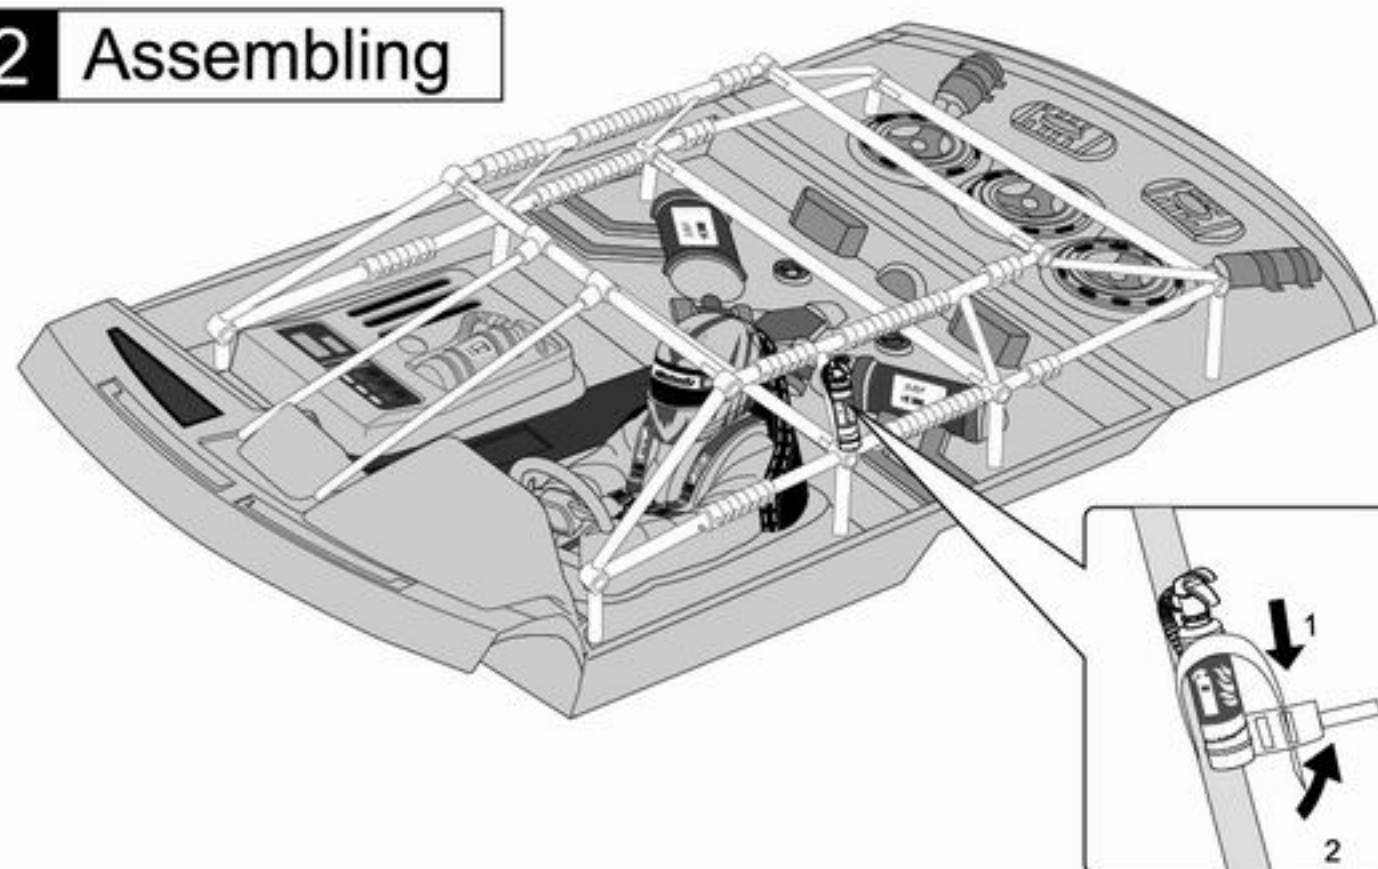

3 Finished



Option Parts & Accessory

| No. | Part Names |
|-------|---|
| 48243 | Rear-engine Cockpit Set 1/10 Touring Car |
| 48499 | Rear-engine Cockpit Set (Left) Finished Type 1/10 Touring Car |
| 48500 | Rear-engine Cockpit Set (Right) Finished Type 1/10 Touring Car |
| 48244 | Front-engine Cockpit Set 1/10 Touring Car |
| 48501 | Front-engine Cockpit Set (Left) Finished Type 1/10 Touring Car |
| 48502 | Front-engine Cockpit Set (Right) Finished Type 1/10 Touring Car |
| 48513 | Cockpit Set (Left) Finished Type 1/10 Truck |
| 48520 | Cockpit Set (Right) Finished Type 1/10 Truck |
| 48224 | Cockpit Set 1/10 Truck |
| 48503 | Anti-role Bar of Cockpit 1/10 Touring Car |
| 48245 | Navigator Set 1/10 Scale |
| 48052 | Fire-extinguisher Fit for any R/C car |
| | |

WWW.KILLERBODYRC.COM