




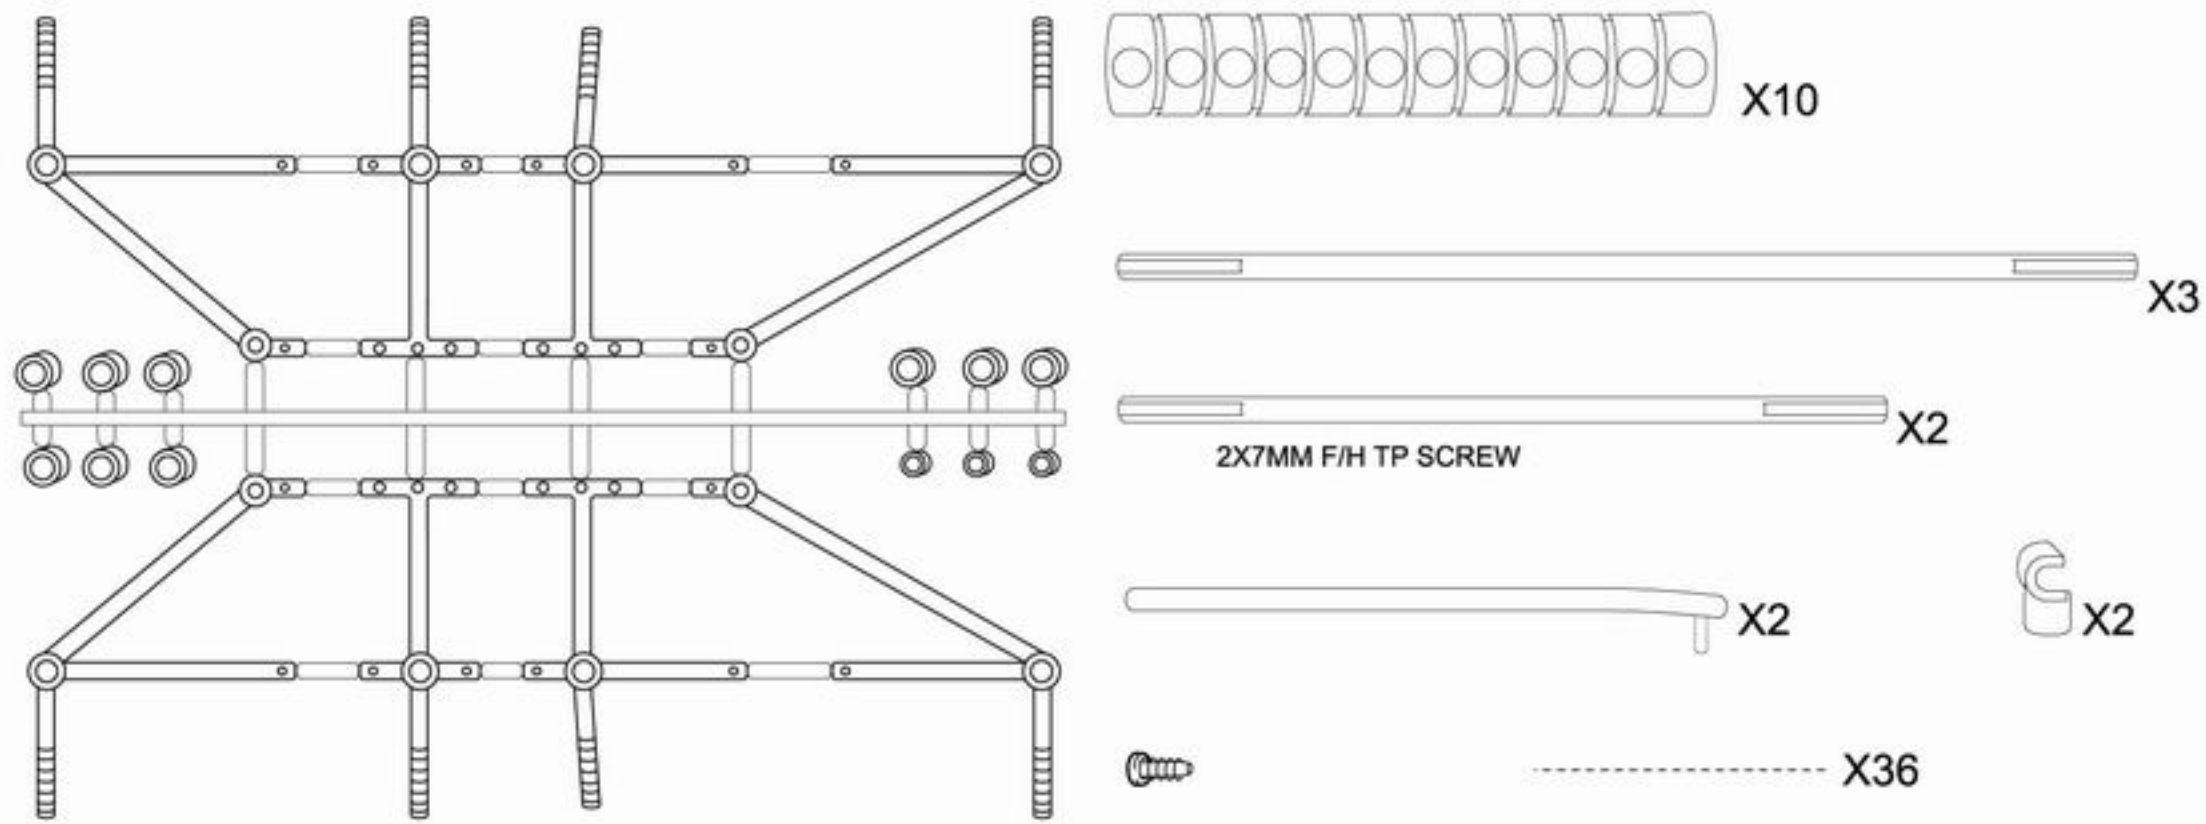



● Symbols used throughout the instruction manual, comprise:


-  Cut off shaded portion.
-  5mm Drill holes with the specified diameter.
-  Pay close attention here!
-  Must be purchased separately.
-  Assemble left and right sides the same way.

PARTS



1 Measuring

 Please take a caliper to measure the window actual distance to adjust the anti-role bar.

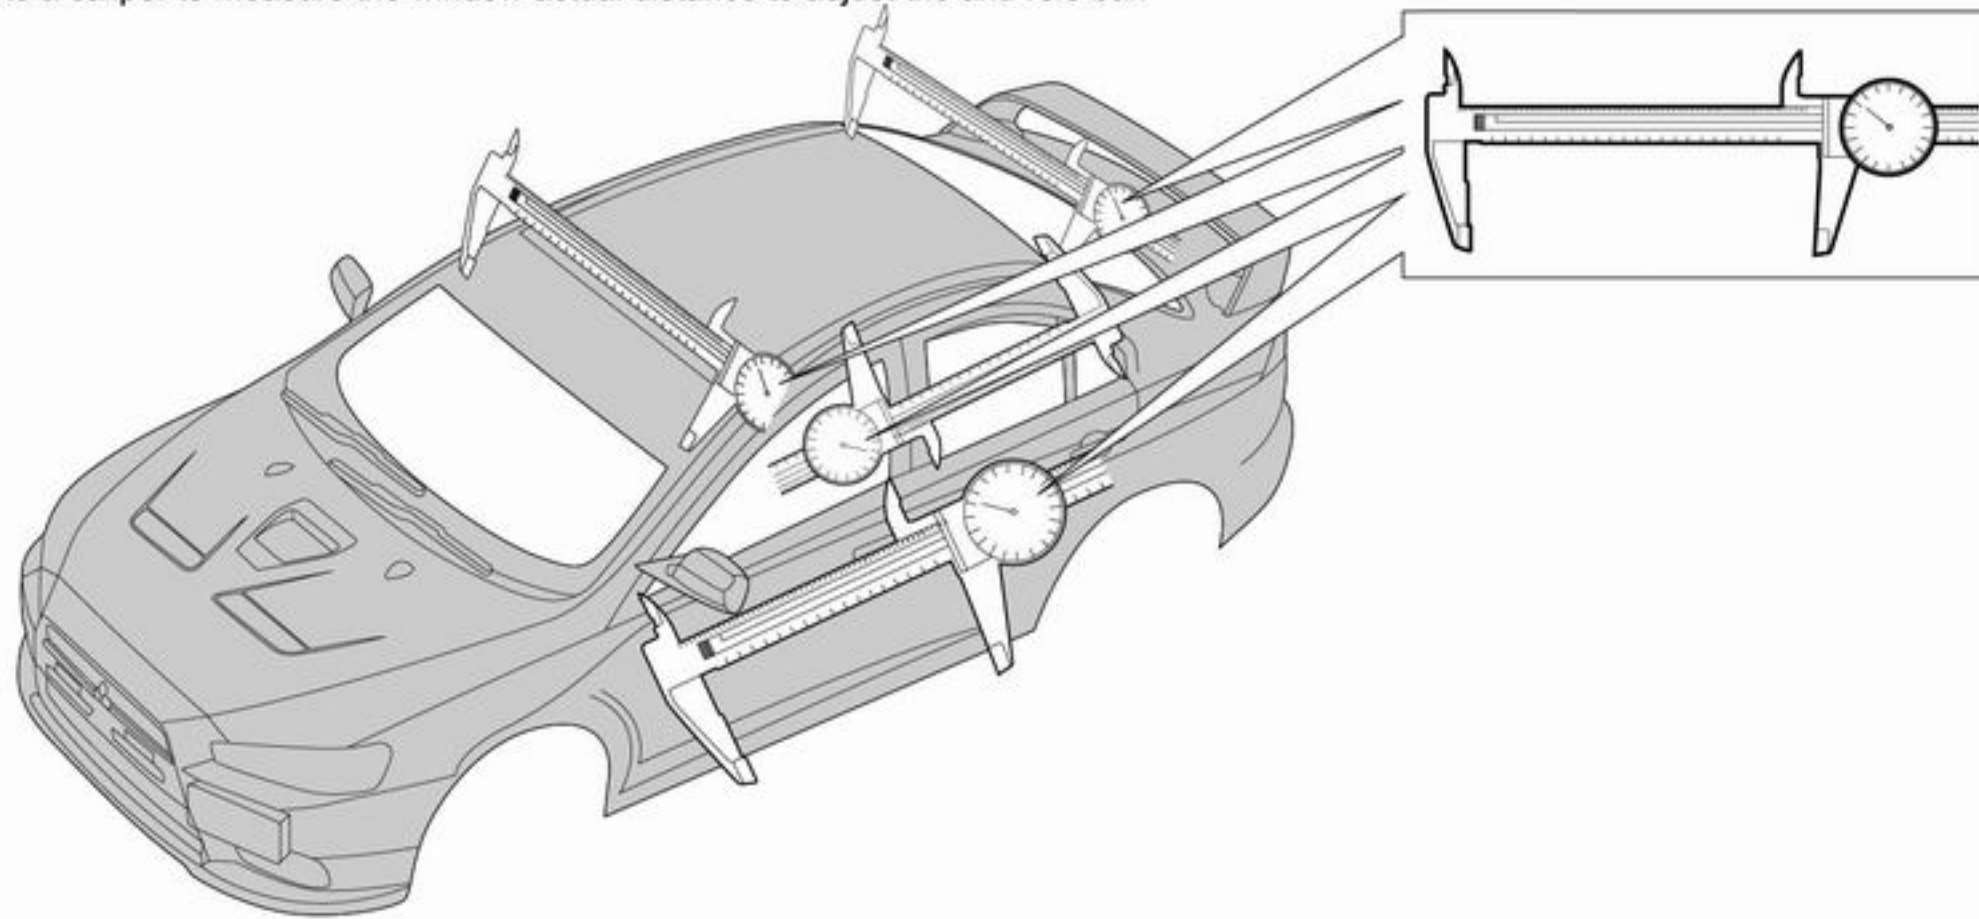

2 Assembling

