

Nissan Skyline (R31)

BODY SHELL

Official Licensed Product

NO.48630


killerbody™

1/10 RC PLANNING INSTRUCTION SHEET

This body can be used with 1/10 electric touring car chassis (Long Wheelbase: 257mm Width: 190mm)

Before beginning assembly, please read these instructions thoroughly!

● Symbols used throughout the instruction manual, comprise:



● Before Assembly

Decoration Body

- In the case of a decoration body, please assemble it according to the contents showed.

When making the window transparent

- If you want to make the window transparent with a non decoration body, please assemble it according to the contents showed.

Non Decoration Body

- In the case of non decoration body, please assemble it according to the contents showed.

When loading LED lights

- If you want to load LED lights with a non decoration body, please assemble it according to the contents showed.

PARTS

PC body	-----	X1
PC parts	-----	X1
PC print lenses	-----	X2
ABS parts	-----	X1
ABS chromed parts	-----	X1
Decal sheet (chromed)-	-----	X1
Window masks	-----	X1

Silver mirror decal ----- X1




PARTS BAG


LED stopper	-----	X22
Screw 2.3X6mm	-----	X36
Clip	-----	X2
Double-sided tape	-----	X1
O-Ring	-----	X2

PC PARTS

A

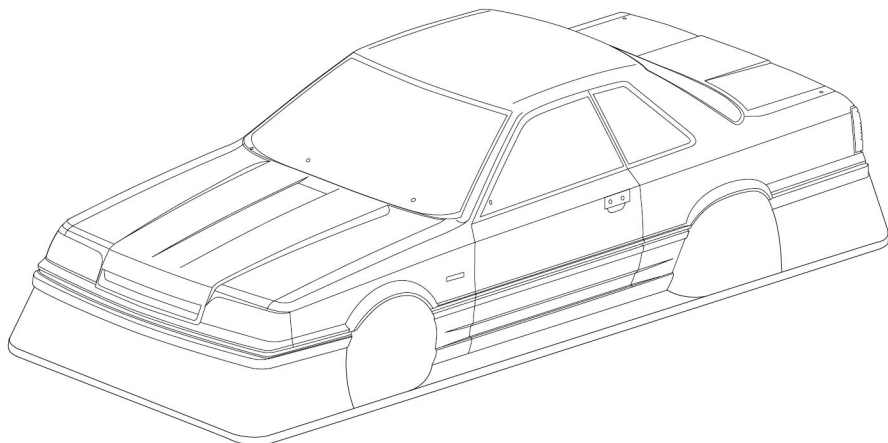


B


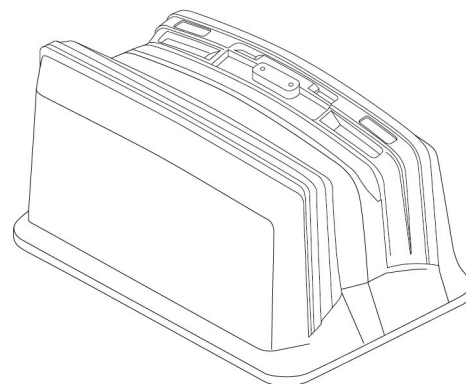


ABS PARTS


C

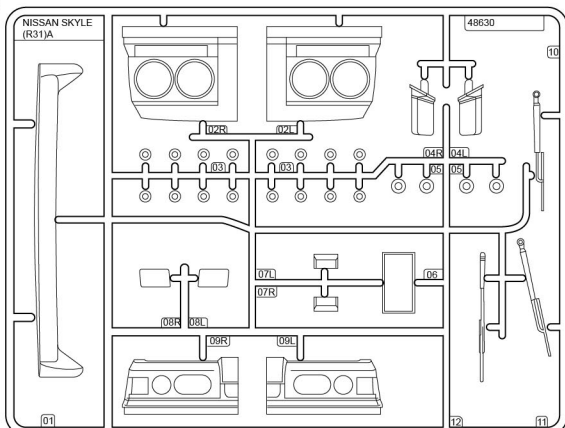

D Chromed parts

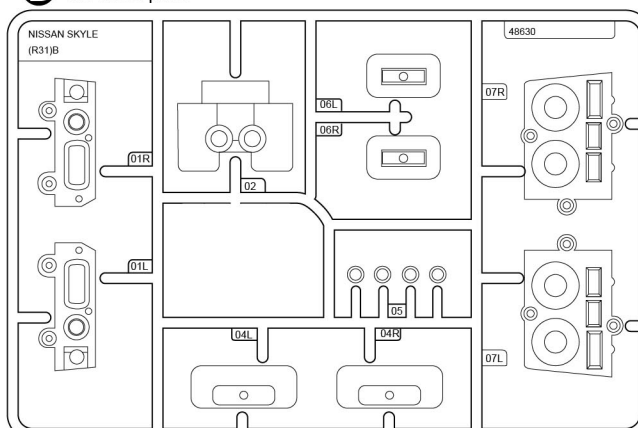



E PC print lenses

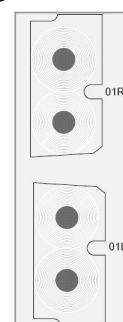


1 Cutting

A

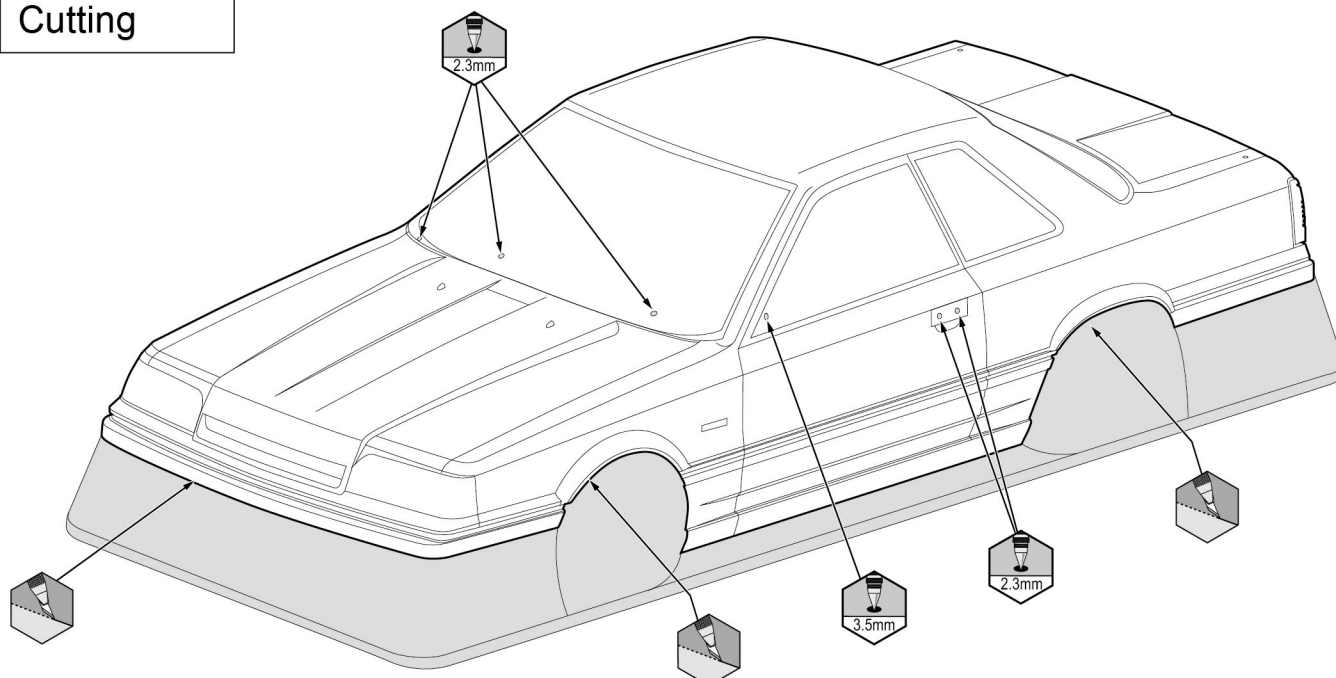

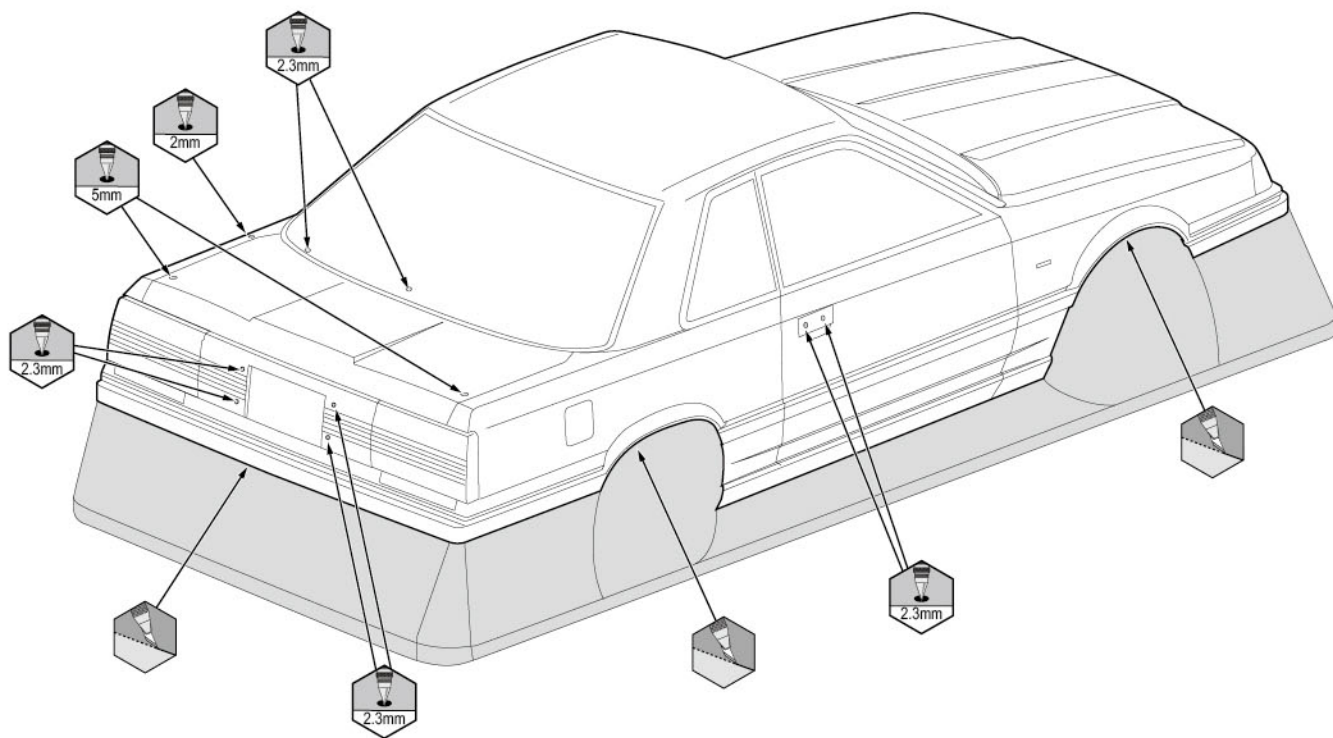


B

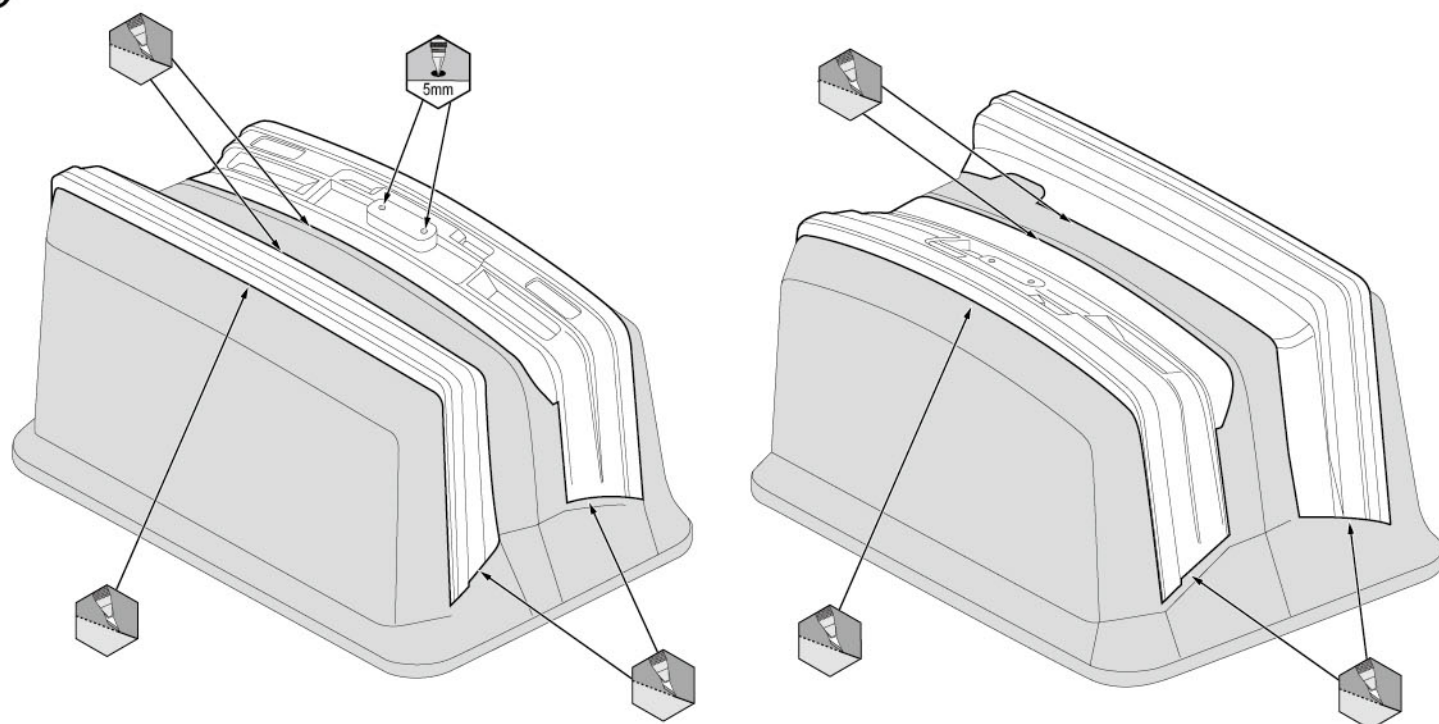




2 Painting

A B


- 1 Before painting, use a neutral detergent to remove any oil residues and dirt.

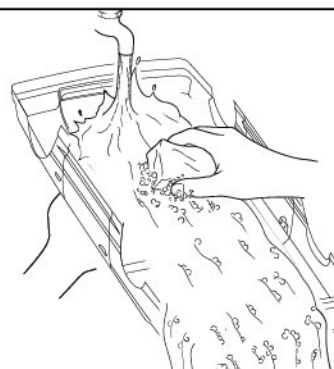

2 Mask the parts from inside.

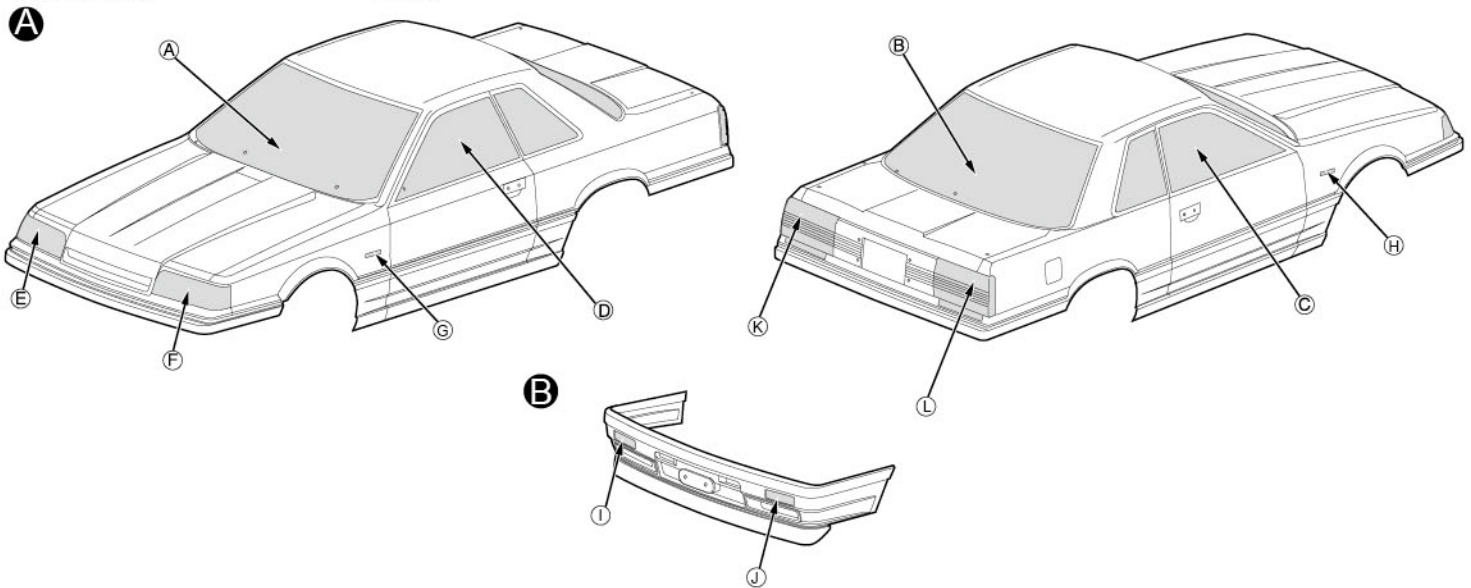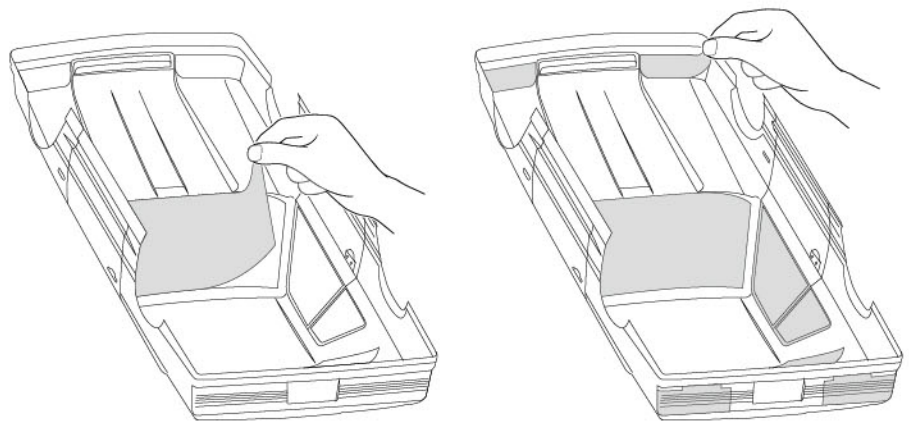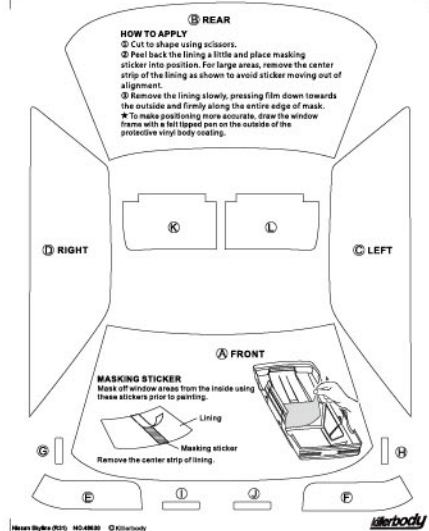


3 Paint A, B from inside.

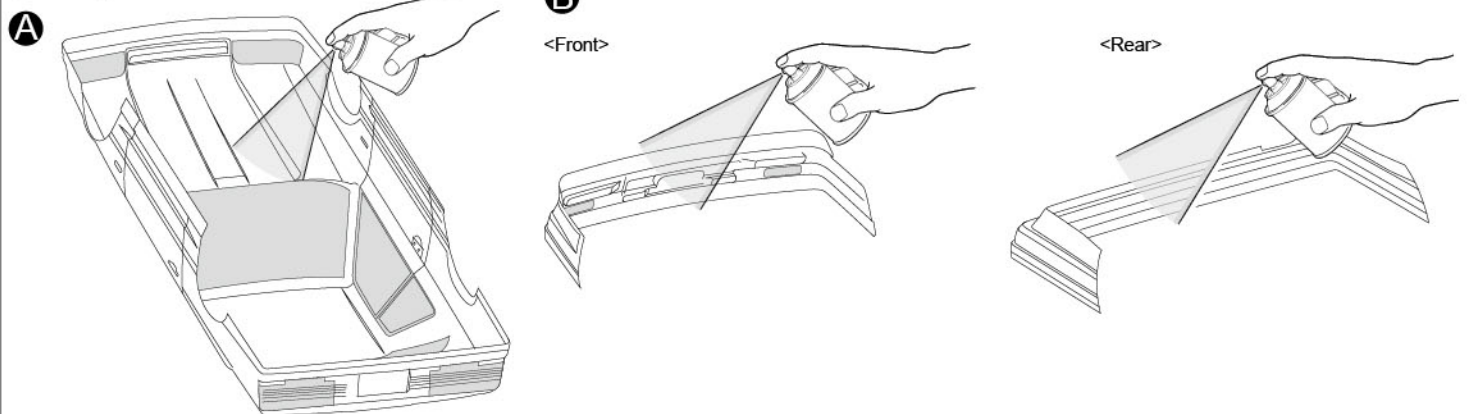



4 Remove the protective film of Part A.

5 Paint black spray color from outside.




6 Remove the protective film from outside.


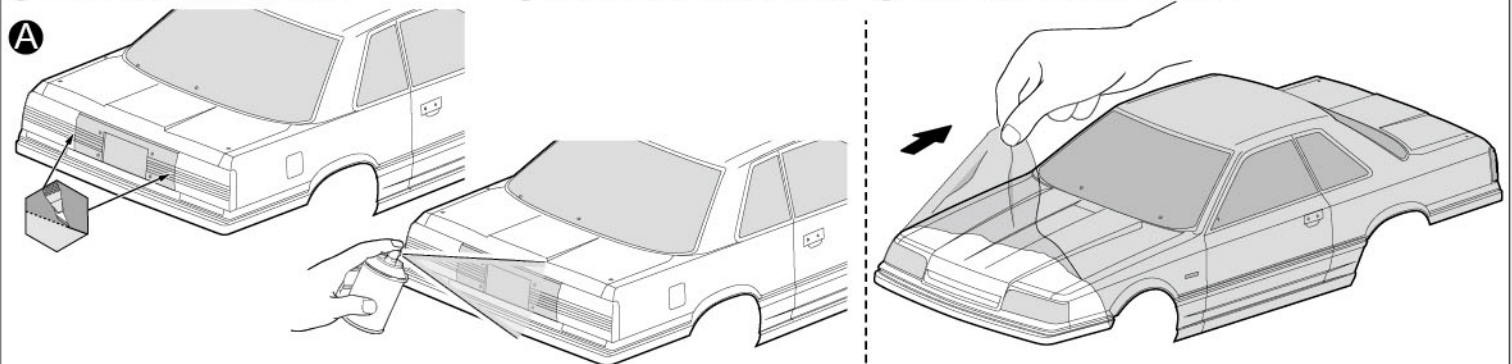


3 Assembling

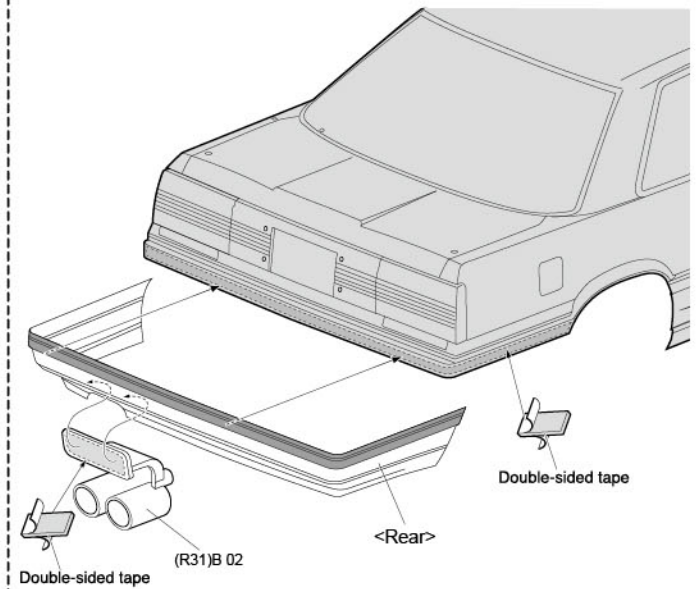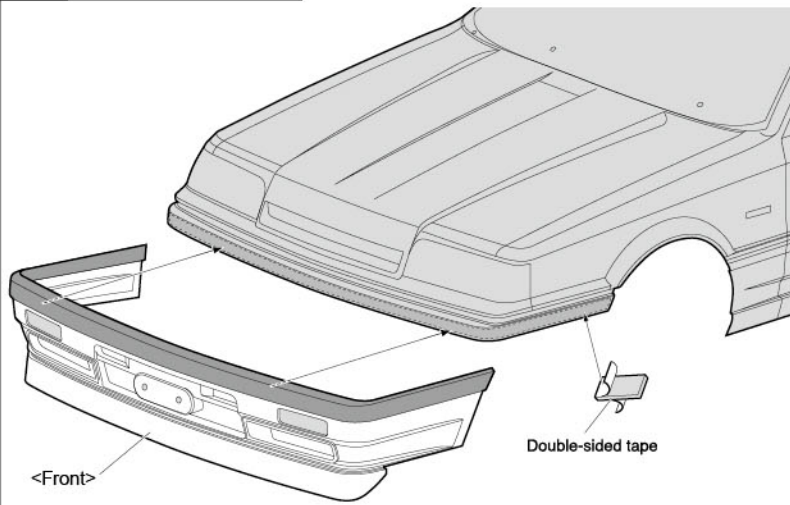




4 Decal

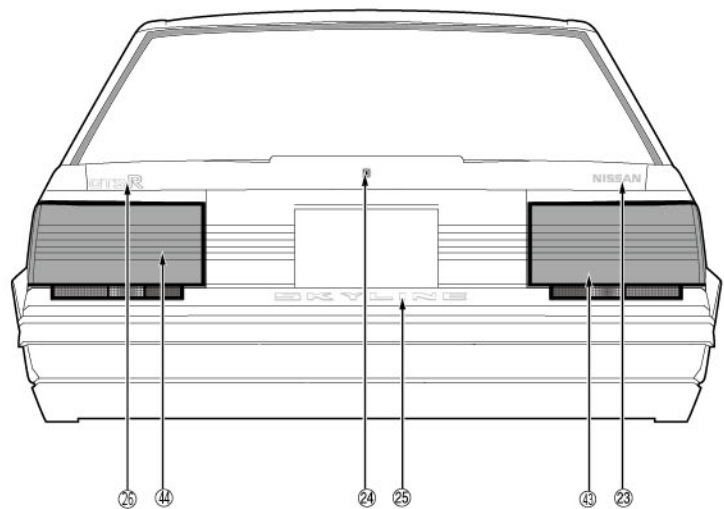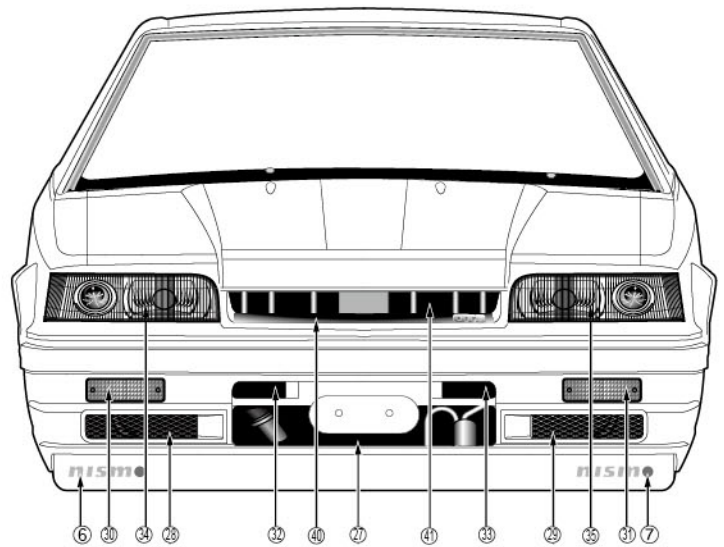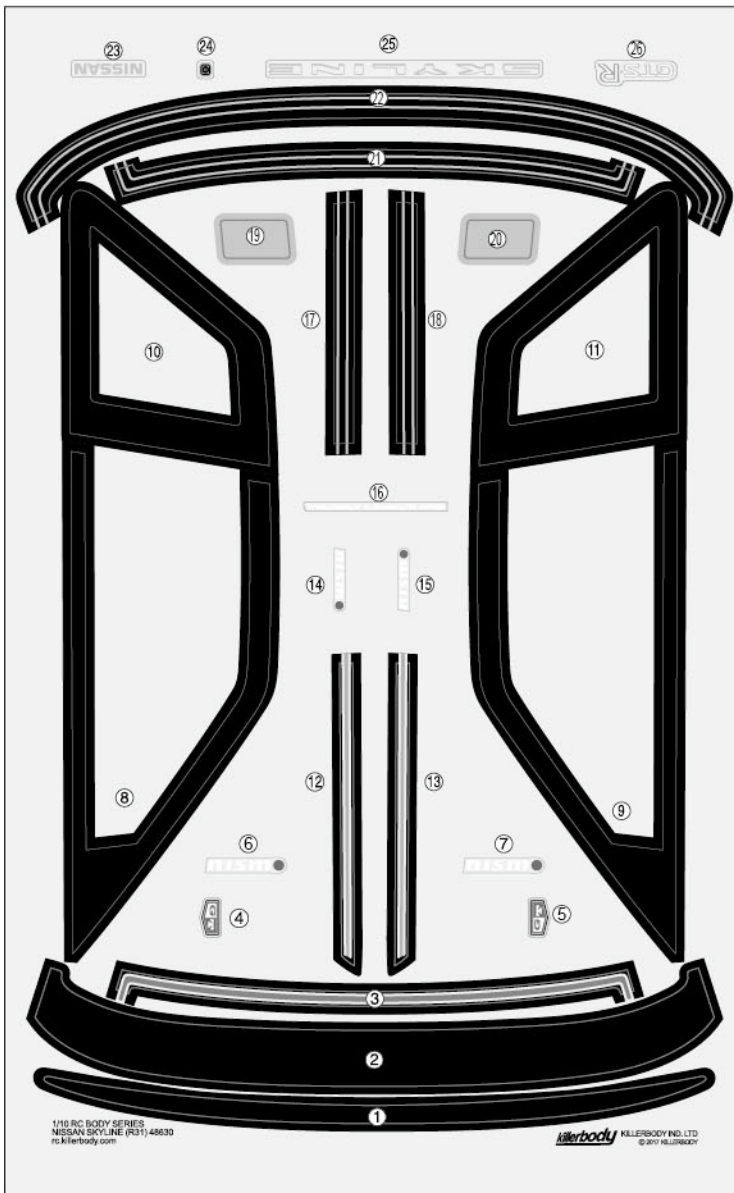

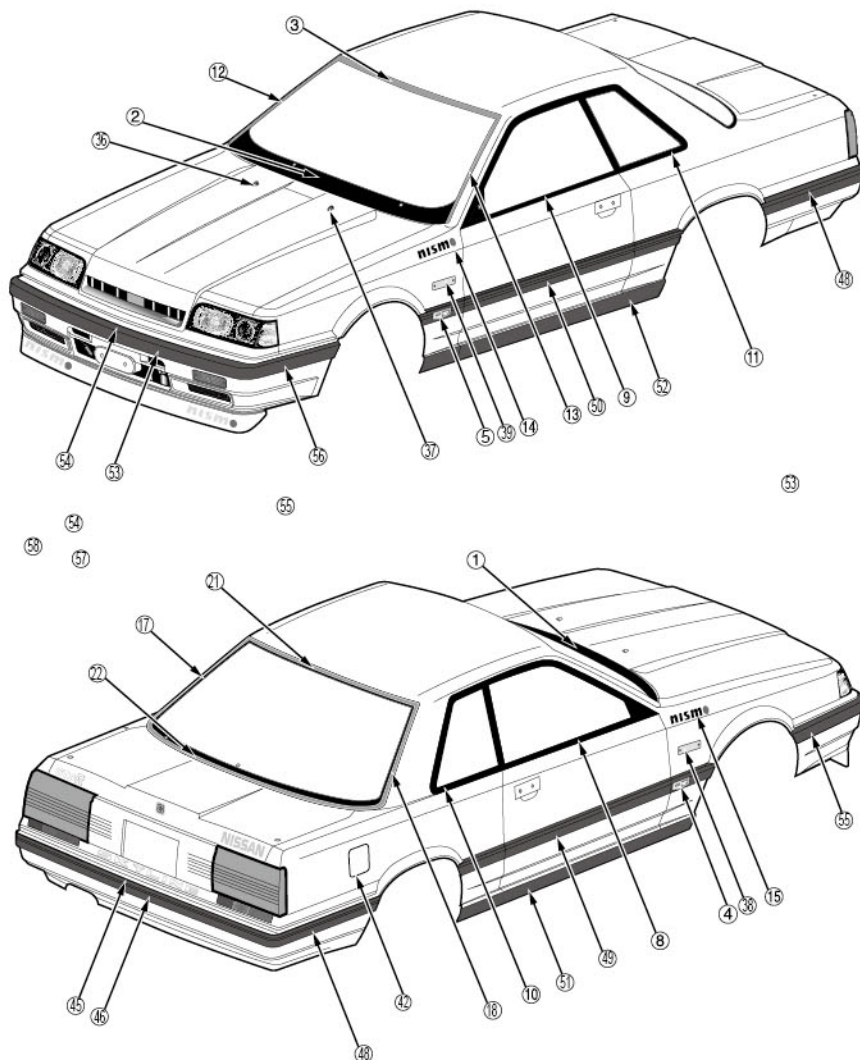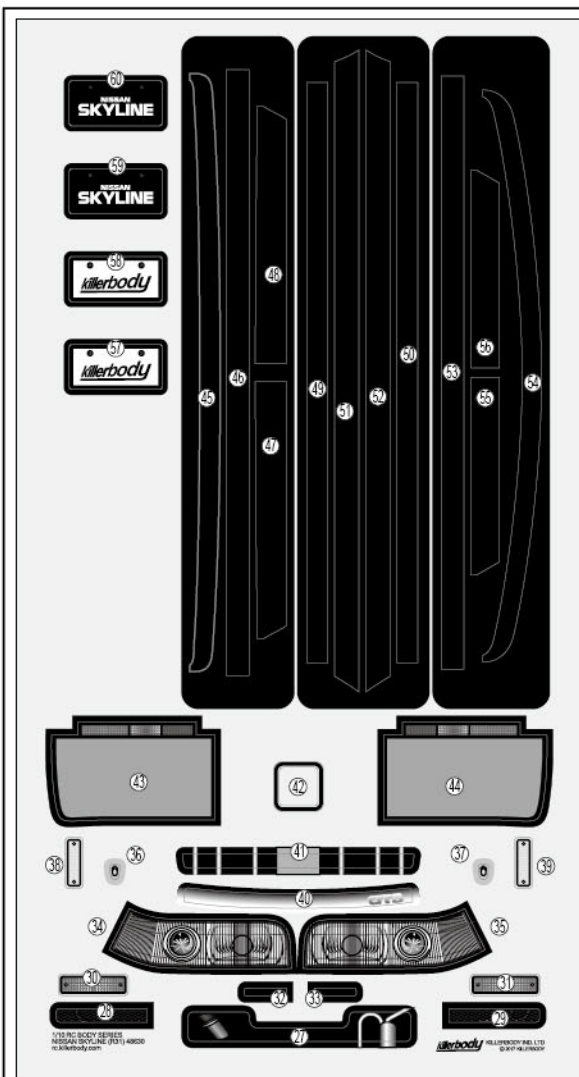


5 Assembling

- Screw 2.3X6mm
X2
- Clip
X2
- O-Ring
X2
- Plastic parts
(R31)A 05
X2
- Plastic parts
(R31)A 03
X4

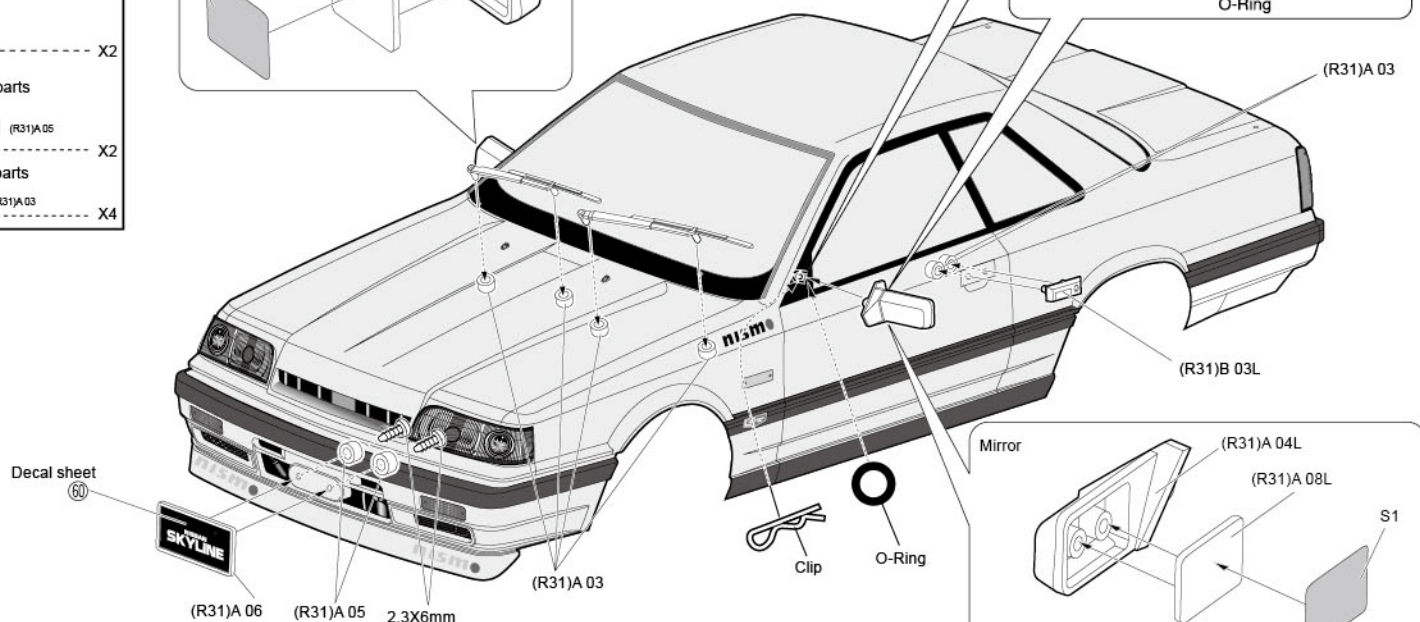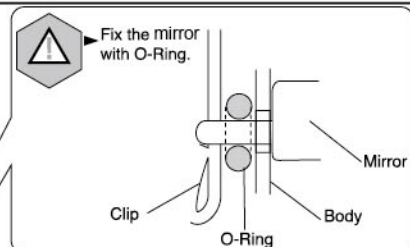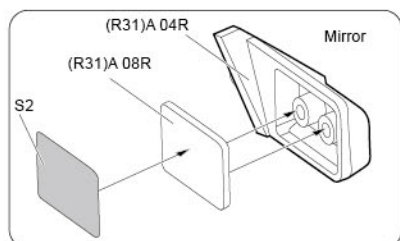

6 Assembling

Screw 2.3X6mm	X2
Plastic parts	
(R31)A 05	X2
Plastic parts	
(R31)A 03	X4

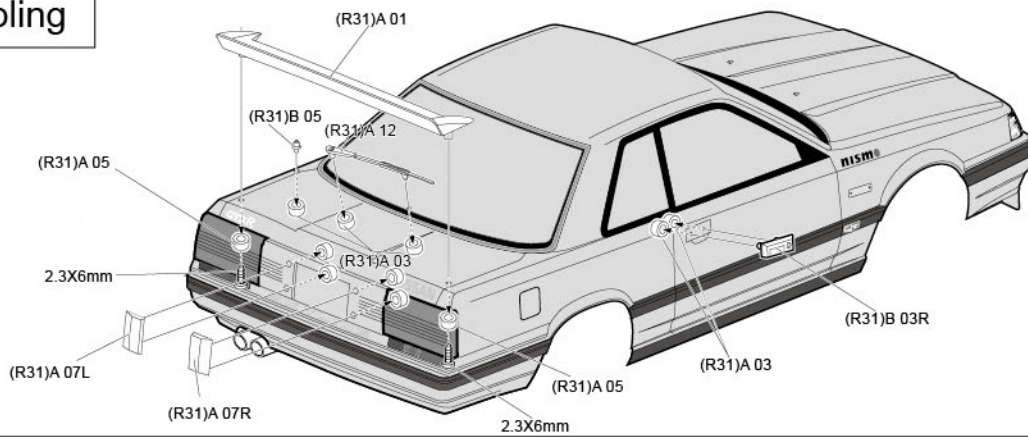


7 Assembling

Screw 2.3X6mm	X32
LED stopper	X22





NO.48686 LED Unit Set w/Control Box 22 LEDS (3mm: 22 LEDS)

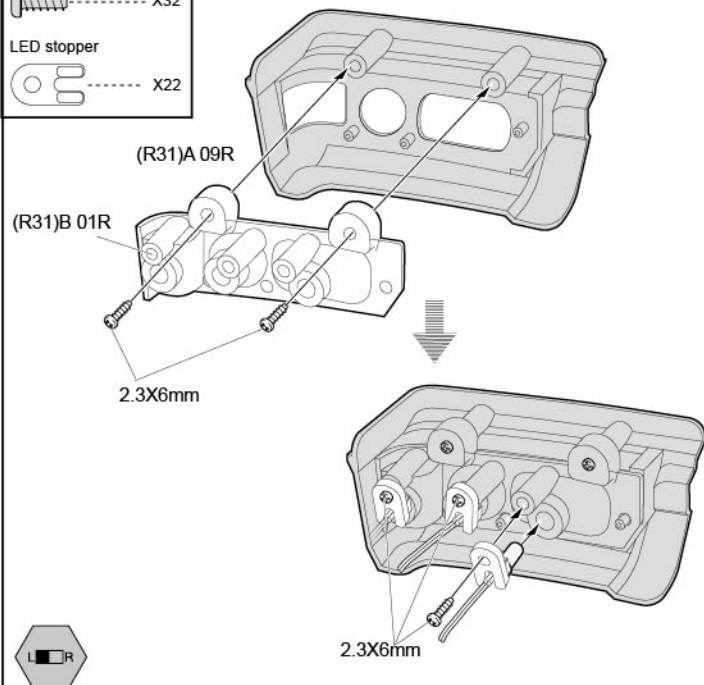


< Front >

< Rear >

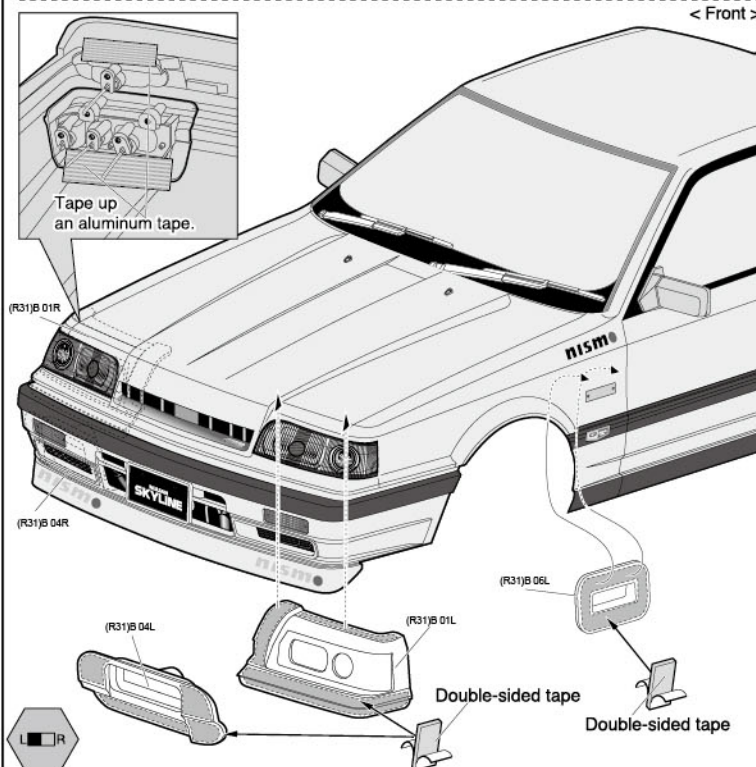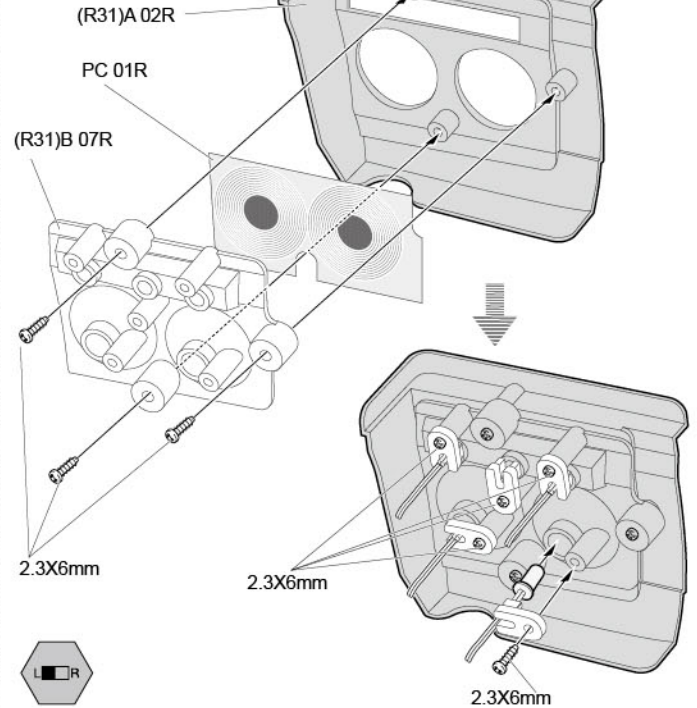

< Front >


< Rear >

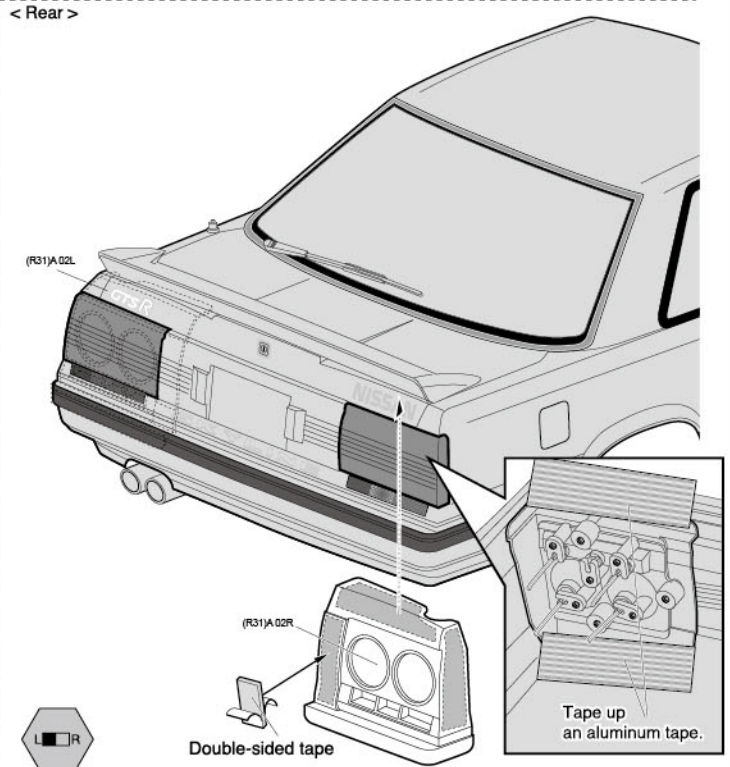


8 Finished



► For safety reasons, always fit the body shell when running your car.

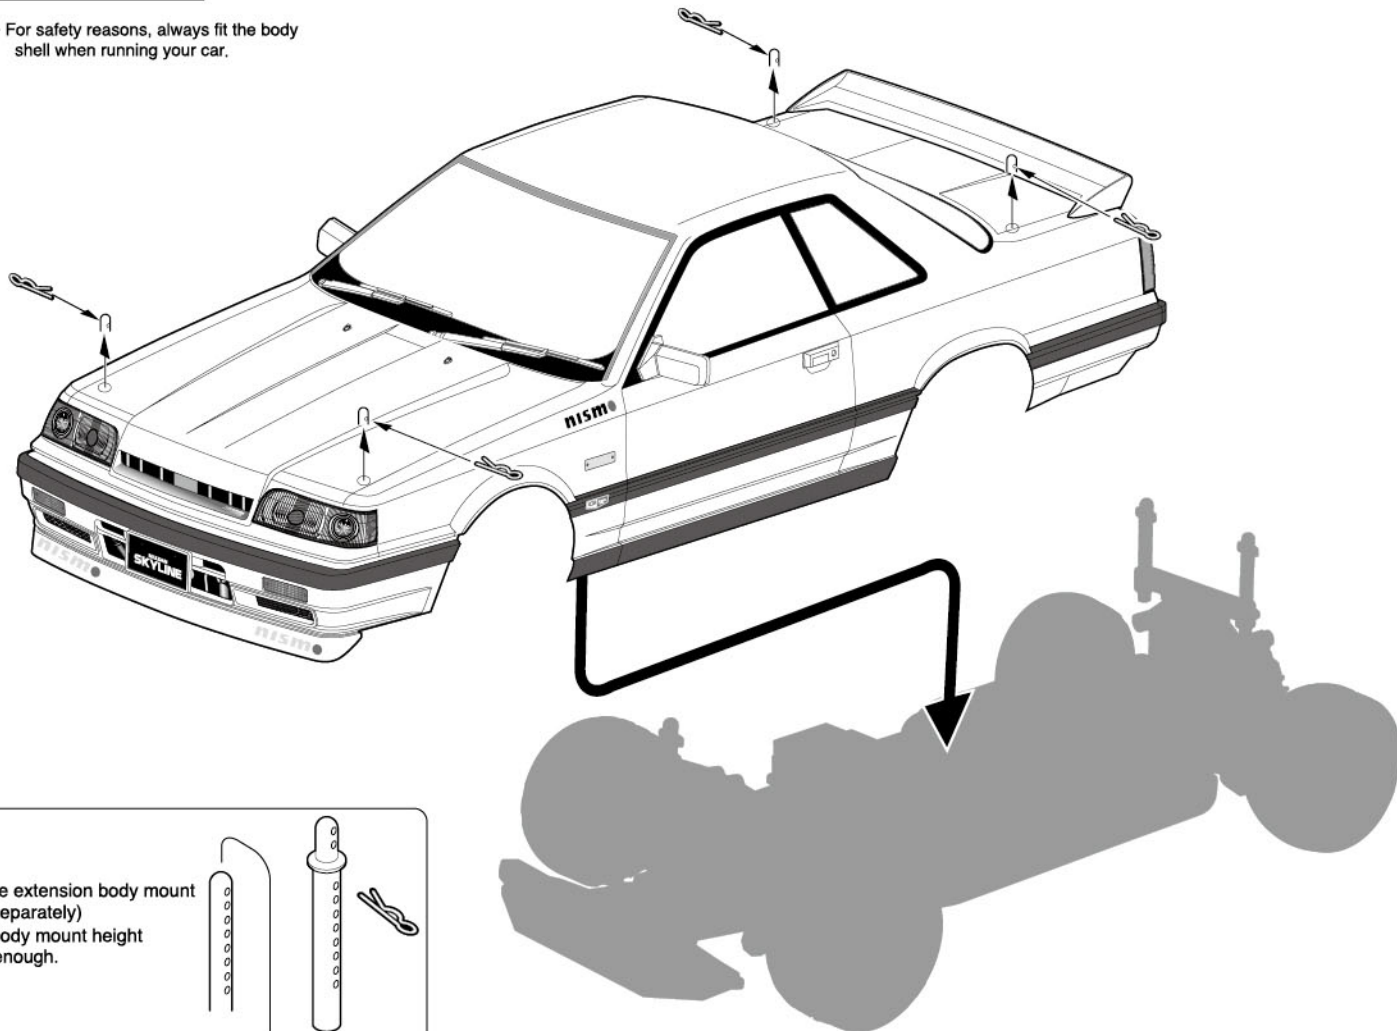

► Use the extension body mount (sold separately) if the body mount height is not enough.

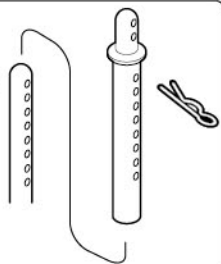

RC.KILLERBODY.COM